FindFace Security

Release 2.2

NtechLab

Contents

_	4 7		•
1	Adm	ninistrator's Guide	3
	1.1	Architecture	3
	1.2	System Requirements	7
	1.3	Licensing Principles	
	1.4	Deploy FindFace Security	
	1.5	First Steps after Deployment	
	1.6	Work with FindFace Security	
	1.7	Advanced Functionality	
	1.8	Maintenance and Troubleshooting	
	1.9	Appendices	
2	Opei	rator's Guide	119
	2.1	Web Interface	119
	2.2	Search Databases	
	2.3	Real-time Face Identification	
	2.4	Dossier	
	2.5	Video Wall	
	2.6	Mobile App	
	2.0	Theoretisps	101
3	Integ	grations	135
	3.1	HTTP API	135
	3.2	Webhooks	136
	2 2	Dortner Integrations	140

FindFace Security is a video-based biometric identification system that automates Security and Hospitality Operations Management. Based on FindFace Enterprise Server, a cutting-edge AI facial recognition technology, FindFace Security is a turnkey solution that you can harness in such areas as retail, banking, social networking, entertainment, sports, event management, dating services, video surveillance, public safety, homeland security, to name a few.

FindFace Security detects and identifies faces of the unwanted persons and VIP guests in video, and notifies security and hospitality managers about their arrival. It can also recognize such facial attributes as gender, age, emotions, glasses, and beard, and display this information in a face recognition event.

The integrated 2D anti-spoofing system ensures that it is a live person in front of a camera and eliminates the possibility of fraud using images on paper or mobile device screens.

Early recognition of the arrival of unwanted persons and VIP guests allows for solving the following problems:

- · Operational losses due to fraudulent activity
- Reputational losses and conflicts
- Better catering to the needs of VIP guests
- Prevention of life-threatening situations

FindFace Security supports the integration of third-party solutions via *HTTP API* and *webhooks* so you can enhance your current system or application with face recognition functionality.

You are going to find this guide most useful if you are an expert of the following kind:

- FindFace Security administrator
- · Security manager
- Hospitality manager
- Maintenance engineer
- System integration engineer who is going to integrate face recognition services into their system.

Contents 1

2 Contents

CHAPTER 1

Administrator's Guide

1.1 Architecture

Though you mostly interact with FindFace Security through its web interface, be sure to take a minute to learn the FindFace Security architecture. This knowledge is essential for the FindFace Security deployment, integration, maintenance and troubleshooting.

In this chapter:


- Architectural Elements
 - Architecture scheme
 - FindFace Core
 - FindFace Security Application Module
- Single- and Multi-Host Deployment
- CPU- and GPU-acceleration

1.1.1 Architectural Elements

FindFace Security consists of the following basic architectural elements:

- FindFace core, a cutting-edge AI-based face recognition technology which can be used as a solitary product FindFace Enterprise Server.
- FindFace Security which is a turnkey application module for FindFace Enterprise Server.

Architecture scheme

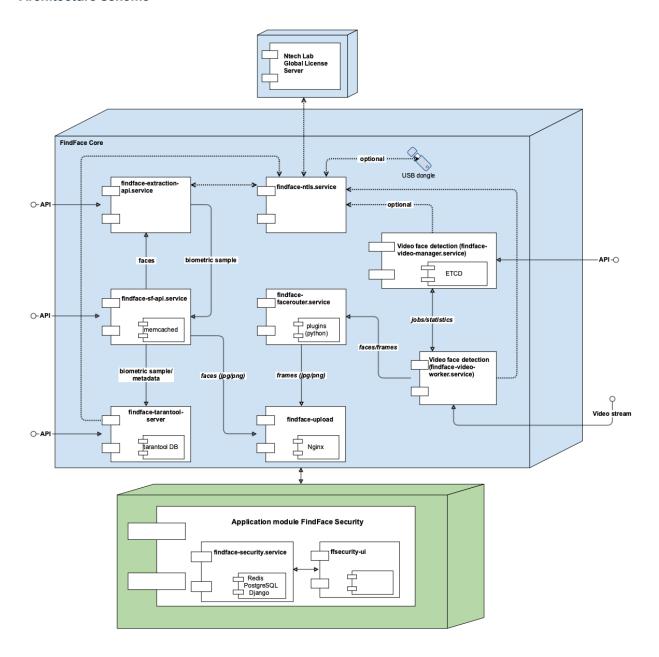

FindFace Core

The FindFace core includes the following components:

Com-	Description	Vendor			
po-					
nent					
findface-	ϵ	Ntech			
I	a-sample (feature vector). CPU- or GPU-acceleration.	Lab			
api		own			
findface-	Service that implements HTTP API for face detection and face recognition.	deploy-			
sf-api		ment			
findface-	Service that provides interaction between the findface-sf-api service and the biomet-				
tarantool	ric database (database that stores face biometric samples) powered by Tarantool.				
server					
findface-	NginX-based web server used as a storage for original images, thumbnails and normalized				
upload	face images.				
findface-	Service used to define processing directives for detected faces. In FindFace Security,				
faceroute	r findface-facerouter functions are performed by findface-security (see Find-				
	Face Security Application Module).				
findface-	Service, part of the video face detection module, that is used for managing the video face				
video-	detection functionality, configuring the video face detector settings and specifying the list of				
manager	, , , , , , , , , , , , , , , , , , , ,				
findface-	Service, part of the video face detection module, which recognizes a face in video and posts				
video-	its normalized image, full frame and metadata (such as the camera ID and detection time) to				
worker	the findface-facerouter service for further processing according to given directives.				
	CPU- or GPU-acceleration.				
findface-	License server which interfaces with the NtechLab Global License Server or a USB dongle				
ntls	to verify the <i>license</i> of your FindFace Security instance.				
Taran-	Third-party software which implements the biometric database that stores extracted biomet-	Taran-			
tool	ric samples (feature vectors) and face identification events. The system data, dossiers, user	tool			
	accounts and camera settings are stored in PostgreSQL (part of the FindFace Security appli-				
	cation module).				
etcd	Third-party software that implements a distributed key-value store for	etcd			
Cica	findface-video-manager. Used as a coordination service in the distributed	otea			
	system, providing the video face detector with fault tolerance.				
NginX	Third-party software which implements the system web interfaces.	nginx			
mem-	Third-party software which implements a distributed memory caching system. Used by	mem-			
cached	findface-extraction-api as a temporary storage for extracted face biometric sam-	cached			
Cacileu		cached			
	ples before they are written to the biometric database powered by Tarantool.				

FindFace Security Application Module

The FindFace Security application module includes the following components:

1.1. Architecture 5

Com-	Description	Vendor
po-		
nent		
findfac	eComponent that serves as a gateway to the FindFace core. Provides interaction between the	Ntech
securit	y FindFace Core and the web interface, the system functioning as a whole, HTTP and web socket,	Lab
	biometric database update, webhooks.	own
ffsecur	it Main web interface that is used to interact with FindFace Security. Allows you to work with	deploy-
ui	face identification events, search for faces, manage cameras, users, dossiers, and watch lists.	ment
Post-	Third party software which implements the main system database that stores detailed and cate-	Post-
greSQI	L gorized dossiers on particular persons, as well as data for internal use such as user accounts and	greSQL
	camera settings. The face biometric data and face identification events are stored in Tarantool	
	(part of the FindFace core).	
Re-	Third-party software which implements a message broker inside findface-security.	Redis
dis		
Djange	Third-party software which implements a web framework for the FindFace Security web inter-	Django
	face.	

See also:

Components in Depth

1.1.2 Single- and Multi-Host Deployment

You can deploy FindFace Security on a single host or in a cluster environment. If you opt for the latter, we offer you one of the following deployment schemes:

- Deploy FindFace Security standalone and distribute additional findface-video-worker components across multiple hosts.
- Distribute the FindFace Security components across multiple hosts. If necessary, set up load balancing.

1.1.3 CPU- and GPU-acceleration

The findface-extraction-api and findface-video-worker services can be either CPU- or GPU-based. During installation from the developer-friendly *installer*, you will have an opportunity to choose the acceleration type you need.

If you opt to install FindFace Security from the *repository package*, deploy the findface-extraction-api and findface-video-worker packages on a CPU-based server, and the findface-extraction-api-gpu and/or findface-video-worker-gpu packages on a GPU-based server.

Important: Refer to *System Requirements* when choosing hardware configuration.

Important: If the resolution of a camera(s) in use is more than 1280x720px, it is strongly recommended to use the GPU-accelerated package findface-video-worker-gpu.

Important: The Video Wall will be fully functional only upon a GPU-based configuration.

Important: The *face liveness detection* can be enabled only on the GPU-accelerated video face detector findface-video-worker-gpu.

1.2 System Requirements

To calculate the FindFace Security host(s) characteristics, use the requirements provided in this chapter.

Tip: Be sure to learn about the FindFace Security *architecture* first.

In this chapter:

- Basic Configuration
- Benchmark Results
 - Testing Setup
 - Resource Consumption: findface-extraction-api and findface-extraction-api-gpu
 - Performance: findface-extraction-api and findface-extraction-api-gpu
 - Performance: findface-video-worker and findface-video-worker-gpu
- Examples of Hardware Configuration
 - CPU-based Server
 - GPU-based Server

1.2.1 Basic Configuration

Important: If the resolution of a camera(s) in use is more than 1280x720px, it is strongly recommended to use the GPU-accelerated package findface-video-worker-gpu.

Important: The *Video Wall* will be functional only upon a GPU-based configuration.

Important: The *face liveness detection* can be enabled only on the GPU-accelerated video face detector findface-video-worker-gpu.

	Minimum	Recommended
CPU	Intel Core i5 CPU with 4 physical cores 2.8 GHz	Intel Xeon E5v3 with 6 physical
		cores, or higher or similar CPU
	The own needs of FindFace Security require 2 cores $HT > 2.5$ GHz.	The characteristics also depend on
	the number of cameras in use. A single camera 720p@25FPS requir	es 2 cores >2.5 GHz. AVX support.
GPU	Nvidia Geforce® GTX 1050 Ti with 4Gb RAM (only	Nvidia Geforce® GTX 1080+ with
(op-	for running findface-extraction-api gpu-	8+Gb RAM
tional)	package with elderberry_160, not enough for	
	findface-video-worker-gpu).	
	Supported series: GeForce (from Pascal architecture), Tesla (from P	ascal architecture and Volta v100)
RAM	10 Gb	16+ Gb
	The own needs of FindFace Security require 8 Gb. The RAM consu	mption also depends on the number
	of cameras in use. A single camera 720p@25FPS requires 2 GB RA	M
HDD	16 Gb	16+ Gb
	The own needs of the operating system and FindFace Security require	re 15 GB. The total volume is subject
	to the required depth of the event archive in the database and in the l	og, at the rate of 1.5 Mb per 1 event
Oper-	Ubuntu 16.04 x64 only	
ating		
sys-		
tem		

Tip: For more accurate hardware selection, consult the FindFace Security resource consumption and performance *benchmark results*.

1.2.2 Benchmark Results

Here you can see the FindFace Security resource consumption and performance benchmark results. Use these data to select your hardware configuration.

Note: RAM usage and performance may slightly vary from test to test.

Warning: Strictly not recommended to use face/elderberry_160 for work.

Testing Setup

Package versions:

- findface-extraction-api-cpu 2.6.999.1910+261.gebb8df6
- findface-extraction-api-gpu
- findface-video-worker-cpu 2.6.999.1910+261.gebb8df6
- findface-video-worker-gpu
- findface-tarantool-server 2.6.999.1910+261.gebb8df6

Hardware:

• Processor: Intel Core i5-8400 @ 3.60GHz (6 Cores)

• Motherboard: ASUS PRIME H370M-PLUS

• Memory: 2 x 8192 MB DDR4-2400MHz

• Graphics: Gigabyte NVIDIA GeForce GTX 1060 6GB

Software:

• OS: Ubuntu 16.04, Kernel: 4.15.0-29-generic (x86_64)

• Screen Resolution: 1920x1200

RAM consumption is calculated by:

• CPU: htop;

• GPU: nvidia-smi

CPU performance:

```
sysbench 0.4.12: multi-threaded system evaluation benchmark
Running the test with following options:
Number of threads: 1
Doing CPU performance benchmark
Threads started!
Done.
Maximum prime number checked in CPU test: 10000
Test execution summary:
   total time:
                                        9.1128s
   total number of events:
   total time taken by event execution: 9.1112
   per-request statistics:
                                               0.82ms
        min:
                                               0.91ms
        avg:
                                              1.47ms
        max:
        approx. 95 percentile:
                                              1.02ms
Threads fairness:
                                10000.0000/0.00
   events (avg/stddev):
   execution time (avg/stddev): 9.1112/0.00
```

GPU performance:

```
Unigine Heaven 4.0:
   pts/unigine-heaven-1.6.4 [Resolution: 1920 x 1080 - Mode: Windowed - Renderer:..
→OpenGL1
   Test 1 of 2
                                 3
   Estimated Trial Run Count:
   Estimated Test Run-Time:
                                15 Minutes
   Estimated Time To Completion: 29 Minutes
       Started Run 1 @ 17:54:37
       Started Run 2 @ 17:59:15
       Started Run 3 @ 18:03:52 [Std. Dev: 0.29%]
   Test Results:
       86.6473
       86.1475
       86.4553
   Average: 86.42 Frames Per Second
Unigine Heaven 4.0:
   pts/unigine-heaven-1.6.4 [Resolution: 1920 x 1080 - Mode: Fullscreen - Renderer:

OpenGL]
   Test 2 of 2
   Estimated Trial Run Count:
   Estimated Time To Completion: 15 Minutes
       Started Run 1 @ 18:08:33
       Started Run 2 @ 18:13:09
       Started Run 3 @ 18:17:45 [Std. Dev: 1.37%]
   Test Results:
       87.7017
       89.5186
       90.023
   Average: 89.08 Frames Per Second
```

Resource Consumption: findface-extraction-api and findface-extraction-api-gpu

RAM usage: findface-extraction-api

Model	# instances	RAM, MB	# instances	RAM, MB	# instances	RAM, MB
face/elderberry	_ 5 76.cpu	3730	2	7450	3	11000
face/elderberry	_160.cpu	1590		2800		4050
face/elderberry	_576.cpu	5568		10800		•
+ features						
(faceattr/age.v1	.cpu,					
faceattr/beard.v	0.cpu,					
faceattr/emotio	ns.v1.cpu,					
faceattr/gender.	v2.cpu,					
faceattr/glasses	3.v0.cpu)					
face/elderberry	_160.cpu	3473		6250		9400
+ features						
(faceattr/age.v1	.cpu,					
faceattr/beard.v	0.cpu,					
faceattr/emotio	ns.v1.cpu,					
faceattr/gender.	v2.cpu,					
faceattr/glasses	3.v0.cpu)					
Features only		2270		3900		5800
(faceattr/age.v1	.cpu,					
faceattr/beard.v	0.cpu,					
faceattr/emotio	ns.v1.cpu,					
faceattr/gender.	v2.cpu,					
faceattr/glasses	3.v0.cpu)					

RAM usage: findface-extraction-api-gpu

Note: findface-extraction-api-gpu allows only 1 model instance.

Model	RAM, MB
face/elderberry_576.gpu	~2200 (up to 4.5 Gb
	on initialization)
face/elderberry_160.gpu	~850 (up to 1.8 Gb on
	initialization)
face/elderberry_576.gpu + features (faceattr/age.v1.gpu, faceattr/beard.v0.gpu,	~3100 (up to 6.3 Gb
faceattr/emotions.v1.gpu, faceattr/gender.v2.gpu, faceattr/glasses3.v0.gpu)	on initialization)
face/elderberry_160.gpu + features (faceattr/age.v1.gpu, faceattr/beard.v0.gpu,	~1871 (up to 4 Gb on
faceattr/emotions.v1.gpu, faceattr/gender.v2.gpu, faceattr/glasses3.v0.gpu)	initialization)
Features only (faceattr/age.v1.gpu, faceattr/beard.v0.gpu, faceattr/emotions.v1.gpu,	1200
faceattr/gender.v2.gpu, faceattr/glasses3.v0.gpu)	

 $\begin{tabular}{ll} \textbf{Performance:} & \texttt{findface-extraction-api-and} & \texttt{findface-extraction-api-gpu} \\ \end{tabular}$

Speed: findface-extraction-api

Model	Time, ms			
	(i5-8400)			
face/elderberry_576.cpu	620			
face/elderberry_160.cpu	350			
face/elderberry_576.cpu + features (faceattr/age.v1.cpu, faceattr/beard.v0.cpu,	655			
faceattr/emotions.v1.cpu, faceattr/gender.v2.cpu, faceattr/glasses3.v0.cpu)				
face/elderberry_160.cpu + features (faceattr/age.v1.cpu, faceattr/beard.v0.cpu,	380			
faceattr/emotions.v1.cpu, faceattr/gender.v2.cpu, faceattr/glasses3.v0.cpu)				
Features only (faceattr/age.v1.cpu, faceattr/beard.v0.cpu, faceattr/emotions.v1.cpu,	300			
faceattr/gender.v2.cpu, faceattr/glasses3.v0.cpu)				

Speed: findface-extraction-api-gpu

Model	Time, ms			
	(1060TI)			
face/elderberry_576.gpu	240			
face/elderberry_160.gpu	225			
face/elderberry_576.gpu + features (faceattr/age.v1.gpu, faceattr/beard.v0.gpu	, 260			
faceattr/emotions.v1.gpu, faceattr/gender.v2.gpu, faceattr/glasses3.v0.gpu)				
face/elderberry_160.gpu + features (faceattr/age.v1.gpu, faceattr/beard.v0.gpu	, 235			
faceattr/emotions.v1.gpu, faceattr/gender.v2.gpu, faceattr/glasses3.v0.gpu)				

Performance: findface-video-worker and findface-video-worker-gpu

CPU/RAM consumption and speed: findface-video-worker

Stream		RAM,	CPU utilization,% (i5-8400 6	Processing speed, FPS* (i5-
		MB	cores)	8400)
1x 720p25FPS		370	230	62
2x 720p25FPS		755	500	56
3x 720p25FPS		1040	580	45
4x 720p25FPS		1437	600	36
5x 720p25FPS		1900	600	24
8x 720p25FPS		2650	600	18
1x 1080p25FPS		502	250	41
2x 1080p25FPS		1023	508	37
3x 1080p25FPS		1529	590	30
4x 1080p25FPS		2031	594	23
1х 720p25FPS н	- 1x	890	453	38
1080p25FPS				
2х 720p25FPS н	- 2x	1750	590	21
1080p25FPS				

Important: If video processing speed is less than the number of FPS in video, it means that the system is running low on resources and the lack of resources causes the video face detector to drop frames. Avoid this situation as it can lead to missing out on faces, instability and potential failures.

To check your resource consumption, execute:

```
sudo journalctl -f -a -u findface-video-worker | grep dropped
```

The following lines indicate that the system has less resources than necessary:

```
findface-video-worker[28882]: [2] 2 frames dropped! findface-video-worker[28882]: [1] 6 frames dropped!
```

In this case, consider changing component settings or hardware configuration.

GPU RAM consumption and speed: findface-video-worker-gpu

Stream	GPU RAM, MB	Processing speed, FPS* (1060TI)
Without streams	600	•
1x 720p25FPS	656	254
2x 720p25FPS	738	126
4x 720p25FPS	858	63
8x 720p25FPS	1117	30
1x 1080p25FPS	735	202
2x 1080p25FPS	935	96
4x 1080p25FPS	1185	48
8x 1080p25FPS	2650	48
1x 720p25FPS + 1x 1080p25FPS	803	453
2x 720p25FPS + 2x 1080p25FPS	1100	54
4x 720p25FPS + 4x 1080p25FPS	1500	26
8x 720p25FPS + 8x 1080p25FPS	2300	11

Important: If video processing speed is less than the number of FPS in video, it means that the system is running low on resources and the lack of resources causes the video card to accumulate frames in its memory. Avoid this situation as it can lead to instability and potential failures.

To view the current processing speed, execute the following command on the findface-video-manager host console:

In the response, you will find each video stream processing speed. For example, enough amount of resources when processing 7 video streams with characteristics h264 (High) ([27][0][0][0] / 0x001B), yuvj420p(pc, bt709), 1920x1080, 25 fps, 25 tbr, 90k tbn, 180k tbc will result in the following response:

```
id=10 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.189745
id=5 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.189854
id=6 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.589714
id=3 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.189857
id=4 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.189857
id=7 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.389784
id=9 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=27.189857
```

Lack of resources when processing 8 video streams with the same characteristics will give FPS (processing speed) less than the video's 25 fps:

```
id=8 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.772333
id=10 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.772415
id=5 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.772339
id=6 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.372803
id=3 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.772339
id=4 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=23.772339
id=7 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.775822
id=9 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=22.573729
```

Even smaller values will be registered when processing 10 video streams with the same characteristics:

```
id=7 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380642
id=9 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380642
id=2 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380646
id=8 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380642
id=10 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=9.984919e-05
id=5 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380642
id=6 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380642
id=1 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.380651
id=3 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=20.180836
id=4 url=http://restreamer.int.ntl/hls/openspace.m3u8 FPS=19.581406
```

Important: If findface-video-worker-gpu processes video streams of equal FPS, the number of processed streams doesn't severely affect the GPU memory consumption, as all the streams are processed by the same worker. On the other hand, if findface-video-worker-gpu processes video streams of different FPS, it severely increases the memory consumption as different streams have to be processed by different workers.

1.2.3 Examples of Hardware Configuration

Important: The exemplary hardware configurations in this section are only for reference. Do not use these data to select your production instance configuration. To select the optimal configuration, ask advice from our experts by support@ntechlab.com.

Resource consumption may vary depending on the following factors:

- The number of HTTP requests per second, sent to findface-extraction-api (depends on the number of faces in a camera field of view, the number of user search requests, etc.).
- Video quality (video interference, colourful video background take up more resources).
- Motion intensity in video.

The following examples are given for standard component configuration.

Important: Changes in component settings may result in significant changes in resource consumption.

CPU-based Server

Cam-	CPU	RAM,	Extraction
eras		GB	
1x720p2	5FRS l Core i5 - 6400 (4 cores 2700MHz)	8	elderberry_160 + features* model_instances
			= 1 or elderberry_576 model_instances = 1
2x720p2	5 Fires: Intel Core i7 - 6700 (4 core 3400MHz);	12	elderberry_160 + features* model_instances
	recommended: Intel Core i7 - 6850K (6 cores		= 2 or elderberry_576 + features*
	3600MHz)		$model_instances = 2$
4x720p2	5 Fires: Intel Core i7 - 8700K (6 cores 3700MHz);	16	elderberry_576 + features* model_instances
	recommended: Intel Core i9 - 9900K (8 cores		= 2 or elderberry_576 model_instances = 3
	3600MHz)		
1x1080p	25HRS Intel Core i7 - 6700 (4 cores 3400MHz);	32	elderberry_576 + features* model_instances
	recommended: Intel Core i7 - 6850K (6 core		= 1 or elderberry_576 model_instances = 2
	3600MHz)		

GPU-based Server

Cam eras	- CPU	RAM GB	, GPU	Installa- tion	Extraction	Vide
	Дильнк Sore i5 - 6400 (4 cores 2700MHz)	8	nVidia GeForce GTX1060 6Gb	extraction- api on CPU video- worker on GPU	elderberry_160 + features* model_instances = 1 or elder- berry_576.cpu model_instances = 1	ba- sic
				extraction- api on GPU video- worker on CPU	basic	ba- sic
2x720	마 加해RS ore i5 - 6400 (4 cores 2700MHz)	12	nVidia GeForce GTX1060 6Gb	extraction- api on CPU video- worker on GPU	elderberry_160 + features* model_instances = 2 or el- derberry_576.cpu + features model_instances = 1 or elder- berry_576.cpu model_instances = 2	ba- sic
			·	extraction- api on GPU video- worker on CPU	basic	ba- sic
4x72	្យា ជាភូអាស្ទ ore i5 - 8400 (4 cores 2800MHz)	16	nVidia GeForce GTX1060 6Gb	extraction- api on CPU video- worker on GPU	elderberry_576.cpu + features* model_instances = 2	ba- sic
	기계하다RSore i5 - 8400 (4 cores 2800MHz) Intel Core i7 - 6700 (4 cores 3400MHz)	16	nVidia GeForce GTX1060 TI 6Gb	extraction- api on CPU video- worker on GPU	elderberry_576.cpu + features* model_instances = 2	ba- sic
16x7	20p2sFPeSre i7 - 6700 (4 cores 3400MHz) Intel Core i7 - 8700K (6 cores 3700MHz) Intel Core i9 - 9900K (8 cores 3600MHz)	32	2x nVidia GeForce GTX1060 TI 6Gb	extraction- api on CPU video- worker on GPU	elderberry_576.cpu + features* model_instances = 4 or	ba- sic

1.3 Licensing Principles

FindFace Security is licensed by the following criteria:

1. Number of extracted biometric samples and biometric samples under monitoring (in watch lists). In the course

of the FindFace Security functioning, biometric samples are extracted from faces detected in video, and from dossier photos. Overall, the licensing scheme is as follows:

- Events: 1 event of video face detection = 1 face in a license.
- Dossier: 1 photo in a dossier = 2 faces in a license (face extraction + face monitoring).
- 2. Number of cameras in use.
- 3. Number of the findface-extraction-api model instances in use.
- 4. Gender recognition.
- 5. Age recognition.
- 6. Emotions recognition.
- 7. Fast index.
- 8. Partner integration.

You can choose between the online and on-premise licensing:

- The online licensing requires a stable internet connection. Upon being disconnected from the internet, the system will continue working off-grid for about 1 hour.
- The on-premise licensing requires a USB port on the physical server with the findface-ntls component (license server in the *FindFace core*), which will be used to plug in a provided USB dongle.

To provide the system functioning, one findface-ntls instance should be enough. If for some reason your system requires more license servers, contact your Ntech Lab manager beforehand to prevent your system from being blocked.

See also:

Licensing

1.4 Deploy FindFace Security

For your convenience, we offer you several deployment options:

- Deploy from a console installer
- Deploy step-by-step from an APT repository

1.4.1 Deploy from Console Installer

To deploy FindFace Security, use a developer-friendly console installer.

Tip: Before deployment, be sure to consult the *system requirements*.

Important: The FindFace Security host must have a static IP address in order to be running successfully. To make the IP address static, open the etc/network/interfaces file and modify the current primary network interface entry as shown in the case study below. Be sure to substitute the suggested addresses with the actual ones, subject to your network specification.

```
sudo vi /etc/network/interfaces

iface eth0 inet static
address 192.168.112.144
netmask 255.255.255.0
gateway 192.168.112.254
dns-nameservers 192.168.112.254
```

Restart networking.

```
sudo service networking restart
```

Be sure to edit the etc/network/interfaces file with extreme care. Please refer to the Ubuntu guide on networking before proceeding.

To deploy FindFace Security from the console installer, do the following:

- 1. Download the installer file findface-security-2.2.0-server-3.2.0.run.
- 2. Put the .run file into some directory on the designated host (for example, /home/username).
- 3. From this directory, make the .run file executable.

```
chmod +x findface-security-2.2.0-server-3.2.0.run
```

4. Execute the .run file.

```
sudo ./findface-security-2.2.0-server-3.2.0.run
```

The installer will ask you a few questions and perform several automated checks to ensure that the host meets the system requirements. Fill out the prompts appropriately once requested. The questions are the following:

- 1. Product to install: FindFace Security.
- 2. Installation type:
 - 1: install FindFace Security standalone.
 - 2: install FindFace Security and configure it to interact with additional remote findface-video-worker instances.

Tip: To install only findface-video-worker on a host, refer to *Additional findface-video-worker deployment on remote hosts*.

• 3: install only the apt repository that can be further used for the *step-by-step deployment*.

Important: This installation type doesn't provide installation of neural network models essential for the findface-extraction-api functioning. Be sure to *manually install* them on the host(s) with findface-extraction-api.

• 4: fully customized installation.

Important: Be sure to *manually install* neural network models on the host(s) with findface-extraction-api.

- 3. Type of findface-video-worker package: CPU or GPU.
- 4. Type of findface-extraction-api package: CPU or GPU.

Once all the questions answered, the answers will be saved to a file /tmp/<findface-installer-*>. json. You can edit this file and use it to install FindFace Security on other hosts without having to answer the questions again.

After that, the FindFace Security components will be automatically installed, configured and/or started in the following configuration:

Service	Configuration
postgresql-	Installed and started.
9.5	
redis-	Installed and started.
server	
etcd	Installed and started.
mem-	Installed and started.
cached	
nginx	Installed and started.
django	Installed and started as a web framework for the FindFace Security web interface.
findface-	Installed and started.
ntls	
findface-	Installed and started. The number of instances (shards) is calculated using the formula: N =
tarantool-	max(min(mem_mb // 2000, cpu_cores), 1), i.e. it is equal to the RAM size in
server	MB divided by 2000, or the number of CPU physical cores (but at least 1 shard).
findface-	Installed and started.
extraction-	
api	
findface-	Installed and started.
sf-api	
findface-	Installed.
upload	
findface-	Installed and started.
video-	
manager	
findface-	Installed and started.
video-	
worker(-	
gpu)	
findface-	Neural network models for face and face features recognition (gender, age, emotions, glasses,
data-*	beard). Installed.
findface-	NTechLab gpudetector data. Installed.
gpudetector-	
data/	
python3-	NtechLab FindFace Security API python client library. Installed.
ntech.ffsecu	rity-
client	
findface-	Installed and started.
security	
jq	Installed. Used to pretty-print API responses from FindFace Security.

Once the installation is complete, the following output will be shown on the console:

Tip: Be sure to save this data: you will need it later.

5. Upload the FindFace Security license file via the main web interface http://<Host_IP_address>/#/license. To access the web interface, use the provided admin credentials.

Note: The host IP address is shown in the links to FindFace web services in the following way: as an external IP address if the host belongs to a network, or 127.0.0.1 otherwise.

Important: Do not disclose the superuser (Super Administrator) credentials to others. To administer the system, create a new user with the administrator privileges. Whatever the role, Super Administrator cannot be deprived of its rights.

6. To automatically install FindFace Security on another host without answering the installation questions, use the /tmp/<findface-installer-*>.json file. Execute:

```
sudo ./findface-security-2.2.0-server-3.2.0.run -f /tmp/<findface-installer-*>. \hookrightarrow json
```

Tip: You can find an example of the installation file in *Installation File*.

1.4.2 Deploy Step-by-Step from Repository

This section will guide you through the FindFace Security step-by-step deployment process. Follow the instructions below minding the sequence.

In this section:

- Install APT Repository
- Prerequisites
- Provide Licensing
- Deploy Main Database
- Deploy FindFace Core
- Deploy FindFace Security Application Module and Biometric Database

Install APT Repository

First of all, install the FindFace apt repository as follows:

- 1. Download the installer file findface-security-2.2.0-server-3.2.0.run.
- 2. Put the .run file into some directory on the designated host (for example, /home/username).
- 3. From this directory, make the .run file executable.

```
chmod +x findface-security-2.2.0-server-3.2.0.run
```

4. Execute the .run file.

```
sudo ./findface-security-2.2.0-server-3.2.0.run
```

The installer will ask you a few questions and perform several automated checks to ensure that the host meets the system requirements. Fill out the prompts appropriately once requested. The questions are the following:

- 1. Product to install: FindFace Security.
- Installation type: repo: Don't install anything, just set up the APT repository.

After that, the FindFace apt repository will be automatically installed.

Important: As this installation type doesn't provide installation of neural network models essential for the findface-extraction-api functioning, be sure to *manually install* them on the host(s) with findface-extraction-api.

Prerequisites

FindFace Security requires such third-party software as PostgreSQL, Redis, etcd, and memcached. Do the following:

1. Install the prerequisite packages as such:

```
sudo apt update sudo apt install -y postgresql-9.5 redis-server etcd memcached
```

2. Open the memcached configuration file. Set the maximum memory to use for items in megabytes: -m 512. Set the max item size: -I 16m. If one or both of these parameters are absent, simply add them in the file.

```
sudo vi /etc/memcached.conf

-m 512

-I 16m
```

3. Enable the prerequisite services autostart and launch the services:

Provide Licensing

See also:

Licensing Principles

You receive a license file from your NTechLab manager. If you opt for the on-premise licensing, we will also send you a USB dongle.

The FindFace Security licensing is provided as follows:

1. Deploy findface-ntls, license server in the FindFace core.

Important: There must be only one findface-ntls instance in each FindFace Security installation.

Tip: In the findface-ntls configuration file, you can change the license folder and specify your proxy server IP address if necessary. You can also change the findface-ntls web interface remote access settings. See *findface-ntls* for details.

```
sudo apt update
sudo apt install -y findface-ntls
sudo systemctl enable findface-ntls.service && sudo systemctl start findface-ntls.

→service
```

- 2. Upload the license file via the findface-ntls web interface in one of the following ways:
 - Navigate to the findface-ntls web interface http://<NTLS_IP_address>:3185/#/. Upload the license file.

Tip: Later on, use the FindFace Security main web interface to consult your license information, and upgrade or extend your license (*Settings -> License*).

- Directly put the license file into the license folder (by default, /ntech/license, can be changed in the /etc/findface-ntls.cfg configuration file).
- 3. For the on-premise licensing, insert the USB dongle into a USB port.
- 4. If the licensable components are installed on remote hosts, specify the IP address of the findface-ntls host in their configuration files. See findface-extraction-api, findface-tarantool-server, Video face detection: findface-video-manager and findface-video-worker for details.

See also:

View and Update License

Deploy Main Database

In FindFace Security, the main system database is based on PostgreSQL. To deploy the main database, do the following:

Using the PostgreSQL console, create a new user ntech and a database ffsecurity in PostgreSQL.

```
sudo -u postgres psql

postgres=# CREATE ROLE ntech WITH LOGIN;

postgres=# CREATE DATABASE ffsecurity WITH OWNER ntech ENCODING 'UTF-8' LC_

$\to$COLLATE='en_US.UTF-8' LC_CTYPE='en_US.UTF-8' TEMPLATE template0;
```

Tip: To quit from the **PostgreSQL** console, type \q and press Enter.

2. Allow authentication in PostgreSQL by UID of a socket client. Restart PostgreSQL.

```
echo 'local all ntech peer' | sudo tee -a /etc/postgresql/9.5/main/pg_hba.conf sudo systemctl restart postgresql@9.5-main.service
```

Deploy FindFace Core

To deploy the FindFace core, do the following:

Tip: You can find the description of the FindFace core components and their configuration parameters in *Architecture* and *Components in Depth*.

1. Install the FindFace core components:

```
sudo apt update
sudo apt install -y findface-tarantool-server findface-extraction-api findface-sf-
→api findface-upload findface-video-manager findface-video-worker
```

Note: To install the GPU-accelerated findface-extraction-api component, use findface-extraction-api-gpu instead of findface-extraction-api in the command.

Note: To install the GPU-accelerated findface-video-worker component, use findface-video-worker-gpu instead of findface-video-worker in the command.

2. Open the findface-extraction-api configuration file (CPU or GPU service). Enable the quality_estimator to be able to estimate the face quality in a dossier.

Note: The *minimum face quality* in a dossier photo is set as MINIMUM_DOSSIER_QUALITY in /etc/ffsecurity/config.py.

```
sudo vi /etc/findface-extraction-api.ini
quality_estimator: true
```

3. In the findface-extraction-api configuration file, enable recognition models for face features such as gender, age, emotions, glasses3, and/or beard, subject to your needs. Be sure to choose the right acceleration type for each model, matching the acceleration type of findface-extraction-api: CPU

or GPU. Be aware that findface-extraction-api on CPU can work only with CPU-models, while findface-extraction-api on GPU supports both CPU- and GPU-models. See *Face Features Recognition* for details.

```
models:
   age: faceattr/age.v1.cpu.fnk
   emotions: faceattr/emotions.v1.cpu.fnk
   face: face/elderberry_576.cpu.fnk
   gender: faceattr/gender.v2.cpu.fnk
   beard: faceattr/beard.v0.cpu.fnk
   glasses3: faceattr/glasses3.v0.cpu.fnk
```

The following models are available:

Face feature	Acceleration	Configuration file parameter		
face (biometry) CPU		face: face/elderberry_576.cpu.fnk		
	GPU	face: face/elderberry_576.gpu.fnk		
age	CPU	age: faceattr/age.v1.cpu.fnk		
	GPU	age: faceattr/age.v1.gpu.fnk		
gender	CPU	gender: faceattr/gender.v2.cpu.fnk		
	GPU	<pre>gender: faceattr/gender.v2.gpu.fnk</pre>		
emotions	CPU	emotions: faceattr/emotions.v1.cpu.fnk		
	GPU	emotions: faceattr/emotions.v1.gpu.fnk		
glasses3 CPU		<pre>glasses3: faceattr/glasses3.v0.cpu.fnk</pre>		
	GPU	glasses3: faceattr/glasses3.v0.gpu.fnk		
beard	CPU	beard: faceattr/beard.v0.cpu.fnk		
	GPU	beard: faceattr/beard.v0.gpu.fnk		

Tip: To disable a recognition model, simply pass an empty value to a relevant parameter. Do not remove the parameter itself as in this case the system will be searching for the default model.

```
models:
    gender: ""
    age: ""
    emotions: ""
```

4. Open the /etc/findface-video-worker.ini (/etc/findface-video-worker-gpu.ini) configuration file. In the mgr-static parameter, specify the findface-video-manager host IP address, which provides findface-video-worker with settings and the video stream list. In the capacity parameter, specify the maximum number of video streams to be processed by findface-video-worker.

```
sudo vi /etc/findface-video-worker.ini
sudo vi /etc/findface-video-worker-gpu.ini
mgr-static=127.0.0.1:18811
capacity=10
```

5. Enable the FindFace core services autostart and launch the services.

```
sudo systemctl enable findface-extraction-api findface-sf-api findface-video-
→manager findface-video-worker
sudo systemctl start findface-extraction-api findface-sf-api findface-video-
→manager findface-video-worker
```

Deploy FindFace Security Application Module and Biometric Database

To deploy the FindFace Security application module, do the following:

1. Install the findface-security and ffsecurity-ui components.

```
sudo apt update
sudo apt install -y ffsecurity ffsecurity-ui
```

2. Migrate the database architecture from FindFace Security to **PostgreSQL**, create user groups with *predefined* rights and the first user with administrator rights (a.k.a. Super Administrator).

Important: Super Administrator cannot be deprived of its rights, whatever the role.

```
sudo findface-security migrate
sudo findface-security create_groups
sudo findface-security createsuperuser --username admin --email root@localhost
```

3. Create a structure of the Tarantool-based biometric database.

```
sudo findface-security make_tnt_schema | sudo tee /etc/ffsecurity/tnt-schema.lua
```

4. Import the meta_scheme variable from the tnt-schema.lua file. Open the /etc/tarantool/ instances.enabled/FindFace.lua configuration file. Before the FindFace.start section, add a line dofile ("/etc/ffsecurity/tnt-schema.lua"). In the FindFace.start parameters, define meta_scheme=meta_scheme.

```
sudo vi /etc/tarantool/instances.enabled/FindFace.lua

dofile("/etc/ffsecurity/tnt-schema.lua")

FindFace.start("127.0.0.1", 8101, {
    license_ntls_server="127.0.0.1:3133",
    facen_size=576,
    meta_scheme = meta_scheme
})
```

5. Enable the findface-tarantool-server service autostart and launch the service.

```
sudo systemctl enable tarantool@FindFace.service && sudo systemctl start 

→tarantool@FindFace.service
```

- 6. Open the /etc/ffsecurity/config.py configuration file. Specify the following parameters:
 - EXTERNAL_ADDRESS: external IP address or URL that will be used to access the FindFace Security web interface.
 - VIDEO_DETECTOR_TOKEN: to authorize the video face detection module, come up with a token and specify it here.
 - VIDEO_MANAGER_ADDRESS: IP address of the findface-video-manager host.
 - NTLS_HTTP_URL: IP address of the findface-ntls host.
 - ROUTER_URL: IP address of the findface-security host that will receive detected faces from the findface-video-worker instance(s). Specify either external or internal IP address, subject to the network through which findface-video-worker interacts with findface-security.

• SF_API_ADDRESS: IP address of the findface-sf-api host.

Tip: If necessary, ensure data security by enabling *SSL*.

Tip: If necessary, set 'IGNORE_UNMATCHED': True to disable logging events for faces which have no match in the dossiers (negative verification result). Enable this option if the system has to process a large number of faces. The face similarity threshold for verification is defined by the CONFIDENCE_THRESHOLD parameter.

Tip: It is recommended to change the MINIMUM_DOSSIER_QUALITY default value. This parameter determines the minimum quality of a face in a dossier photo. Photos containing faces of worse quality will be rejected when uploading to a dossier. Upright faces in frontal position are considered the best quality. They result in values around 0, mostly negative (such as -0.00067401276, for example). Inverted faces and large face angles are estimated with negative values some -5 and less. By default, 'MINIMUM_DOSSIER_QUALITY': -2 which is the average quality.

Important: If you enabled recognition models in the findface-extraction-api configuration file, add the following line in the FFSECURITY section: 'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'], subject to the list of enabled models. This line must be placed between SF_API_ADDRESS and LIVENESS_THRESHOLD as shown in the example below. See *Face Features Recognition* for details.

```
sudo vi /etc/ffsecurity/config.py
MEDIA_ROOT = "/var/lib/ffsecurity/uploads"
STATIC_ROOT = "/var/lib/ffsecurity/static"
EXTERNAL_ADDRESS = "http://172.20.77.58"
DEBUG = False
LANGUAGE_CODE = 'en-us'
TIME_ZONE = 'UTC'
DATABASES = {
   'default': {
       'ENGINE': 'django.db.backends.postgresql',
       'NAME': 'ffsecurity',
   }
}
# use pwgen -sncy 50 1/tr "'" "." to generate your own unique key
SECRET_KEY = 'c8b533847bbf7142102de1349d33a1f6'
FFSECURITY = {
   'VIDEO_DETECTOR_TOKEN': '381b0f4a20495227d04185ab02f5085f',
   'CONFIDENCE_THRESHOLD': 0.75,
   'MINIMUM_DOSSIER_QUALITY': -2,
   'IGNORE_UNMATCHED': False,
   'EXTRACTION_API': 'http://127.0.0.1:18666/',
   'VIDEO_MANAGER_ADDRESS': 'http://127.0.0.1:18810',
```

(continues on next page)

(continued from previous page)

```
'EVENTS MAX AGE': 30,
   'NTLS_HTTP_URL': 'http://127.0.0.1:3185',
   'ROUTER_URL': 'http://172.20.77.58',
   'MONITORING_UPDATE_INTERVAL': 60,
   'SF_API_ADDRESS': 'http://127.0.0.1:18411',
   'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'],
   'LIVENESS_THRESHOLD': 0.945,
   'BEARD_THRESHOLD': 0.7,
ASGI\_THREADS = 16
UVICORN_SETTINGS = {
   'workers': 4,
   'host': 'localhost',
   'port': 8002,
}
FFSECURITY_UI_CONFIG = {
   "event": {
       "features": {
           "f_gender_class": ["male", "female"],
           "age": {
               "f_age_gte": "",
               "f_age_lte": ""
           },
           "f_emotions_class": ["angry", "disgust", "fear", "happy", "sad",

→ "surprise"],
           "f_glasses_class": ["none", "eye", "sun"],
           "f_beard_class": ["none", "beard"],
           "f_liveness_class": ["real", "fake"],
   }
# integration plugins
INSTALLED_APPS.append('ffsecurity_genetec') # remove or comment out this line to_
→ disable genetec integration
```

- 7. Generate a signature key for the session encryption (used by Django) by executing: pwgen -sncy 50 1|tr "'" ".". Specify this key as SECRET_KEY.
- 8. Start the services.

```
sudo systemctl enable findface-security sudo systemctl start findface-security
```

9. Disable the default nginx server and add the findface-security server to the list of enabled servers. Restart nginx.

```
sudo rm /etc/nginx/sites-enabled/default
sudo ln -s /etc/nginx/sites-available/ffsecurity-nginx.conf /etc/nginx/sites-
→enabled/
sudo nginx -s reload
```

1.4.3 Additional findface-video-worker deployment on remote hosts

To install only the findface-video-worker service, do the following:

Tip: Before deployment, be sure to consult the *system requirements*.

- 1. Download the installer file findface-security-2.2.0-server-3.2.0.run.
- 2. Put the .run file into some directory on the designated host (for example, /home/username).
- 3. From this directory, make the .run file executable.

```
chmod +x findface-security-2.2.0-server-3.2.0.run
```

4. Execute the .run file.

```
sudo ./findface-security-2.2.0-server-3.2.0.run
```

The installer will ask you a few questions and perform several automated checks to ensure that the host meets the system requirements. Fill out the prompts appropriately once requested. The questions are the following:

- 1. Product to install: FindFace Video Worker.
- 2. Type of findface-video-worker package: CPU or GPU.
- 3. IP address of the ffsecurity host.

After that, the installation process will automatically begin.

Note: The answers will be saved to a file /tmp/<findface-installer-*>.json. You can edit this file and use it to install FindFace Security on other hosts without having to answer the questions again.

Note: If you chose to install findface-ntls and/or findface-video-manager on different hosts than that with ffsecurity, specify their IP addresses in the /etc/findface-video-worker.ini configuration file after the installation.

```
sudo vi /etc/findface-video-worker.ini
```

In the ntls-addr parameter, specify the findface-ntls host IP address.

```
ntls-addr=127.0.0.1:3133
```

In the mgr-static parameter, specify the findface-video-manager host IP address, which provides findface-video-worker with settings and the video stream list.

```
mgr-static=127.0.0.1:18811
```

Tip: To automatically install findface-video-worker on another host without answering the installation questions, use the /tmp/<findface-installer-*>.json file. Execute:

```
sudo ./findface-security-2.2.0-server-3.2.0.run -f /tmp/<findface-installer-*>.json
```

You can find an example of the installation file in *Installation File*.

1.4.4 Neural Network Models Installation

To detect and identify faces and face features (gender, age, emotions, beard, glasses, etc.), findface-extraction-api uses neural networks.

The neural networks models are automatically installed only if you opt for the FindFace Security standalone installation from *installer*. In all other cases, you have to manually initiate the models installation. Do the following:

- During the step-by-step deployment, just follow the *instructions*.
- If you have installed the apt repository from *installer*, install the models from installer as follows:
 - 1. Execute the prepared findface-security-2.2.0-server-3.2.0.run file.

```
sudo ./findface-security-2.2.0-server-3.2.0.run
```

- 2. Select a FindFace Security component to install: findface-data.
- 3. Select models to install. After that, the installation process will automatically begin.

Note: You can find installed face recognition models at /usr/share/findface-data/models/face/, face features recognition models at /usr/share/findface-data/models/faceattr/.

1.4.5 Fully Customized Installation

The FindFace Security developer-friendly installer provides you with quite a few installation options, including the fully customized installation. This option is mostly used when deploying FindFace Security in a highly distributed environment.

To initiate the fully customized installation, answer the installer questions as follows:

- Product to install: FindFace Security.
- Installation type: Fully customized installation.
- FindFace Security components to install: whenever you have to make a selection, first deselect all the listed components by entering -* in the command line, then select required components by entering their sequence number (keyword), for example: 1 7 (findface-data, findface-extraction-api), 13 (findface-tarantool-server), or 9 (findface-upload). Enter done to save your selection and proceed to another step.
- Related questions such as about the acceleration type: CPU or GPU.

1.4.6 Guide to Typical Cluster Installation

This section is all about deploying FindFace Security in a cluster environment.

Tip: If after having read this section, you still have questions, do not hesitate to contact our experts by support@ntechlab.com.

The reasons for deploying FindFace Security in a cluster are the following:

- Necessity to distribute the video processing high load.
- Necessity to process video streams from a group of cameras in the place of their physical location.

Note: The most common use cases where such need comes to the fore are hotel chains, chain stores, several security checkpoints in the same building, etc.

See also:

Allocate findface-video-worker to Camera Group

- Necessity to distribute the face extraction high load.
- Large number of faces to search through, that requires implementation of a distributed face database.

Before you start the deployment, outline your system architecture, depending on its load and allotted resources (see *System Requirements*). The most common distributed scheme is as follows:

- One main server with the following components: findface-ntls, findface-security, findface-sf-api, findface-video-manager, findface-upload, findface-video-worker, findface-extraction-api, findface-tarantool-server, and third-parties.
- Several additional video processing servers with installed findface-video-worker.
- (If needed) Several additional face extraction servers with installed findface-extraction-api.
- (If needed) Additional database servers with multiple Tarantool shards.

This section describes the most common distributed deployment. In high load systems, it may also be necessary to distribute the API processing (findface-sf-api and findface-video-manager) across several additional servers. In this case, refer to *Fully Customized Installation*.

To deploy FindFace Security in a cluster environment, follow the steps below:

- Deploy Main Server
- Deploy Video Processing Servers
- Deploy Face Extraction Servers
- Distribute Load across Face Extraction Servers
- Distribute Database
- Configure Network

Deploy Main Server

To deploy the main server as part of a distributed architecture, do the following:

1. On the designated physical server, *install* FindFace Security from installer as follows:

- Product to install: FindFace Security.
- Installation type: Single server, multiple video workers. In this case, FindFace Security will be installed and configured to interact with additional remote findface-video-worker instances.
- Type of the findface-video-worker acceleration (on the main server): CPU or GPU, subject to your hardware configuration.
- Type of the findface-extraction-api acceleration (on the main server): CPU or GPU, subject to your hardware configuration.

Once the installation is complete, the following output will be shown on the console:

2. Upload the FindFace Security license file via the main web interface http://<Host_IP_address>/#/license. To access the web interface, use the provided admin credentials.

Note: The host IP address is shown in the links to FindFace web services in the following way: as an external IP address if the host belongs to a network, or 127.0.0.1 otherwise.

Important: Do not disclose the superuser (Super Administrator) credentials to others. To administer the system, create a new user with the administrator privileges. Whatever the role, Super Administrator cannot be deprived of its rights.

3. Allow the licensable services to access the findface-ntls license server from any IP address, To do so, open the /etc/findface-ntls.cfg configuration file and set listen = 0.0.0.0:3133.

```
sudo vi /etc/findface-ntls.cfg

# Listen address of NTLS server where services will connect to.
# The format is IP:PORT
# Use 0.0.0.0:PORT to listen on all interfaces
# This parameter is mandatory and may occur multiple times
# if you need to listen on several specific interfaces or ports.
listen = 0.0.0.1:3133
```

Deploy Video Processing Servers

On an additional video processing server, install only a findface-video-worker instance following the *step-by-step instructions*. Answer the installer questions as follows:

- Product to install: FindFace Video Worker.
- Type of the findface-video-worker acceleration: CPU or GPU, subject to your hardware configuration.
- FindFace Security IP address: IP address of the main server.

After that, the installation process will automatically begin. The answers will be saved to a file /tmp/ <findface-installer-*>.json. Use this file to install FindFace Video Worker on other hosts without having to answer the questions again, by executing:

Note: If findface-ntls and/or findface-video-manager are installed on a different host than that with findface-security, specify their IP addresses in the /etc/findface-video-worker(-gpu).ini configuration file after the installation.

```
sudo vi /etc/findface-video-worker(-gpu).ini
```

In the ntls-addr parameter, specify the findface-ntls host IP address.

```
ntls-addr=127.0.0.1:3133
```

In the mgr-static parameter, specify the findface-videomanager-api host IP address, which provides findface-video-worker (-gpu) with settings and the video stream list.

```
mgr-static=127.0.0.1:18811
```

Deploy Face Extraction Servers

On an additional face extraction server, install only a findface-extraction-api instance from the console installer. Answer the installer questions as follows:

- Product to install: FindFace Security.
- Installation type: Fully customized installation.
- FindFace Security components to install: findface-extraction-api and findface-data. To make a selection, first deselect all the listed components by entering -* in the command line, then select findface-extraction-api and findface-data by entering their sequence number (keyword): 1 7. Enter done to save your selection and proceed to another step.
- Type of findface-extraction-api acceleration: CPU or GPU.
- Modification of the findface-extraction-api configuration file: specify the IP address of the findface-ntls server.
- Neural network models to install: CPU or GPU model for face biometrics (mandatory), and (optional) CPU/GPU models for gender, age, emotions, glasses and/or beard recognition. To make a selection, first deselect all the listed models by entering $-\star$ in the command line, then select required models by entering their sequence number (keyword), for example, 8 2 to select the GPU-models for face extraction and age recognition. Enter done to save your selection and proceed to another step. Be sure to choose the right acceleration type for each model, matching the acceleration type of findface-extraction-api: CPU or GPU. Be aware that findface-extraction-api on CPU can work only with CPU-models, while findface-extraction-api on GPU supports both CPU- and GPU-models. See Face Features Recognition for details.

The following models are available:

Face fea-	Acceler-	Package
ture	ation	
face (biom-	CPU	findface-data-elderberry-160-cpu_3.0.0_amd64.deb, findface-data-elderberry-
etry)		576-cpu_3.0.0_amd64.deb
	GPU	findface-data-elderberry-160-gpu_3.0.0_amd64.deb, findface-data-elderberry-
		576-gpu_3.0.0_amd64.deb
age	CPU	findface-data-age.v1-cpu_3.0.0_amd64.deb
	GPU	findface-data-age.v1-gpu_3.0.0_amd64.deb
gender	CPU	findface-data-gender.v2-cpu_3.0.0_amd64.deb
	GPU	findface-data-gender.v2-gpu_3.0.0_amd64.deb
emotions	CPU	findface-data-emotions.v1-cpu_3.0.0_amd64.deb
	GPU	findface-data-emotions.v1-gpu_3.0.0_amd64.deb
glasses3	CPU	findface-data-glasses3.v0-cpu_3.0.0_amd64.deb
	GPU	findface-data-glasses3.v0-gpu_3.0.0_amd64.deb
beard	CPU	findface-data-beard.v0-cpu_3.0.0_amd64.deb
	GPU	findface-data-beard.v0-gpu_3.0.0_amd64.deb

After that, the installation process will automatically begin. The answers will be saved to a file /tmp/ <findface-installer-*>.json. Use this file to install findface-extraction-api on other hosts without having to answer the questions again.

```
sudo ./findface-security-2.2.0-server-3.2.0.run -f /tmp/<findface-installer- \leftrightarrow*>.json
```

Once all the face extraction servers are deployed, distribute load across the face extraction servers by using a *load* balancer

Distribute Load across Face Extraction Servers

To distribute load across several face extraction servers, you need to set up load balancing. The following step-by-step instructions demonstrate how to set up nginx load balancing in a round-robin fashion for 3 findface-extraction-api instances located on different physical hosts: one on the FindFace Security main server (172.168.1.9), and 2 on additional remote servers (172.168.1.10, 172.168.1.11). Should you have more face extraction servers in your system, load-balance them by analogy.

Tip: You can use any load balancer according to your preference. Please refer to the relevant official documentation for guidance.

To set up load balancing, do the following:

1. Designate the FindFace Security main server (recommended) or any other server with nginx as a gateway to all the face extraction servers.

Important: You will have to specify the gateway server IP address when configuring the FindFace Security *network*.

Tip: You can install nginx as such:

```
sudo apt update
sudo apt install nginx
```

2. On the gateway server, create a new nginx configuration file.

```
sudo vi /etc/nginx/sites-available/extapi
```

3. Insert the following entry into the newly created configuration file. In the upstream directive (upstream extapibackends), substitute the exemplary IP addresses with the actual IP addresses of the face extraction servers. In the server directive, specify the gateway server listening port as listen. You will have to enter this port when configuring the FindFace Security *network*.

```
upstream extapibackends {
    server 172.168.1.9:18666; ## ``findface-extraction-api`` on main server
    server 172.168.1.10:18666; ## 1st additional extraction server
    server 127.168.1.11:18666; ## 2nd additional extraction server
}
server {
    listen 18667;
    server_name extapi;
    client_max_body_size 64m;
    location / {
        proxy_pass http://extapibackends;
        proxy_next_upstream error;
    }
    access_log /var/log/nginx/extapi.access_log;
    error_log /var/log/nginx/extapi.error_log;
}
```

4. Enable the load balancer in nginx.

```
sudo ln -s /etc/nginx/sites-available/extapi /etc/nginx/sites-enabled/
```

5. Restart nginx.

```
sudo service nginx restart
```

6. On the main server and each additional face extraction server, open the /etc/findface-extraction-api.ini configuration file. Substitute localhost in the listen parameter with the relevant server address that you have specified in upstream extapibackends (/etc/nginx/sites-available/extapi) before. In our example, the address of the 1st additional extraction server has to be substituted as such:

```
sudo vi /etc/findface-extraction-api.ini
listen: 172.168.1.10:18666
```

7. Restart the findface-extraction-api on the main server and each additional face extraction server.

```
sudo systemctl restart findface-extraction-api.service
```

The load balancing is now successfully set up. Be sure to specify the actual gateway server IP address and listening port, when configuring the FindFace Security *network*.

Distribute Database

The findface-tarantool-server component connects the Tarantool database and the findface-sf-api component, transferring search results from the database to findface-sf-api for further processing. To increase

search speed, multiple findface-tarantool-server shards can be created on each Tarantool host. Their running concurrently leads to a remarkable increase in performance. Each shard can handle up to approximately 10,000,000 faces. When deploying findface-tarantool-server from installer, shards are created automatically given the server hardware.

To distribute the face database, install only a findface-tarantool-server instance on each additional database server. Answer the installer questions as follows:

- Product to install: FindFace Security.
- Installation type: Fully customized installation.
- FindFace Security components to install: findface-tarantool-server. To make a selection, first deselect all the listed components by entering -* in the command line, then select findface-tarantool-server by entering its sequence number (keyword): 13. Enter done to save your selection and proceed to another step.

After that, the installation process will automatically begin. The answers will be saved to a file /tmp/ <findface-installer-*>.json. Use this file to install findface-tarantool-server on other hosts without having to answer the questions again.

```
sudo ./findface-security-2.2.0-server-3.2.0.run -f /tmp/<findface-installer-*>.json
```

As a result of the installation, findface-tarantool-server shards will be automatically installed in the amount of $N = \max(\min(\text{mem_mb} // 2000, \text{cpu_cores}), 1)$, i.e. equal to the RAM size in MB divided by 2000, or the number of CPU physical cores (but at least 1 shard).

Be sure to specify the shards IP addresses and ports, when configuring the FindFace Security *network*. To learn the port numbers, execute on each database server:

```
sudo cat /etc/tarantool/instances.enabled/*shard* | grep -E ".start|(listen =)"`
```

You will get the following result:

```
listen = '127.0.0.1:33001',
FindFace.start("127.0.0.1", 8101, {
    listen = '127.0.0.1:33002',
FindFace.start("127.0.0.1", 8102, {
```

You can find the port number of a shard in the FindFace.start section, for example, 8101, 8102, etc.

Configure Network

Once all the FindFace Security components are deployed, configure their interaction over the network. Do the following:

1. Open the /etc/findface-sf-api.ini configuration file:

```
sudo vi /etc/findface-sf-api.ini
```

Specify the following parameters:

Parameter		Description
extraction-api	->	IP address and listening port of the gateway face extraction server with set
extraction-api		up load balancing.
storage-api	->	IP address and port of the findface-tarantool-server master shard.
shards->master		Specify each shard by analogy.
upload_url		WebDAV NginX path to send original images, thumbnails and normalized
		face images to the findface-upload service.

```
extraction-api:
 extraction-api: http://172.168.1.9:18667
webdav:
 upload-url: http://127.0.0.1:3333/uploads/
storage-api:
 . . .
 shards:
 - master: http://172.168.1.9:8101/v2/
   slave: ''
  - master: http://172.168.1.9:8102/v2/
   slave: ''
 - master: http://172.168.1.12:8101/v2/
   slave: ''
 - master: http://172.168.1.12:8102/v2/
   slave: ''
 - master: http://172.168.1.13:8102/v2/
   slave: ''
  - master: http://172.168.1.13:8102/v2/
   slave: ''
```

2. Open the /etc/ffsecurity/config.py configuration file.

```
sudo vi /etc/ffsecurity/config.py
```

Specify the following parameters:

Parameter	Description			
EXTERNAL_ADDRE SExternal IP address or URL that will be used to access the FindFace Security web				
	interface.			
VIDEO_DETECTOR_TO KENNOrize the video face detection module, come up with a token and specify it				
	here.			
VIDEO_MANAGER_	A IPDaddæss of the findface-video-manager host.			
NTLS_HTTP_URL	IP address of the findface-ntls host.			
ROUTER_URL	External IP address of the findface-security host that will receive detected			
	faces from the findface-video-worker instance(s).			
SF_API_ADDRESS IP address of the findface-sf-api host.				
EXTRACTION_API	IP address and listening port of the gateway face extraction server with set up load			
	balancing.			

```
sudo vi /etc/ffsecurity/config.py
...
EXTERNAL_ADDRESS="http://172.168.1.9"
...
FFSECURITY = {
    'VIDEO_DETECTOR_TOKEN': '7ce2679adfc4d74edcf508bea4d67208',
    ...
    'EXTRACTION_API': 'http://172.168.1.9:18667/',
    'VIDEO_MANAGER_ADDRESS': 'http://127.0.0.1:18810',
    ...
    'NTLS_HTTP_URL': 'http://127.0.0.1:3185',
    'ROUTER_URL': 'http://172.168.1.9',
    ...
    'SF_API_ADDRESS': 'http://127.0.0.1:18411',
    ...
}
```

The FindFace Security components interaction is now set up.

1.5 First Steps after Deployment

Once FindFace Security is successfully deployed, it is time to open the *web interface* and get started. In this chapter, you can find a recommended sequence of steps that will help you harness the entire functionality of your system.

In this chapter:

- Organize Cameras
- Organize Watch Lists and Dossiers
- Create Users and Grant Them Privileges
- Start Monitoring Faces
- Organize Video Surveillance
- FindFace Security in Action
- Basic Maintainance
- Go Further

1.5.1 Organize Cameras

- 1. *Create a camera group*. A camera group is an entity that allows you to group cameras subject to their physical location. For example, cameras at the same entrance to a building can be combined into one camera group.
- 2. Add cameras to the camera group and check their statuses.

You may also need:

- 1. Configure your system to process video from the group of cameras at their physical location. It may come in handy in a distributed architecture. *Learn more*.
- 2. Consider enabling event deduplication if observation scenes of cameras within the group overlap. This feature allows you to exclude coinciding facial recognition events among cameras belonging to the same group. *Learn more*.

1.5.2 Organize Watch Lists and Dossiers

- 1. *Create a watch list*. A watch list is an entity that allows you to classify people by arbitrary criteria: black list, wanted, VIP, staff, etc.
- 2. Upload dossiers and add them in the watch list either *manually*, *in bulk via the web interface*, or use the *console bulk upload* function.

1.5.3 Create Users and Grant Them Privileges

- 1. Check out the list of predefined user roles and create new roles if necessary.
- 2. Add users into the system and grant them privileges.

1.5.4 Start Monitoring Faces

By default, FindFace Security is monitoring only *unmatched faces*. To enable a custom watch list monitoring, simply make this list *active*. You can also turn on sound notifications and request manual acknowledgment for the events associated with the list.

You may also need:

- 1. Make events more informative by enabling recognition of gender, age, emotions, beard and glasses. *Learn more*.
- 2. Protect your system from spoofing by enabling the Face Liveness Detection functionality. Learn more.

1.5.5 Organize Video Surveillance

Important: Not available on CPU-based servers.

Create a camera layout for the basic video surveillance.

1.5.6 FindFace Security in Action

- 1. Automatically identify faces in live video and check them against watch lists. Work with the event history by using various filters.
- 2. Search for faces in the following databases:
 - Database of detected faces. Learn more.
 - Dossier database. Learn more.

- 3. Search archived videos for faces in the watch lists.
- 4. Manually *compare 2 faces* and verify that they belong to the same person.
- 5. Use the *mobile app*.

1.5.7 Basic Maintainance

- 1. Configure automatic events cleanup.
- 2. Manually *purge* events from the database.
- 3. Regularly *backup* the database.

1.5.8 Go Further

- 1. Set up *webhooks* to automatically send notifications about certain events to a given URL. In this case, when such an event occurs, FindFace Security will send an HTTP request to the URL configured for the webhook. You can use webhooks for various purposes, for example, to notify a user about a certain event, invoke required behaviour on a target website, solve security tasks such as automated access control, etc. *Learn more*.
- 2. Harness the FindFace Security functions through HTTP API.
- 3. Check out the list of our *partner integrations*.

See also:

- Camera Management
- Face Monitoring and Dossier Database
- User Management
- Advanced Functionality
- Maintenance and Troubleshooting

1.6 Work with FindFace Security

Use the web interface to interact with FindFace Security. To open the web interface, enter its basic address in the address bar of your browser, and log in.

Note: The basic address is set during *deployment*.

Important: To log in for the first time, use the admin account created during *deployment*. To create more users, refer to *User Management*.

The web interface has a highly intuitive and handy design and provides the following functionality:

- Camera Management. Group cameras subject to their location. Add and configure a camera.
- Dossier Database. Manage dossier classification lists (watch lists). Create dossiers manually and in bulk.
- User Management. Manage FindFace Security users and their roles.
- Offline Video Processing. Offline video face identification.

- General Preferences. Configure the confidence threshold for face verification. Set up automatic cleanup of the event database.
- Compare faces. Verify that 2 given faces belong to the same person.
- Operator's Guide. Real time face identification in live streams. Search for faces in the event list and dossier database. Video surveillance.

1.6.1 Camera Management

To configure video-based biometric identification, add cameras to FindFace Security, grouping them subject to their location.

Note: Privileges to create camera groups and cameras are managed in user's permissions (see *User Management*).


In this chapter:

- Create Camera Group
- Add Camera
- Monitor Camera Operation


Create Camera Group

To create a group of cameras, do the following:

- 1. Navigate to the *Preferences* tab. Click *Camera Groups*.
- 2. Click +.

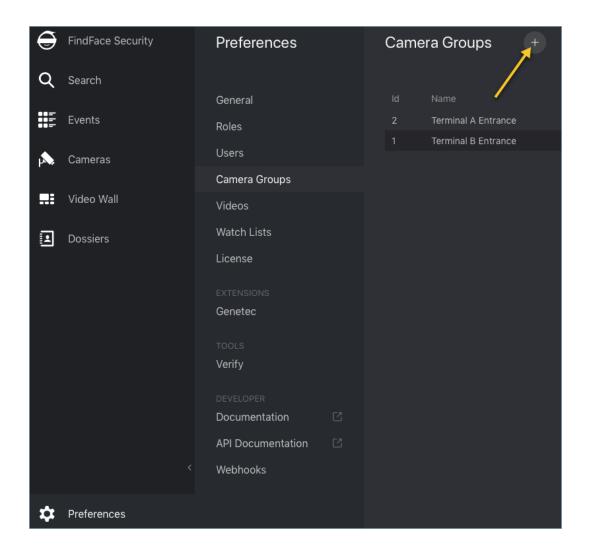

3. On the Information tab, specify the group name. Add a comment if needed.

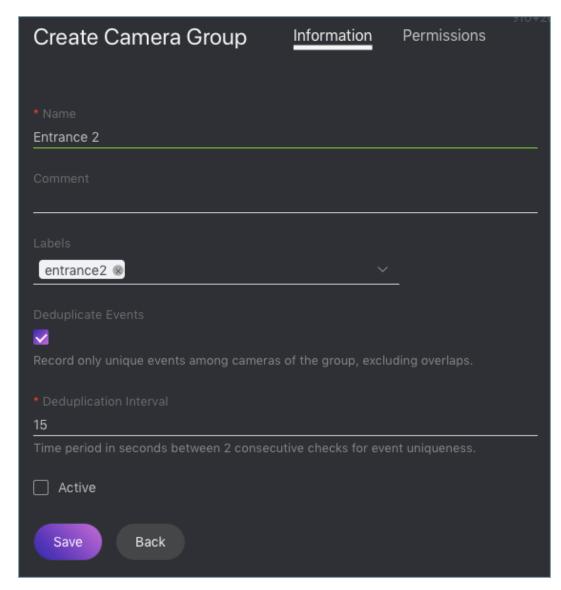

4. If you want to allocate a certain findface-video-worker instance to process video streams from the group, create or select one or several allocation labels.


Note: To complete the allocation, list the labels in the findface-video-worker configuration file. See *Allocate findface-video-worker to Camera Group* for details.

5. If you want to deduplicate events from cameras that belong to the same group, i. e. exclude coinciding events, check *Deduplicate Events* and specify the deduplication interval (interval between 2 consecutive checks for event uniqueness).

Warning: Use deduplication with extreme caution. If cameras within a group observe different scenes, some faces may be skipped. See *Deduplicate Events* for details.

- 6. Check Active.
- 7. Click Save.

8. On the *Permissions* tab, assign privileges on the camera group, specifying which user roles are allowed to change/view the camera group settings.

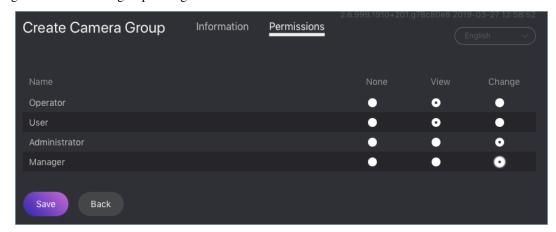


9. Click Save.


Add Camera

To add a camera, do the following:

- 1. Navigate to the Cameras tab.
- 2. Click +.

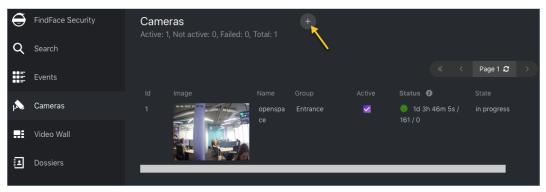

3. Specify the name of a camera and add it to a group. If necessary, add a comment.

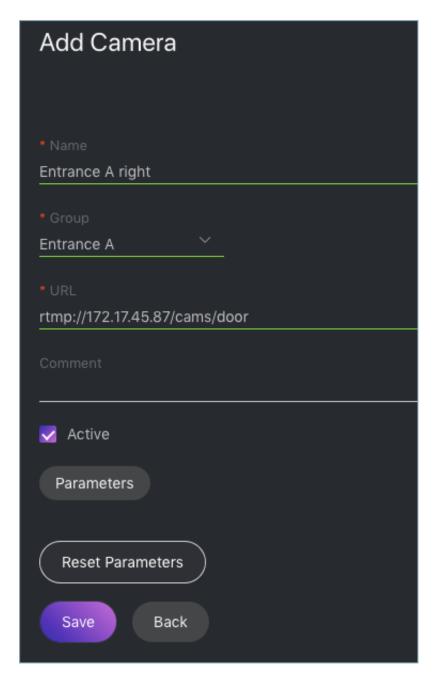

- 4. Specify the camera URL or path to the video file, for example, file://data/some.mp4.
- 5. Check Active.
- 6. To configure CPU-based video processing, click *Parameters* and navigate to the *CPU* tab.
 - Minimum face quality (min_score): Minimum quality of a face snapshot when searching for the best one. To be fitted empirically: negatives values around 0 = high quality faces, -1 = good quality, -2 = satisfactory quality, -5 = inverted faces and large face angles, face recognition may be inefficient.
 - Maximum face deviation (min_d_score): Maximum deviation of a face from its frontal position. To be fitted empirically: -3.5 = large face angles, face recognition may be inefficient, -2.5 = satisfactory deviation, -0.05 = close to the frontal position, 0 = frontal face.
 - Minimum face size (min_face_size): Minimum face size in pixels. The less the value, the longer it

takes to detect and track faces. Optimum value: 80-100-120. If 0, the filter is off.

- Maximum face size (max_face_size): Maximum face size in pixels. If 0, the filter is off.
- Realtime mode (realtime): Realtime mode. Pick up the best snapshot within each Snapshot picking interval time interval. If Post each best snapshot: true, the best snapshot is posted at the end of each interval; if false, the best snapshot is posted only if its quality has improved comparing to the previously posted snapshot.
- *Time interval* (realtime_dly): Time interval in milliseconds within which the face tracker picks up the best snapshot in realtime mode.
- Post best snapshot (realtime_post_perm): If true, post the best snapshot obtained within each Snapshot picking interval time interval in realtime mode. If false, post the best snapshot only if its quality has improved comparing to the previously posted snapshot.
- Offline mode (overall): Offline mode. Enable posting one snapshot of the best quality for each face.
- Region of Tracking (ROT): Enable detecting and tracking faces only inside a clipping rectangle. Use this option to reduce the video face detector load.
- Region of Interest (ROI): Enable posting faces detected only inside a region of interest.

Tip: To specify ROT/ROI, use the visual wizard. First, create a camera without ROT/ROI. Then open it for editing and click *Parameters*. You will see the visual wizard appear.

If necessary, specify optional parameters for CPU-based video processing. Click Advanced Parameters.

- FFMPEG options (ffmpeg_params): FFMPEG options for a video stream in the key-value format ["rtsp_transpotr=tcp", "ss=00:20:00"].
- *Video frame height* (fd_frame_height): Video frame height in pixels for the face tracker. Negative values correspond to the initial size. Optimum value to reduce load: 640-720.
- *Maximum number of faces* (npersons): Maximum number of faces simultaneously tracked by the face tracker. This parameter severely affects performance.
- Tracking threads number (tracker_threads): Number of tracking threads for the face tracker. This value should be less or equal to the maximum number of tracked faces. Recommended to set them equal. If the number of tracking threads is less than the maximum number of tracked faces, resource consumption is reduced but so is the tracking speed.
- Compression quality (jpeg_quality): Full frame compression quality.
- Face motion track drawing (draw_track): Enable drawing a face motion track in a bbox.
- Response timeout (api timeout): Response timeout in milliseconds for an API request.
- *Minimum motion intensity* (md_threshold): Minimum motion intensity to be detected by the motion detector. To be fitted empirically: 0 = detector disabled, 0.002 = default value, 0.05 = minimum intensity is too high to detect motion.
- Video frame scaling coefficient (md_scale): Video frame scaling coefficient for the motion detector from 0 to 1. Scale down in the case of high resolution cameras, or close up faces, or if the CPU load is too high, to reduce the system resources consumption.
- 7. To configure GPU-based video processing, click *Parameters* and navigate to the *GPU* tab.
 - *Minimum face quality* (min_score): Minimum quality of a face snapshot to post. To be fitted empirically: negatives values around 0 = high quality faces, -1 = good quality, -2 = satisfactory quality, -5 = inverted faces and large face angles, face recognition may be inefficient.

- Minimum face size (min_face_size): Minimum face size in pixels to post. If 0, the filter is off.
- Maximum face size (max_face_size): Maximum face size in pixels in post.
- Compression quality (jpeg_quality): Full frame compression quality.
- FFMPEG options (ffmpeg_params): FFMPEG options for a video stream in the key-value format ["rtsp_transpotr=tcp", "ss=00:20:00"].
- *Post best snapshot* (realtime_post_perm): Offline mode. Enable posting one snapshot of the best quality for each face.
- Posting timeout (router_timeout_ms): Response timeout in milliseconds for an API request.
- Retrieve timestamps from stream (use_stream_timestamp): If true, retrieve and post timestamps from a video stream. If false, post the actual date and time.
- Add to timestamps (start_stream_timestamp): Add the specified number of seconds to timestamps from a stream.

If necessary, specify optional parameters for GPU-based video processing. Click Advanced Parameters.

- Force input format (ffmpeg_format): Pass FFMPEG format (mxg, flv, etc.) if it cannot be detected automatically.
- *Verify SSL* (router_verify_ssl): If true, enable verification of the server SSL certificate when the face tracker posts faces to the server over https. If false, a self-signed certificate can be accepted.
- Minimum motion intensity (md_threshold): Minimum motion intensity to be detected by the motion detector.
- 8. Click Save.

Note: Each created camera is associated with a so called job, a video processing task which contains configuration settings and stream data and assigned to findface-video-worker. This task can be restarted (see *Monitor Camera Operation*).

Monitor Camera Operation

To monitor the operation of cameras, navigate to the Cameras tab.



Camera statuses:

- Green: the video stream is being processed without errors.
- Yellow: the video stream is being processed for less than 30 seconds, or one or more errors occurred when posting a face.
- Red: the video stream cannot be processed.

• Grey: camera disabled.

For each camera, you will be provided with the following statistics: current session duration/ the number of successfully posted faces/ the number of faces processed with errors after the last job restart.

Note: Each created camera is associated with a so called job, a video processing task which contains configuration settings and stream data and assigned to findface-video-worker. This task can be restarted.

To restart a job, click in the *Action* column. In this case, the number of errors will be reset to 0.

With a large number of cameras in the system, use the following filters:

- · Camera groups,
- Active,
- Status.

See also:

- Allocate findface-video-worker to Camera Group
- Deduplicate Events

1.6.2 Face Monitoring and Dossier Database

This chapter is all about monitoring detected faces and creating the dossier database. Each dossier has to contain one or several photos of a person and belong to a certain classification list (watch list), black or white in the simplest case. You can create several watch lists, subject to a person status or hazard level.


Tip: To create dossiers in bulk, use the *batch photo upload* functionality.

In this section:

- Monitoring Unmatched Faces
- Create Watch List
- Create Dossier Manually
- Batch Photo Upload
- Filter Dossiers by Watch List

Monitoring Unmatched Faces

FindFace Security features one pre-configured watch list that is used for monitoring only unmatched faces. This watch list cannot be removed from the system. To edit its settings or deactivate it, navigate to the *Preferences* tab. Click *Watch Lists* and then click *Unmatched* in the table.

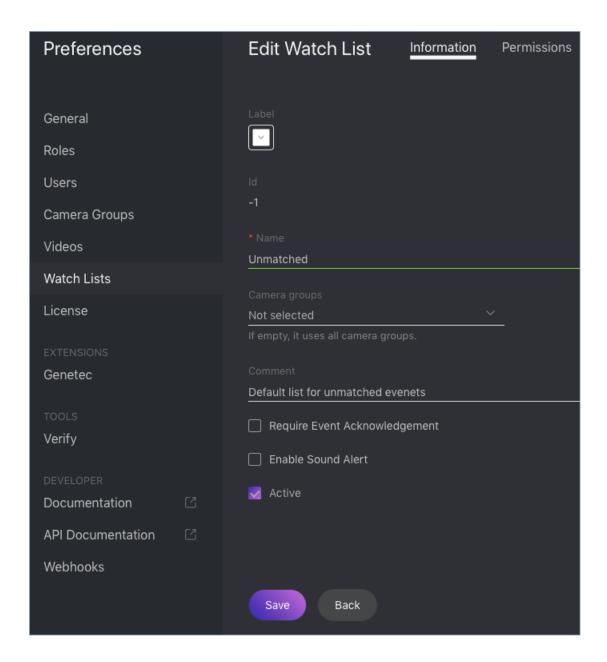


Note: To view only unmatched faces in the event list, select *Unmatched* in the *Watch lists* filter on the *Events* tab (refer to *Real-time Face Identification* for details).


Create Watch List

To create a custom watch list, do the following:


- 1. Navigate to the *Preferences* tab. Click *Watch Lists*.
- 2. Click +.

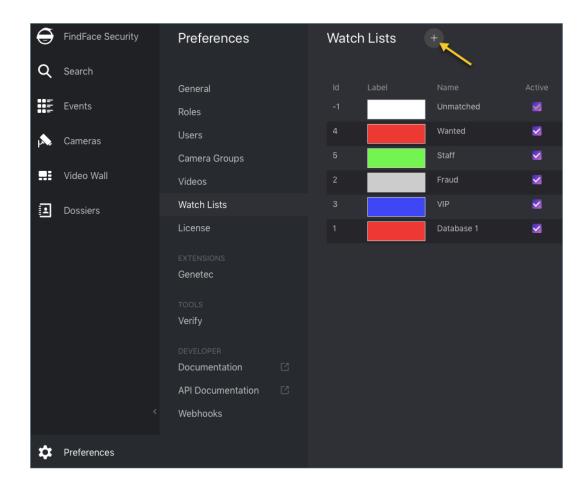

3. From the *Label* palette, select a color which will be shown in notifications for this list. Keep in mind that the right color makes for quicker response of security and hospitality managers.

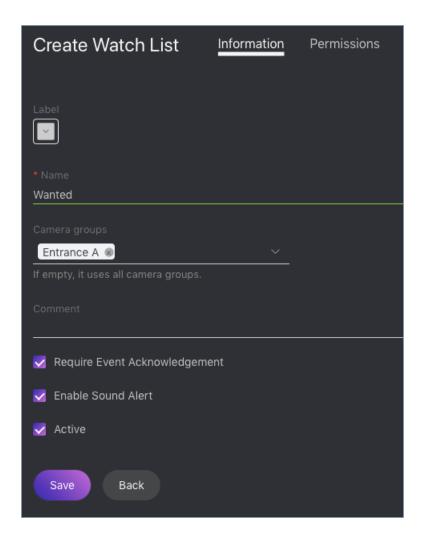

- 4. Specify the watch list name. Add a comment if needed.
- 5. Select a camera group(s) which will be used to monitor the watch list. If no groups specified, the watch list will be monitored by all active cameras in the system.
- 6. Check Require acknowledgment if it is mandatory that events associated with the list be manually acknowledged.
- 7. Check *Enable sound alert* to turn on sound notifications for the list if needed.
- 8. Check Active.
- 9. Click Save.
- 10. On the *Permissions* tab, assign privileges on the watch list, specifying which user roles are allowed to change/view the watch list settings.

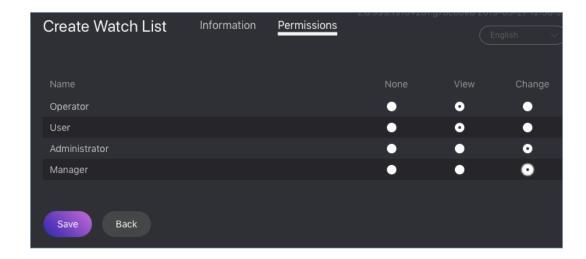


11. Click Save.

Create Dossier Manually


To create a dossier manually, do the following:

- 1. Navigate to the *Dossiers* tab.
- 2. Click +.

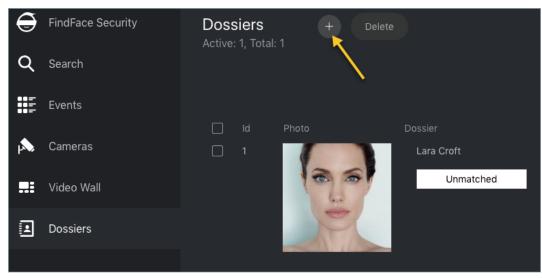

3. Attach a photo and specify the name of a person. If necessary, add a comment.

Important: A face in the photo must be of high quality, i.e. close to a frontal position. Photos that do not meet the requirement will be rejected with a detailed error description.

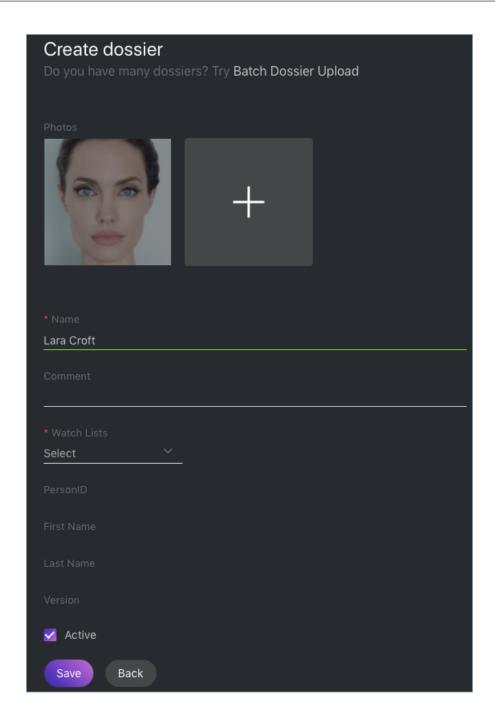


- 4. From the Watch lists drop-down menu, select a classification list (or several lists, one by one) for the dossier.
- 5. Check *Active*. If a dossier is inactive, it is excluded from the real time face identification.
- 6. Click Save.

Batch Photo Upload

To create dossiers in bulk, use the batch photo upload. Do the following:

Tip: If you need to upload a large number of photos (more than 10,000), use *Console Bulk Photo Upload*.

1. Navigate to the Preferences tab. Click Batch Upload.

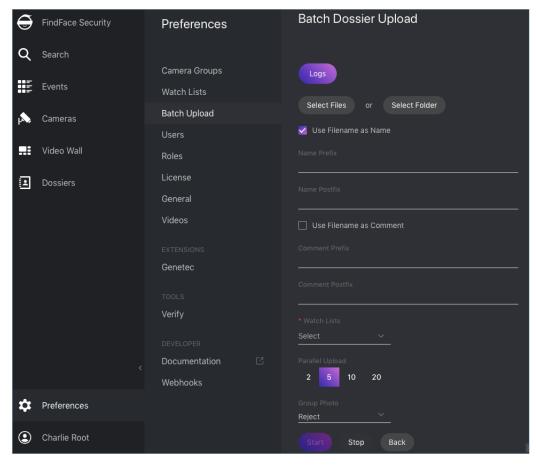


- 2. Select multiple image files, or a folder.
- 3. You can use image file names as a basis for names and/or comments in dossiers to be created. Select the necessary option(s). Then configure the automatic name/comment generation rule by appending a custom prefix and/or postfix to the file name.

Tip: To avoid merging the 3 words into one, use underscore or another symbol in the prefix and postfix.

- 4. From the Watch lists drop-down menu, select a classification list for the dossiers.
- 5. Use the *Parallel Upload* option to specify the number of photo upload streams. The more streams you use, the faster it takes to complete the upload, however it requires more resources as well.
- 6. From the *Group Photo* drop-down menu, select the system behavior upon detecting several faces in a photo: reject the photo, or upload the biggest face.
- 7. Click *Start* to launch the photo upload.


Important: To view the batch photo upload log, click Logs. You can then download the log in the .csv format

if needed.

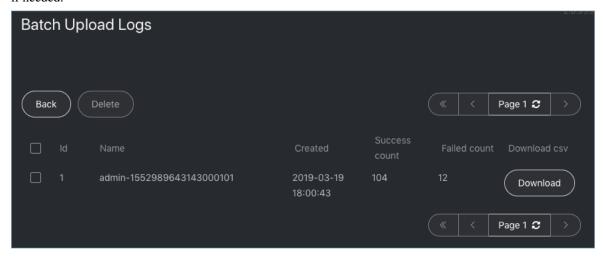

Filter Dossiers by Watch List

You can find all dossiers created in FindFace Security on the *Dossiers* tab. Use the *Watch lists* filter to filter dossiers by list.

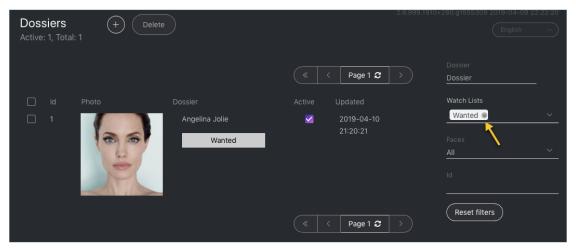

1.6.3 User Management

In this chapter:

- Predefined Roles
- Create Custom Role
- Primary and Additional User Privileges

- Create User
- Deactivate or Delete User

Predefined Roles

FindFace Security provides the following predefined roles:

• Administrator has rights to *manage cameras*, events, FindFace Security users, the *dossier database*, and full access to all other functions.

Important: Whatever the role, the first administrator (Super Administrator) cannot be deprived of its rights.


- Operator can *create dossiers manually*, receive and acknowledge events, and search for faces in the event list. The other data is available read-only. The *batch dossier creation* is unavailable.
- User has a right to receive and acknowledge events, and to search for faces in the event list. The other data is available read-only.

You can change the predefined roles privileges, as well as create various custom roles.

Create Custom Role

To create a custom role, do the following:

- 1. Navigate to the *Preferences* tab. Click *Roles*.
- 2. Click +.

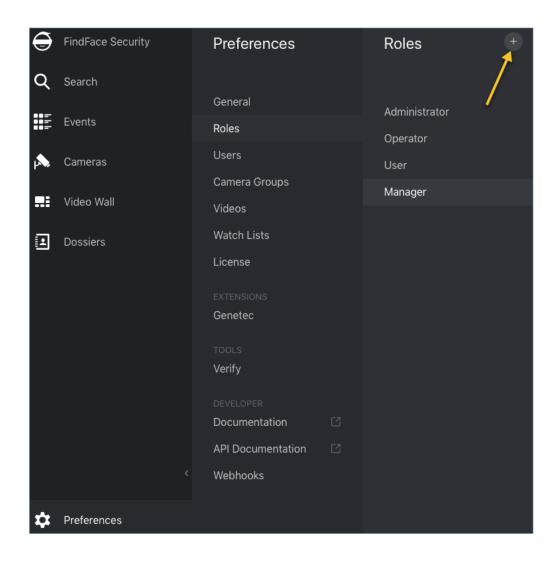

3. On the *Information* tab, specify the role name.



4. Click *Save*. You will see additional tabs appear next to the *Information* tab. You can use these tabs to assign the role privileges for specific watch lists (the *Watch Lists* tab) and camera groups (*Camera Groups*), as well as for entire system functions and entities (*Permissions*).

Note: For example, if you set None for a certain camera group on the Camera Groups tab, users with this role

won't be able to work with **this** very group of cameras. Setting None for cameragroup on the *Permissions* tab will prevent users from viewing and working with **all** camera groups.

The full list of the FindFace Security entities is as follows:

• dossierlist: watch list

• dossier: dossier

• dossierface: photo in a dossier

• cameragroup: camera group

• camera: camera

• listevent: event list

• uploadlist: list of photos in batch upload

• upload: item (photo) in batch photo upload

• user: user


• group: user role

hook: webhook

• videosource: face identification in offline video

You can also enable and disable rights for the following functionality:

- configure_genetec: configuration of Genetec integration
- configure_ntls: configuration of the findface-ntls license server
- batchupload_dossier: batch photo upload
- view_runtimesetting: viewing the FindFace Security general preferences
- change_runtimesetting: changing the FindFace Security general preferences

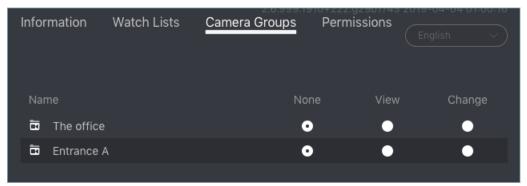

Primary and Additional User Privileges

You assign privileges to a user by using roles:

- Primary role: main user role, mandatory for assignment. You can assign only one primary role to a user.
- *Role*: additional user role, optional for assignment. You can assign several roles to one user. The rights associated with the additional roles will be added to the primary privileges.

The different between a primary and additional roles is the following. If a user is assigned a certain primary role, this role will be **automatically** granted the Change permissions for all objects newly created by this user (cameras, watch lists, dossiers, etc.). This doesn't happen when you assign an additional role. For example, if a user is assigned a primary role Manager, all users with the Manager role will be able to change the objects newly created by this user. On the contrary, if you assign Manager as an additional role, other users with the Manager role will need a relevant permission to change the objects created by the user.


See also:

Create User


Create User

To create a user, do the following:

- 1. Navigate to the *Preferences* tab. Click *Users*.
- 2. Click +.

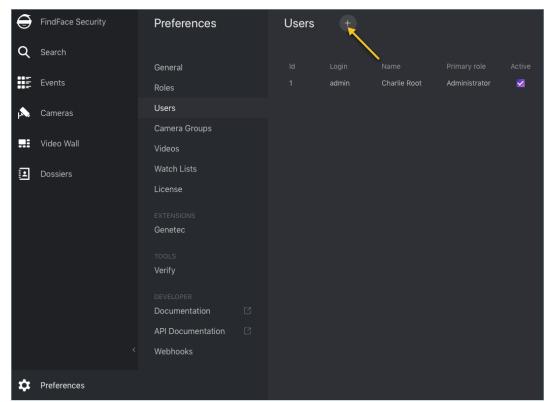

- 3. Specify such user data as name, login and password. If necessary, add a comment.
- 4. From the *Primary role* drop-down menu, select the user primary role. If necessary, add one or several additional roles by selecting them from the *Role* drop-down menu. The rights associated with the additional roles will be added to the primary privileges. The user's primary role will be automatically added with write permissions to Access Control List for all objects newly created by this user.

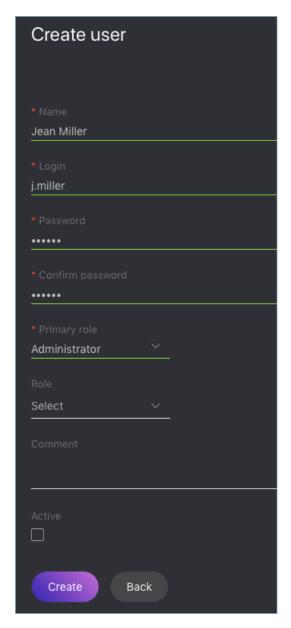

- 5. Check Active.
- 6. Click Create.

Deactivate or Delete User

In order to deactivate a user, simply uncheck *Active* in the user list (*Preferences -> Users*).


To delete a user from FindFace Security, click on the user login in the list. Click Delete.

1.6.4 Face Identification in Offline Videos


Besides real-time face identification, FindFace Security allows for offline video processing. This functionality has a wide range of possible applications, among which the most common case is face detection and recognition in archived videos.

To identify faces in an offline video, do the following:


- 1. Create a *camera group* with basic settings.
- 2. Assign this camera group to all watch lists that you want to monitor when processing the video.
- 3. Create a video in FindFace Security by uploading it from a file or online storage/cloud. To do so, navigate to the *Preferences* tab. Click *Videos*.
- 4. Click +.

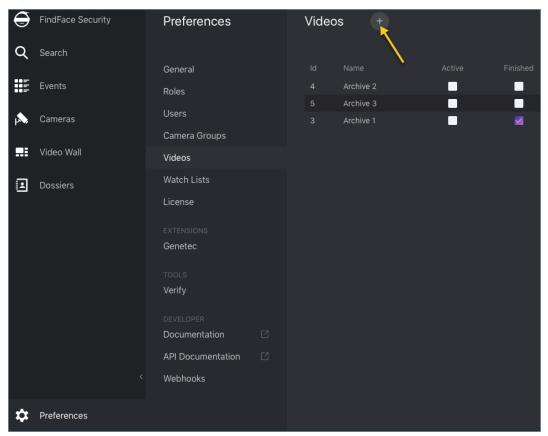

5. Specify the video name.

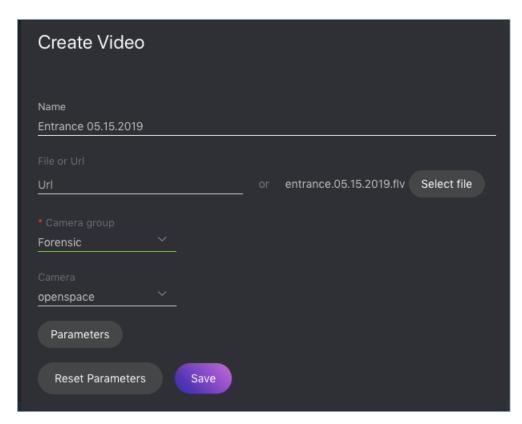


- 6. Specify the video URL in an online storage, or select a video file.
- 7. Select the camera group that you have just created.
- 8. (Optional) Select a camera to which you want to attribute the face recognition events found in the video.
- 9. (Optional) Specify parameters of video processing in the same manner as you do when configuring a live *camera*.
- 10. Click Save to upload the video.

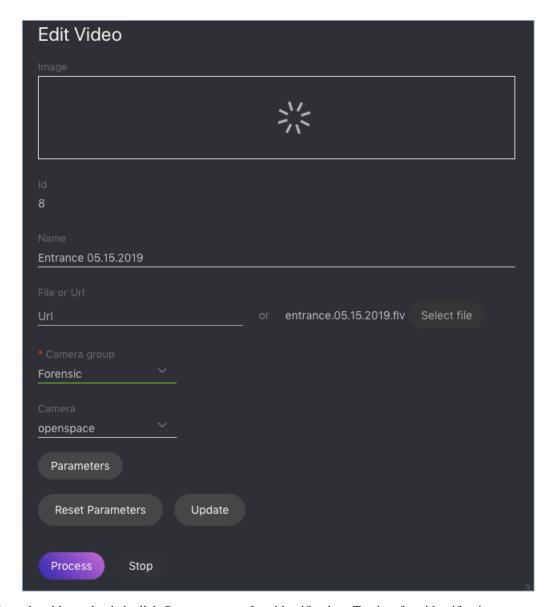

11. Once the video uploaded, click *Process* to start face identification. To view face identification events, navigate to the *Events* tab and filter the list of events by the camera group associated with the video.

1.6.5 General Preferences

To configure the confidence threshold for face verification and automatic events cleanup, navigate to the *Preferences* tab. Click *General*. After you are finished, click *Update*.

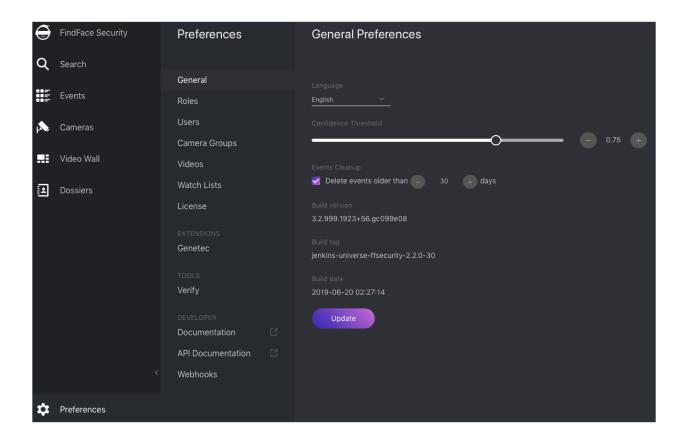

Confidence Threshold

FindFace Security verifies that a detected face and some face from the dossiers belong to the same person (i. e. the faces match), based on the pre-defined similarity threshold. The default threshold is set to 0.75 which can be considered as optimum. If necessary, you can change the threshold.

Note: The higher is the threshold, the less are chances that a wrong person will be positively verified, however, some valid photos may also fail verification.


Automatic Events Cleanup

Use the same tab to schedule purging old events from the database on a regular basis.

1.6.6 Compare Faces

FindFace Security allows you to compare 2 faces. Do the following:


1. Navigate to the *Preferences* tab. Click *Verify*.

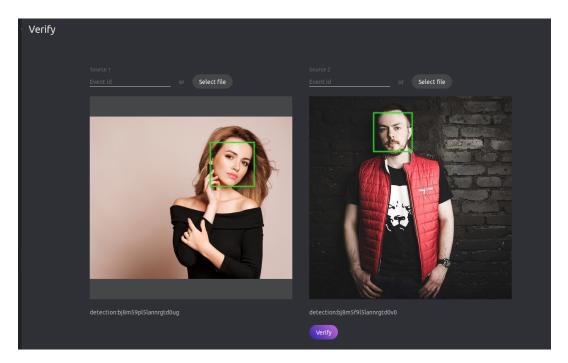

2. Specify the IDs of events that feature the faces you want to compare, and/or upload photos with the faces.

Tip: You can find event IDs on the *Events* tab.

3. Click *Verify*. You will see the probability of the faces belonging to the same person appear.

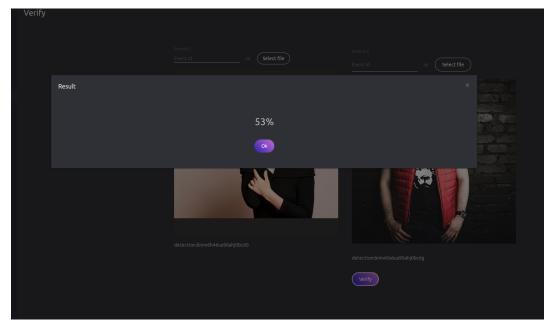

1.7 Advanced Functionality

1.7.1 Allocate findface-video-worker to Camera Group

In distributed architectures, it is often necessary that video streams from a group of cameras be processed *in situ*, without being redistributed across remote findface-video-worker instances by the main server.

Note: Among typical use cases are hotel chains, chain stores, several security checkpoints in the same building, etc.

In this case, simply allocate the local findface-video-worker to the camera group.

Do the following:

- 1. Navigate to the *Preferences* tab. Click *Camera Groups*.
- 2. Open the camera group settings.
- 3. In the *Labels*, create or select one or several allocation labels. Save changes.
- 4. If you use the CPU-accelerated version, open the findface-video-worker configuration file and specify the allocation labels in the following format: label_name=true (label terminal_1 in the example below).

```
sudo vi /etc/findface-video-worker.ini
wrk-labels=terminal_1=true
```

If you use the GPU-accelerated version, open the findface-video-worker-gpu configuration file and specify the allocation labels as such:

```
sudo vi /etc/findface-video-worker-gpu.ini
labels = terminal_1=true
```

5. Restart findface-video-worker (-gpu).

```
sudo systemctl restart findface-video-worker.service sudo systemctl restart findface-video-worker-gpu.service
```

Note: If a camera is assigned an allocation label, its video stream can be processed by a findface-video-worker(-gpu) instance with the same label, as well as by all unlabeled findface-video-worker(-gpu) instances.

Warning: If a labeled camera is processed by an unlabeled findface-video-worker (-gpu) instance and a free similar-labeled instance appears, the camera won't automatically switch to the latter. To switch the camera, restart the similar-labeled findface-video-worker (-gpu) instance.

1.7.2 Console Bulk Photo Upload

To bulk-upload photos to the dossier database, you can use the **findface-security-uploader** utility from the FindFace Security package (in addition to the web interface upload functionality). Use this utility when you need to upload a large number of photos (more than 10,000).

Tip: To view the **findface-security-uploader** help, execute:

```
findface-security-uploader --help
```

Do the following:

1. Write the list of photos and metastrings to a CSV or TSV file.

Important: The file used as a metadata source must have the following format: path to photo | metastring.

To prepare a TSV file, use either a script or the find command.

Note: Both the script and the command in the examples below create the images.tsv file. Each image in the list will be associated with a metastring coinciding with the image file name in the format path to photo | metastring.

To build a TSV file listing photos from a specified directory (/home/user/25_celeb/ in the example below), run the following command:

```
python3 tsv_builder.py /home/user/25_celeb/
```

The find usage example:

```
find photos/ -type f -iname '*g' | while read x; do y="\{x\%.*\}"; printf "%s\t%s\n \rightarrow" "\{y\#**/\}"; done
```

2. Create a job file out of a CSV or TSV file by using add. As a result, a file enroll-job.db will be created and saved in a current directory.

```
findface-security-uploader add images.tsv
```

The add options:

- -- format: input file format, tsv by default,
- --delimiter: field delimiter, by default "\t" for TSV, and ", " for CSV.

Note: A job file represents a sqlite database which can be opened on the **sqlite3** console.

3. Process the job file by using run.

The run options:

- --parallel: the number of photo upload threads, 10 by default. The more threads you use, the faster the bulk upload is completed, however it requires more resources too.
- --api: findface-security API URL, http://127.0.0.1:80/ by default.
- --user: login.

- --password: password.
- --dossier-lists: comma-separated list of the watch lists id's.
- --failed: should an error occur during the job file processing, correct the mistake and try again with this option.

1.7.3 Deduplicate Events

In this section:


- · How It Works
- Enable Deduplication

If observation scenes of cameras within one group overlap, consider to enable Deduplication. This feature allows you to exclude coinciding facial recognition events among cameras belonging to the same group.

Warning: Use deduplication with extreme caution, as if cameras within a group observe different scenes, some faces may be skipped.

How It Works

The deduplication algorithm's infographics are shown in the diagram below:

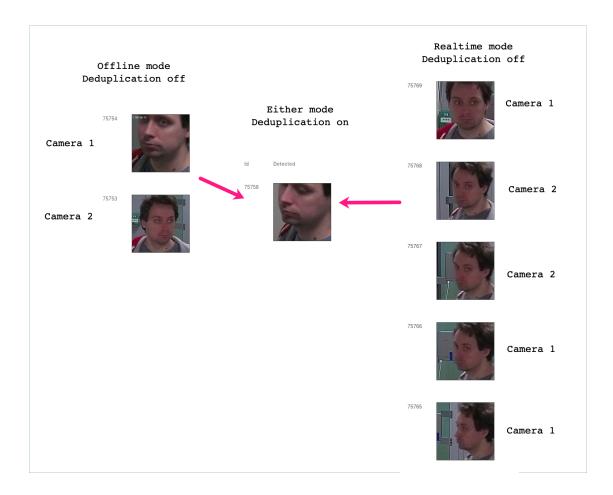

- 1. If the video face detector is working in the offline mode without deduplication, the server receives one best face snapshot per camera. We recommend to use this mode if cameras in the same group observe different scenes.
- 2. If the video face detector is working in the online mode without deduplication, the server receives several images from each camera of a group. This mode is the most storage intensive. In the case of large number of visitors, security operators may also experience difficulties dealing with a large number of identical face recognition events.
- 3. With enabled deduplication, the server receives only one face snapshot per group, the best one in the current tracking session whatever the video face detector mode. Use deduplication only if the observation scenes of cameras within a group overlap.

Enable Deduplication

To enable event deduplication, do the following:

- 1. Navigate to the *Preferences* tab. Click *Camera Groups*.
- 2. Open the camera group settings.
- 3. Check *Deduplicate Events* and specify the deduplication interval in seconds (interval between 2 consecutive checks for event uniqueness).

1.7.4 Real-time Face Liveness Detection

Important: The face liveness detection can be enabled only on the GPU-accelerated video face detector findface-video-worker-gpu.

To spot fake faces and prevent photo attacks, use the integrated 2D anti-spoofing system that distinguishes a live face from a face image. Due to the analysis of not one, but a number of frames, the algorithm captures any changes in a facial expression and skin texture. This ensures that it is a live person in front of a camera and eliminates the possibility of fraud using images on paper or mobile device screens.

The liveness detector estimates a face liveness with a certain level of confidence and returns the confidence score along with a binary result real/fake, depending on the pre-defined liveness threshold.

In this section:

- Enable Face Liveness Detector
- Configure Liveness Threshold
- Face Liveness in Web Interface

Enable Face Liveness Detector

To enable the face liveness detector, do the following:

1. Open the /etc/findface-video-worker-gpu.ini configuration file. In the liveness -> fnk parameter, specify the path to the face liveness detector model as shown below.

```
sudo vi /etc/findface-video-worker-gpu.ini

[liveness]
#------
## path to liveness fnk
fnk = /usr/share/findface-data/models/faceattr/liveness.vl.gpu.fnk
```

2. Restart findface-video-worker-gpu.

```
sudo systemctl restart findface-video-worker-gpu
```

Configure Liveness Threshold


If necessary, you can adjust the liveness threshold in the /etc/ffsecurity/config.py configuration file. The liveness detector will estimate a face liveness with a certain level of confidence. Depending on the threshold value, it will return a binary result real or fake.

Note: The default value is optimal. Before changing the threshold, we recommend you to seek advice from our experts by support@ntechlab.com.


```
sudo vi /etc/ffsecurity/config.py
'LIVENESS_THRESHOLD': 0.945,
```

Face Liveness in Web Interface

Once the face liveness detector configured, you will see liveness estimation for each event.

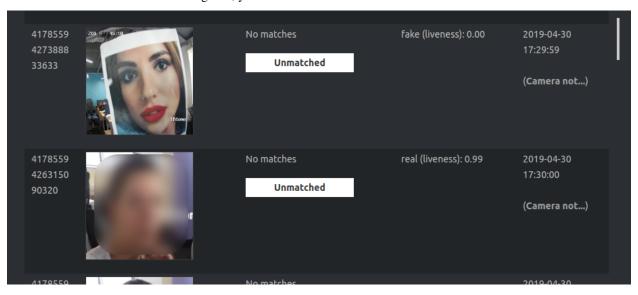

Use the *Liveness* filter to display only real or only fake faces in the event list.

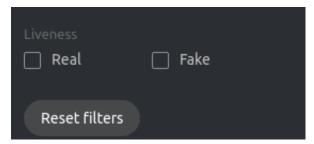

1.7.5 Face Features Recognition

Subject to your needs, you can enable automatic recognition of such face features as gender, age, emotions, glasses, and/or beard. This functionality can be activated on both GPU- and CPU-accelerated video face detectors.

In this section:

- Enable Face Features Recognition
- Display Features Recognition Results in Events
- Face Features in Events

Enable Face Features Recognition

Important: This step will enable face features recognition via HTTP API.

To enable automatic recognition of face features, open the /etc/findface-extraction-api configuration file and enable relevant recognition models: gender, age, emotions, glasses3, and/or beard. Be sure to choose the right acceleration type for each model, matching the acceleration type of findface-extraction-api: CPU or GPU. Be aware that findface-extraction-api on CPU can work only with CPU-models, while findface-extraction-api on GPU supports both CPU- and GPU-models.

```
sudo vi /etc/findface-extraction-api

models:
    age: faceattr/age.v1.cpu.fnk
    emotions: faceattr/emotions.v1.cpu.fnk
    face: face/elderberry_576.cpu.fnk
    gender: faceattr/gender.v2.cpu.fnk
    beard: faceattr/beard.v0.cpu.fnk
    glasses3: faceattr/glasses3.v0.cpu.fnk
```

The following models are available:

Note: You can find face features recognition models at /usr/share/findface-data/models/faceattr/.

```
ls /usr/share/findface-data/models/faceattr/
age.v1.cpu.fnk age.v1.gpu.fnk beard.v0.cpu.fnk beard.v0.gpu.fnk emotions.v1.cpu.

ofnk emotions.v1.gpu.fnk gender.v2.cpu.fnk gender.v2.gpu.fnk glasses3.v0.cpu.fnk

of glasses3.v0.gpu.fnk liveness.v1.gpu.fnk
```

Face feature	Acceleration	Configuration file parameter
face (biometry)	CPU	face: face/elderberry_576.cpu.fnk
	GPU	face: face/elderberry_576.gpu.fnk
age	CPU	age: faceattr/age.v1.cpu.fnk
	GPU	age: faceattr/age.v1.gpu.fnk
gender	CPU	gender: faceattr/gender.v2.cpu.fnk
	GPU	gender: faceattr/gender.v2.gpu.fnk
emotions	CPU	emotions: faceattr/emotions.v1.cpu.fnk
	GPU	emotions: faceattr/emotions.v1.gpu.fnk
glasses3	CPU	glasses3: faceattr/glasses3.v0.cpu.fnk
	GPU	glasses3: faceattr/glasses3.v0.gpu.fnk
beard	CPU	beard: faceattr/beard.v0.cpu.fnk
	GPU	beard: faceattr/beard.v0.gpu.fnk

Tip: To disable a recognition model, simply pass an empty value to a relevant parameter. Do not remove the parameter itself as in this case the system will be searching for the default model.

```
models:
    gender: ""
    age: ""
    emotions: ""
```

Restart findface-extraction-api.

```
sudo systemctl restart findface-extraction-api
```

Once the models are enabled, be sure to *configure* the web interface to display the recognition results.

Display Features Recognition Results in Events

To display the face features recognition results in the event list, add the following line into the FFSECURITY section: 'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'], subject to the list of enabled models.


Warning: This line must be placed between SF_API_ADDRESS and LIVENESS_THRESHOLD as shown in the example.

```
sudo vi /etc/ffsecurity/config.py
...
FFSECURITY = {
...
'SF_API_ADDRESS': 'http://127.0.0.1:18411',
'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'],
'LIVENESS_THRESHOLD': 0.945,
'BEARD_THRESHOLD': 0.7,
}
```

Face Features in Events

Once the face features recognition configured, you will see the recognition result for each found face in the following format:

Face	Result format	Example
feature		
Age	Feature: age: number of years	age: 33
Gender	Result: male/female (feature: gender): algorithm confidence in result	female (gen-
		der): 0.95
Emotions	Result: angry/disgust/fear/happy/sad/surprise (feature:	happy (emo-
	emotions): algorithm confidence in result	tions): 0.99
Glasses	Result: eye/sun/none (feature: glasses): algorithm confidence in result	none (glasses):
		0.87
Beard	Result: beard/none (feature: beard): algorithm confidence in result	none (beard):
		0.91

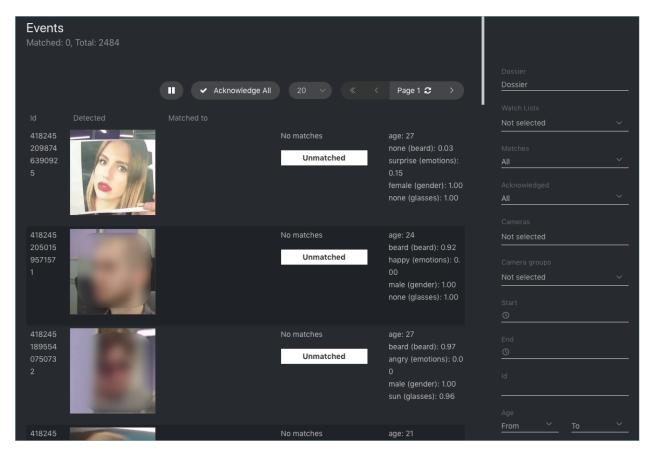

Filter events by face features when needed.

1.7.6 Direct API Requests to Tarantool

You can use HTTP API to extract data directly from the Tarantool Database.

In this section:

- General Information
- Add Face
- Remove Face
- Face Search
- Edit Face Metadata and Feature Vector
- List Galleries
- Get Gallery Info
- Create Gallery
- Remove Gallery

General Information

API requests to Tarantool are to be sent to http://<tarantool_host_ip:port>.

Tip: The port for API requests can be found in the FindFace.start section of the Tarantool configuration file:

```
cat /etc/tarantool/instances.enabled/FindFace.lua
##8001:
FindFace.start("127.0.0.1", 8001)
```

Note: In the case of the standalone deployment, you can access Tarantool by default only locally (127.0.0.1). If you want to access Tarantool remotely, *alter* the Tarantool configuration file.

API requests to Tarantool may contain the following parameters in path segments:

- :ver: API version (v2 at the moment).
- :name: gallery name.

Tip: To list gallery names on a shard, type in the following command in the address bar of your browser:

```
http://<tarantool_host_ip:shard_port>/stat/list/1/99
```

The same command on the console is as such:

```
curl <tarantool_host_ip:shard_port>/stat/list/1/99 \| jq
```

You can also list gallery names by using a direct request to Tarantool:

Note that if there is a large number of shards in the system, chances are that a randomly taken shard does not contain all the existing galleries. In this case, just list galleries on several shards.

Add Face

```
POST /:ver/faces/add/:name
```

Parameters in body:

JSON-encoded array of faces with the following fields:

- "id": face id in the gallery, uint64_t,
- "facen": raw feature vector, base64,
- "meta": face metadata, dictionary.

Returns:

- HTTP 200 and empty body on success.
- HTTP 404 if a gallery with the given name doesn't exist.
- HTTP with a status other than 200 and error description in the body on failure.

Example

Request

Response

```
HTTP/1.1 200 Ok
Content-length: 1234
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
```

Remove Face

```
POST /v2/faces/delete/:name
```

Parameters in body:

JSON-encoded array of face ids to be removed

Returns:

- HTTP 200 and empty body on success.
- HTTP 404 if a face with the given id is not found in the gallery.
- HTTP with a status other than 200 and error description in the body on failure.

Example

Request

```
curl -D - -s 'http://localhost:8001/v2/faces/delete/testgal' --data '[1, 4, 922, 3]'
```

Response

```
HTTP/1.1 200 Ok
Content-length: 111
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
```

Face Search

```
POST /v2/faces/search/:name
```

Parameters in body:

JSON-encoded search request with the following fields:

- limit: maximum number of faces in the response.
- sort: sorting order. Pass one of the following values: id: increasing order by id, -id: decreasing order by id, -score: decreasing order by face similarity (only if you search for faces with similar feature vectors).
- filter (filters):
 - facen: (optional) search for faces with similar feature vectors. Pass a dictionary with the following fields: data: raw feature vector, base64; score: range of similarity between faces [threshold similarity; 1], where 1 is 100% match.
 - id and meta/<meta_key>: search by face id and metastring content. To set this filter, use the following operators:
 - * range: range of values, only for numbers.
 - * set: id or metastring must contain at least one value from a given set, for numbers and strings.
 - * subset: id or metastring must include all values from a given subset, for numbers and strings.
 - * like: by analogy with like in SQL requests: only 'aa%', '%aa', and '%aa%' are supported. Only for strings and set[string]. In the case of set[string], the filter will return result if at least one value meets the filter condition.
 - * ilike: by analogy with like but case-insensitive, only for strings and set[string].

Returns:

• JSON-encoded array with faces on success. The value in the X-search-stat header indicates whether the fast index was used for the search: with_index or without_index.

Note: Fast index is not used in API v2.

• HTTP with a status other than 200 and error description in the body on failure.

Example

Request

```
curl -D - -s 'http://localhost:8001/v2/testgal/search' --data '
        "limit": 2,
    "sort": {
                "score": -1
        },
        "filter": {
                "facen": {
                         "data": "qgI3vZRv/z0BQTk9rcirOyZrNpO9MdHavW1WuT0=",
                         "score": [0.75, 1]
                },
                "id": {
                         "range": [9223372036854000000, 9223372036854999000]
                },
                "meta": {
                         "person_id": {
                                 "range": [444, 999]
                         "cam id": {
                                 "set": ["12767", "8632", "23989"]
                         }
                }
        }
} '
```

Response

```
HTTP/1.1 200 Ok
Content-length: 1234
X-search-stat: without_index
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
  "results": [
      "facen": " qgI3vZRv/z0BQTk9rcirOyZrNpO9MdHavW1WuT0=",
      "meta": {
        "timestamp": 0,
       "photo_hash": "",
       "person_id": 777,
        "cam_id": "8632"
      "score": 0.9964,
      "id": 9223372036854776000
    }
 ]
```

Edit Face Metadata and Feature Vector

```
POST /v2/faces/update/:name
```

Parameters in body:

JSON-encoded array with faces with the following fields:

- "id": face id, uint64_t.
- "facen": (optional) new feature vector, base64. If omitted or passed as null, the relevant field in the database won't be updated.
- "meta": dictionary with metadata to be updated. If some metastring is omitted or passed as null, the relevant field in the database won't be updated.

Returns:

- HTTP 200 and dictionary with all face parameters, including not updated, on success.
- HTTP 404 and error description if a face with the given id doesn't exist.
- HTTP with a status other than 200 and error description in the body on failure.

Example

Request

Response

List Galleries

```
POST /v2/galleries/list
```

Returns:

JSON-encoded array with galleries with the following fields: name: gallery name, faces: number of faces in a gallery.

Example

Request

```
curl -D - -s -X POST http://localhost:8001/v2/galleries/list
```

Response

Get Gallery Info

```
POST /v2/galleries/get/:name
```

Returns:

- HTTP 200 and dictionary with gallery parameters on success.
- HTTP 404 and error description if a gallery with the given name doesn't exist.
- HTTP with a status other than 200 and error description in the body on failure.

Example

Request

```
curl -D - -s -X POST http://localhost:8001/v2/galleries/get/testgal
```

```
HTTP/1.1 200 Ok
Content-length: 11
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
{"faces":2}
```

Create Gallery

```
POST /v2/galleries/add/:name
```

Returns:

- HTTP 200 and empty body on success.
- with a status other than 200 and error description in the body on failure.

Example

Request

```
curl -D - -X POST -s 'http://localhost:8001/v2/galleries/add/123'
```

Response

```
HTTP/1.1 409 Conflict
Content-length: 57
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
{"error":{"message":"gallery already exists","code":409}}
```

Remove Gallery

```
POST /v2/galleries/delete/:name
```

Returns:

- HTTP 200 and empty on success.
- with a status other than 200 and error description in the body on failure.

Example

Request

```
curl -D - -X POST -s 'http://localhost:8001/v2/galleries/delete/123'
```

Response

```
HTTP/1.1 204 No content
Content-length: 0
Server: Tarantool http (tarantool v1.7.3-673-g23cc4dc)
Connection: keep-alive
```

1.8 Maintenance and Troubleshooting

1.8.1 Update FindFace Security from 1.x to 2.x

To update FindFace Security from 1.x to 2.x, do the following:

1. Stop the services:

```
sudo systemctl stop findface-extraction*
sudo systemctl stop findface-security*
sudo systemctl stop findface-videomanager*
```

- 2. Install a new version according to your architecture outline, following instructions in *Deploy FindFace Security*.
- 3. Migrate data drom PostgreSQL to Tarantool.

Important: Before you proceed, make sure that the size of free disk space is equal or larger than the occupied space.

```
sudo findface-security tnt_migrate
```

Note: To purge PostgreSQL after migration is completed, execute the command with the option --purge-sql.

```
sudo findface-security tnt_migrate --purge-sql
```

Note: It is absolutely data-safe to interrupt the migration process and resume it later.

1.8.2 Biometric Database Backup and Restore

There are 3 galleries in the Tarantool-based biometric database:

- ffsec_dossier_face: biometric samples extracted from dossier photos.
- ffsec_events: biometric samples extracted from faces in video.
- ffsec_monitoring: biometrics samples from all dossiers under watch (active).

The backup/restore functionality allows you to fully restore all these galleries whenever needed.

To avoid data loss, we recommend you to create a backup at least once a week. Overall, the frequency of backups depends on the amount of dossiers and face recognition events, as well as available disk space.

Be sure to backup the database before *migrating* your system to another biometric model.

In this section:

• Utilities

- Backup Database
- Restore Database

Utilities

To backup and restore the FindFace Security biometric database, the following utilities are needed:

- 1. backup: findface-storage-api-dump,
- 2. restore: findface-storage-api-restore.

These utilities are automatically installed along with findface-sf-api.

Backup Database

To backup the biometric database, use the findface-storage-api-dump utility as follows:

Important: The following services have to be active: findface-tarantool-server, findface-sf-api.

Note: The backup functionality can be applied to a distributed database. In this case, the findface-storage-api-dump utility will backup galleries on all the shards specified in /etc/findface-sf-api.ini.

- 1. On the server with findface-sf-api, create a directory to store the backup files.
- 2. From this directory, launch the findface-storage-api-dump utility by executing:

```
sudo findface-storage-api-dump -config /etc/findface-sf-api.ini
```

The utility will backup at once all the galleries into the files with corresponding names ffsec_dossier_face.json, ffsec_events.json, ffsec_monitoring.json, and save them into the directory. These files contain all the data needed to restore the entire database.

Restore Database

To restore the biometric database from the backup, do the following:

1. Use HTTP API to create initial galleries in the database: ffsec_dossier_face, ffsec_events, ffsec_monitoring.

Tip: See *HTTP API*.

```
curl -D - -X POST -s 'http://localhost:8101/v2/galleries/add/ffsec_dossier_face'
curl -D - -X POST -s 'http://localhost:8101/v2/galleries/add/ffsec_events'
curl -D - -X POST -s 'http://localhost:8101/v2/galleries/add/ffsec_monitoring'
```

2. From the directory with the backup files, launch the findface-storage-api-restore utility for each gallery at a time:

```
sudo findface-storage-api-restore -config /etc/findface-sf-api.ini < ffsec_
→dossier_face.json
sudo findface-storage-api-restore -config /etc/findface-sf-api.ini < ffsec_events.
→json
sudo findface-storage-api-restore -config /etc/findface-sf-api.ini < ffsec_
→monitoring.json
```

The restore process can be interrupted and resumed when necessary. To resume the process after interruption, simply launch the findface-storage-api-restore utility again.

See also:

- Backup Options
- Restore Options

1.8.3 Migrate to Different Facen Model

Tip: Do not hesitate to contact our experts on migration by support@ntechlab.com.

Important: Before the migration, sure to *backup* the database.

Sometimes you have to migrate your face biometric data (facens) to another facen model. This usually happens when you decide to update to the latest version of the product.

To migrate to a different facen model, use the findface-sf-api-migrate utility. To pass migration settings, launch it with the -config option and provide a configuration file shown in the example below.

```
findface-sf-api-migrate -config <migration.ini>
```

Example of the configuration file:

```
extraction-api:
 timeouts:
   connect: 5s
   response_header: 30s
   overall: 35s
   idle_connection: 0s
 extraction-api: http://127.0.0.1:18666
storage-api-from: # current location of the gallery
 timeouts:
   connect: 5s
   response_header: 30s
   overall: 35s
   idle_connection: 10s
 max-idle-conns-per-host: 20
 shards:
    - master: http://127.0.0.1:8001/v2/
     slave: ""
storage-api-to:
 timeouts:
   connect: 5s
    response_header: 30s
```

(continues on next page)

```
overall: 35s
   idle_connection: 10s
 max-idle-conns-per-host: 20
 shards:
    - master: http://127.0.0.1:8002/v2/
     slave: ""
workers_num: 100
faces_limit: 1000
extraction_batch_size: 8
normalized_storage:
  type: webdav
 enabled: True
 webdav:
   upload-url: http://127.0.0.1:3333/uploads/
   endpoint: 172.20.77.75:9000
   bucket-name: sf-api-normalized
   access-key: W0G6EQT6MC3BZC8136DW
   secret-access-key: XnottrdxRFp70wfEGdkvKgkzKZ3mEa2Y9bYmob4I
   secure: False
   region: ""
   operation-timeout: 10
   public-url: 123
```

Parameter	Description
extraction-api ->	findface-extraction-api with a new facen model in its config-
extraction-api	uration file.
storage-api-from	Previous facen storage
storage-api-to	Storage for re-generated facens
normalized_storage ->	Storage of normalized face images.
upload-url	

1.8.4 Remove FindFace Security Instance

You can automatically remove FindFace Security along with the database by using the ffsec_1.x-2. $x_{uninstall.sh}$ script. The FindFace Security configuration files and database will be backed up.

Do the following:

- 1. Download the ffsec_1.x-2.x_uninstall.sh script to some directory on a designated host (for example, to /home/username/).
- 2. From this directory, make the script executable.

```
chmod +x ffsec_1.x-2.x_uninstall.sh
```

3. Run the script.

```
sudo ./ffsec_1.x-2.x_uninstall.sh
```

4. Answer all to completely remove FindFace Security along with the database.

1.8.5 Checking Component Status

Check the status of components once you have encountered a system problem.

Component	Command to view service status
findface-extraction-api	sudo systemctl status findface-extraction-api.service
findface-sf-api	sudo systemctl status findface-sf-api.service
findface-tarantool-server	sudo systemctl status tarantool@FindFace.service
findface-video-manager	sudo systemctl status findface-video-manager.service
findface-video-worker	sudo systemctl status findface-video-worker*.service
findface-ntls	sudo systemctl status findface-ntls
findface-security	sudo systemctl status findface-security*
etcd	sudo systemctl status etcd.service
NginX	sudo systemctl status nginx.service
memcached	sudo systemctl status memcached.service
postgresql	sudo systemctl status postgresql*
redis	sudo systemctl status redis.service

1.8.6 Logs

Log files provide a complete record of each FindFace Security component activity. Consulting logs is one of the first things you should do to identify a cause for any system problem.

Component	Command to view log
findface-extraction-api	sudo tail -f /var/log/syslog grep extraction-api
findface-sf-api	sudo tail -f /var/log/syslog grep sf-api
findface-tarantool-server	sudo tail -f /var/log/tarantool/FindFace.log
findface-video-manager	sudo tail -f /var/log/syslog grep video-manager
findface-video-worker	sudo tail -f /var/log/syslog grep video-worker
findface-security	sudo tail -f /var/log/syslog grep findface-security
findface-ntls	sudo tail -f /var/log/syslog grep ntls
findface-security	sudo tail -f /var/log/syslog grep security
etcd	sudo tail -f /var/log/syslog grep etcd

You can also consult audit log for each component. To do so, use the journalctl -u <component> command, for example:

```
journalctl -u findface-extraction-api
```

Important: In order to enable saving audit logs to your hard drive, uncomment and edit the Storage parameter in the /etc/systemd/journald.conf file:

```
sudo vi /etc/systemd/journald.conf
...
[Journal]
Storage=persistent
```

If necessary, uncomment and edit the SystemMaxUse parameter as well. This parameter determines the maximum volume of log files on your hard drive (10% by default).

```
SystemMaxUse=15
```

To view the FindFace Security audit logs, execute the following command:

```
journalctl -o verbose SYSLOG_IDENTIFIER=ffsecurity
```

When interpreting audit logs, first of all pay attention on the following parameters:

- REQUEST_USER: user who made the changes;
- REQUEST PATH: URL of the request;
- REQUEST_DATA: detailed information of the request.

In the log below, the admin user creates a dossier id=1879:

```
Fr 2017-12-22 17:53:32.436258 MSK [s=0b5566699751426983e13241301205e9;i=e26015;
→b=907c34cc1fde4398af63bb575587d9ba; m=246f620c449; t=560eefaf59bc5; x=ed60a136c8fc6362]
  PRIORITY=6
   UID=123
  _GID=130
   _CAP_EFFECTIVE=0
   _BOOT_ID=907c34cc1fde4398af63bb575587d9ba
   _MACHINE_ID=a3eea61c03e041ef8e64d5c72f5fce40
   _HOSTNAME=ntechadmin
  SYSLOG_IDENTIFIER=ffsecurity
  THREAD_NAME=MainThread
  _TRANSPORT=journal
  _PID=6579
  _COMM=findface-securi
  _EXE=/opt/ffsecurity/bin/python3
  _CMDLINE=/opt/ffsecurity/bin/python /opt/ffsecurity/bin/findface-security runworker
  _SYSTEMD_CGROUP=/system.slice/system-findface\x2dsecurity\x2dworker.slice/findface-
⇒security-worker@4.service
  _SYSTEMD_UNIT=findface-security-worker@4.service
   _SYSTEMD_SLICE=system-findface\x2dsecurity\x2dworker.slice
  CODE_FILE=/opt/ffsecurity/lib/python3.5/site-packages/ffsecurity/mixins.py
  CODE LINE=94
  CODE_FUNC=finalize_response
  REQUEST_USER=admin
  LOGGER=ffsecurity.audit
  MESSAGE=N8Be05il POST /dossier-faces/ 201 by admin
  REQUEST_DATA={ "dossier": "'1879'", "source_photo": "<InMemoryUploadedFile:...
\rightarrow14927016033292449.jpeg (image/jpeg)>"}
  REQUEST_PATH=/dossier-faces/
  REQUEST_ID=N8Be05il
   _SOURCE_REALTIME_TIMESTAMP=1513954412436258
```

In the next log, the list of faces is requested for the dossier id=1879:


(continues on next page)

```
_HOSTNAME=ntechadmin
  SYSLOG_IDENTIFIER=ffsecurity
  THREAD_NAME=MainThread
  _TRANSPORT=journal
  _COMM=findface-securi
  _EXE=/opt/ffsecurity/bin/python3
  _CMDLINE=/opt/ffsecurity/bin/python /opt/ffsecurity/bin/findface-security runworker
  \verb|_SYSTEMD_SLICE=system-findface\\ \verb|x2dsecurity\\ \verb|x2dworker.slice||
  _PID=6588
  _SYSTEMD_CGROUP=/system.slice/system-findface\x2dsecurity\x2dworker.slice/findface-
⇒security-worker@2.service
  _SYSTEMD_UNIT=findface-security-worker@2.service
  CODE_FILE=/opt/ffsecurity/lib/python3.5/site-packages/ffsecurity/mixins.py
  CODE_LINE=94
  CODE_FUNC=finalize_response
  REQUEST_USER=admin
  REQUEST_DATA={ }
  LOGGER=ffsecurity.audit
  MESSAGE=Dee7Qvy4 GET /dossier-faces/?dossier=1879&limit=1000 200 by admin
  REQUEST_ID=Dee7Qvy4
  REQUEST_PATH=/dossier-faces/?dossier=1879&limit=1000
  _SOURCE_REALTIME_TIMESTAMP=1513954412475467
```

1.8.7 Licensing

View and Update License

To view your current licensing information or upload a new license file, navigate to *Preferences -> License*.

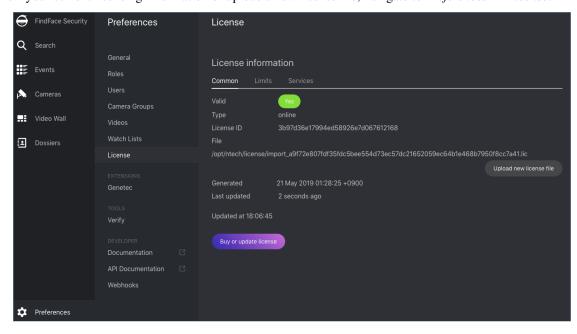

Troubleshoot Licensing and findface-ntls

When troubleshooting licensing and findface-ntls (see *Licensing Principles*), the first step is to retrieve the licensing information and findface-ntls status. You can do so by sending an API request to findface-ntls. Necessary actions are then to be undertaken, subject to the response content.

Tip: Please do not hesitate to contact our experts on troubleshooting by support@ntechlab.com.

To retrieve the FindFace Security *licensing* information and findface-ntls status, execute on the findface-ntls host console:

```
curl http://localhost:3185/license.json -s | jq
```

The response will be given in JSON. One of the most significant parameters is last_updated. It indicates in seconds how long ago the local license has been checked for the last time.

Interpret the last_updated value as follows:

- [0, 5] everything is alright.
- (5, 30] there may be some problems with connection, or with the local drive where the license file is stored.
- (30; 120] almost certainly something bad happened.
- $(120; \infty)$ the licensing source response has been timed out. Take action.
- "valid": false: connection with the licensing source was never established.

```
curl http://localhost:3185/license.json -s | jq
  "name": "NTLS",
  "time": 1520844897,
  "type": "offline (extended)",
  "license_id": "001278983",
  "generated": 487568400,
  "last_updated": 4,
  "valid": {
   "value": true,
   "description": ""
 },
  "source": "/ntech/license/001278983.lic",
  "limits": [
    {
      "type": "time",
      "name": "end",
      "value": 25343
   },
      "type": "number",
      "name": "faces",
      "value": 90071,
      "current": 230258
    },
    {
      "type": "number",
      "name": "cameras",
      "value": 9007,
      "current": 3
```

(continues on next page)

```
},
  {
    "type": "number",
    "name": "extraction_api",
    "value": 900,
    "current": 8
  },
    "type": "boolean",
    "name": "gender",
    "value": true
  },
    "type": "boolean",
    "name": "age",
    "value": true
  },
    "type": "boolean",
    "name": "emotions",
    "value": true
  },
    "type": "boolean",
    "name": "fast-index",
    "value": true
  }
],
"services": [
 {
    "name": "fkvideo-detector",
    "ip": "127.0.0.1:58970"
  },
    "name": "FindFace-tarantool",
    "ip": "127.0.0.1:58978"
  },
    "name": "findface-extraction-api",
    "ip": "127.0.0.1:52376"
  }
1
```

1.8.8 Automatic Tarantool Recovery

If your system architecture doesn't imply uninterrupted availability of Tarantool servers, it is recommended to enable automatic database recovery. In this case, each time an error occurs while reading a snapshot or xlog file, Tarantool will skip invalid records, read as much data as possible, and re-build the file.

To enable automatic database recovery, do the following:

1. Open the Tarantool configuration file.

```
sudo vi /etc/tarantool/instances.enabled/FindFace.lua
```

2. Uncomment force_recovery = true.

```
box.cfg{
   force_recovery = true,
}
```

1.8.9 Manually Purge Old Events from Database

Tip: To schedule automatic events cleanup, see *Automatic Events Cleanup*.

To manually remove old events from the FindFace Security database, use the cleanup_events utility.

To invoke the cleanup_events help message, execute:

```
sudo findface-security cleanup_events --help
usage: findface-security cleanup_events [-h] [--version] [-v {0,1,2,3}]
                                               [--settings SETTINGS]
                                               [--pythonpath PYTHONPATH]
                                               [--traceback] [--no-color]
                                               --age AGE
Delete old events
optional arguments:
            show this help message and exit
-h, --help
                     show program's version number and exit
--version
-v \{0,1,2,3\}, --verbosity \{0,1,2,3\}
                      Verbosity level; 0=minimal output, 1=normal output,
                      2=verbose output, 3=very verbose output
--settings SETTINGS The Python path to a settings module, e.g.
                      "myproject.settings.main". If this isn't provided, the
                      DJANGO_SETTINGS_MODULE environment variable will be
--pythonpath PYTHONPATH
                      A directory to add to the Python path, e.g.
                      "/home/djangoprojects/myproject".
--traceback
                      Raise on CommandError exceptions
--no-color
                      Don't colorize the command output.
                      Minimum age in days of events to clean up
--age AGE
```

In order to remove events older than a given number of days, use the --age option. For example, to remove events older than 5 days, execute:

```
sudo findface-security cleanup_events --age 5
```

1.9 Appendices

1.9.1 Enable Data Encryption

To ensure data security, it is recommended to enable SSL encryption. Do the following:

1. Under the nginx configuration directory, create a directory that will be used to hold all of the SSL data:

```
sudo mkdir /etc/nginx/ssl
```

2. Create the SSL key and certificate files:

```
sudo openssl req -x509 -nodes -days 365 -newkey rsa:2048 -keyout /etc/nginx/ssl/

-my-example-domain.com.key -out /etc/nginx/ssl/my-example-domain.com.crt
```

You will be asked a few questions about your server in order to embed the information correctly in the certificate. Fill out the prompts appropriately. The most important line is the one that requests the Common Name. You need to enter the domain name or public IP address that you want to be associated with your server. Both of the files you created (my-example-domain.com.key and my-example-domain.com.crt) will be placed in the /etc/nginx/ssl directory.

3. Configure nginx to use SSL. Open the nginx configuration file. Copy the code from the example below into the file.

```
sudo vi /etc/nginx/nginx.conf
upstream ffsecurity {
        server 127.0.0.1:8002;
# redirect from http to https version of the site
server {
        listen 80;
        server_name domain.ru www.domain.ru;
        rewrite ^(.*) https://domain.ru$1 permanent;
       access_log off;
server {
        listen 443 ssl;
        ssl_certificate
                           /etc/nginx/ssl/domain.pem;
        ssl_certificate_key /etc/nginx/ssl/domain.key;
        root /var/lib/ffsecurity;
        autoindex off;
        server_name domain.ru;
        location @ffsec {
                proxy_set_header Host $http_host;
                proxy_set_header X-Forwarded-For $remote_addr;
                proxy_set_header X-Forwarded-Proto $scheme;
                proxy_http_version 1.1;
                proxy_set_header Upgrade $http_upgrade;
                proxy_set_header Connection "upgrade";
                proxy_pass http://ffsecurity;
         location /static/ {
        location /uploads/ {
                add_header 'Access-Control-Allow-Origin' '*';
                add_header 'Access-Control-Allow-Methods' 'GET';
```

(continues on next page)

1.9. Appendices 91

```
add_header 'Access-Control-Allow-Headers' 'DNT, User-Agent, X-
Agequested-With, If-Modified-Since, Cache-Control, Content-Type, Range, Authorization

i';
add_header 'Access-Control-Expose-Headers' 'Content-Length,
Content-Range';
add_header 'Access-Control-Max-Age' 2592000;

} location /ui-static/ {
    alias /usr/share/ffsecurity-ui/ui-static/;
} location /doc/ {
    alias /opt/ffsecurity/doc/;
} location / {
    try_files $uri $uri/ @ffsec;
    client_max_body_size 100m;
    alias /usr/share/ffsecurity-ui/;
}
```

4. Restart nginx.

```
sudo service nginx restart
```

5. Edit the findface-security configuration file. In the EXTERNAL_ADDRESS parameter, substitute the http://prefix with https://.

```
sudo vi /etc/ffsecurity/config.py

EXTERNAL_ADDRESS="https://my-example-domain.com"
```

6. If there are running findface-video-worker services in the system, you need to either recreate cameras in the web interface, or change the router_url parameter in relevant video processing jobs, substituting the http:// prefix with https://. This can be done with the following command:

```
curl -s localhost:18810/jobs | jq -r '.[]["id"]' | xargs -I {} curl -X PATCH -d '{ \rightarrow "router_url": "https://domain.ru/video-detector/frame"}' http://localhost:18810/ \rightarrow job/{}
```

1.9.2 Components in Depth

findface-extraction-api

The findface-extraction-api service uses neural networks to detect a face in an image, extract face biometric data (feature vector), and recognize gender, age, emotions, and other features.

It interfaces with the findface-sf-api service as follows:

- Gets original images with faces and normalized face images.
- Returns the coordinates of the face bounding box, and (optionally) feature vector, gender, age and emotions data, should these data be requested by findface-sf-api.

Functionality:

- face detection in an original image (with return of the bbox coordinates),
- · face normalization,
- feature vector extraction from a normalized image,
- face feature recognition (gender, age, emotions, beard, glasses3, etc.).

The findface-extraction-api service can be based on CPU (installed from the findface-extraction-api package) or GPU (installed from the findface-extraction-api-gpu package). For both CPU- and GPU-accelerated services, configuration is done through the /etc/findface-extraction-api.ini configuration file. Its content varies subject to the acceleration type.

CPU-service configuration file:

```
allow_cors: false
detector_instances: 0
dlib:
 model: /usr/share/findface-data/normalizer.dat
 options:
   adjust_threshold: 0
   upsample_times: 1
extractors:
 instances: 1
 max_batch_size: 16
 models:
   age: ''
   emotions: ''
   face: face/elderberry_576.cpu.fnk
   gender: ''
 models_root: /usr/share/findface-data/models
fetch:
 enabled: true
 size_limit: 10485760
license_ntls_server: 127.0.0.1:3133
listen: 127.0.0.1:18666
max_dimension: 6000
 model: /usr/share/nnd/nnd.dat
 options:
   max_face_size: .inf
   min_face_size: 30
   o_net_thresh: 0.9
   p_net_max_results: 0
   p_net_thresh: 0.5
   r_net_thresh: 0.5
   scale_factor: 0.79
 quality_estimator: true
 quality_estimator_model: /usr/share/nnd/quality_estimator_v2.dat
ticker_interval: 5000
```

GPU-service configuration file:

1.9. Appendices 93

```
allow_cors: false
detector instances: 0
dlib:
 model: /usr/share/findface-data/normalizer.dat
  options:
   adjust_threshold: 0
   upsample_times: 1
extractors:
  instances: 2
  max_batch_size: 16
 models:
   age: ''
   emotions: ''
   face: face/elderberry_576.gpu.fnk
    gender: ''
  models_root: /usr/share/findface-data/models
fetch:
  enabled: true
  size_limit: 10485760
license_ntls_server: 127.0.0.1:3133
listen: 127.0.0.1:18666
max_dimension: 6000
nnd:
 model: /usr/share/nnd/nnd.dat
  options:
   max_face_size: .inf
   min_face_size: 30
   o_net_thresh: 0.8999999761581421
   p_net_max_results: 0
   p_net_thresh: 0.5
   r_net_thresh: 0.5
   scale_factor: 0.7900000214576721
  quality_estimator: true
  quality_estimator_model: /usr/share/nnd/quality_estimator_v2.dat
prometheus:
  faces_buckets:
  - 0
  - 1
  - 2
  - 5
  - 10
  - 20
  - 50
  - 75
  - 100
  - 200
  - 300
  - 400
  - 500
  - 600
  - 700
  - 800
  - 900
  - 1000
  resolution_buckets:
  - 10000
  - 20000
```

(continues on next page)

```
- 40000
  - 80000
  - 100000
  -20000
  -400000
  - 800000
  - 1e+06
  - 2e+06
  - 3e+06
  - 4e+06
  - 5e+06
  - 6e+06
  -8e+06
  -1e+07
  - 12000000.0
  - 15000000.0
  - 1800000.0
 - 2e+07
 - 3e+07
  -5e+07
  - 1e+08
 timing_buckets:
 - 0.001
  - 0.005
 - 0.01
 - 0.02
  - 0.03
  - 0.05
  - 0.1
 - 0.2
 - 0.3
 - 0.5
  - 0.75
  - 0.9
  - 1
  - 1.1
  - 1.3
  - 1.5
  - 1.7
  - 2
  - 3
  - 5
  - 10
  - 20
  - 30
  - 50
ticker_interval: 5000
```

When configuring $\label{eq:configuring} \mbox{findface-extraction-api (on CPU or GPU), refer to the following parameters:}$

1.9. Appendices 95

Pa-	Description
rame-	
ter	
nnd ->	Enables face quality estimation. In this case, findface-extraction-api returns a face quality
quality	y secure immehie cohetection_score field. Interpret the quality score further in analytics. Upright faces in
	frontal position are considered the best quality. They result in values around 0, mostly negative (such as
	-0.00067401276, for example). Inverted faces and large face angles are estimated with negative values
	some -5 and less.
nnd ->	The minimum size of a face (bbox) guaranteed to be detected. The larger the value, the less resources
min_fac	erequired for face detection.
nnd ->	The minimum size of a face (bbox) guaranteed to be detected.
max_fac	ce_size
license	The Inst_1sselincense server IP address and port.

You will also have to enable recognition models for face features such as gender, age, emotions, glasses3, and/or beard, subject to your needs. Be sure to choose the right acceleration type for each model, matching the acceleration type of findface-extraction-api: CPU or GPU. Be aware that findface-extraction-api on CPU can work only with CPU-models, while findface-extraction-api on GPU supports both CPU- and GPU-models.

```
models:
    age: faceattr/age.v1.cpu.fnk
    emotions: faceattr/emotions.v1.cpu.fnk
    face: face/elderberry_576.cpu.fnk
    gender: faceattr/gender.v2.cpu.fnk
    beard: faceattr/beard.v0.cpu.fnk
    glasses3: faceattr/glasses3.v0.cpu.fnk
```

The following models are available:

Face feature	Acceleration	Configuration file parameter
face (biometry)	CPU	face: face/elderberry_576.cpu.fnk
	GPU	face: face/elderberry_576.gpu.fnk
age	CPU	age: faceattr/age.v1.cpu.fnk
	GPU	age: faceattr/age.v1.gpu.fnk
gender	CPU	gender: faceattr/gender.v2.cpu.fnk
	GPU	gender: faceattr/gender.v2.gpu.fnk
emotions	CPU	emotions: faceattr/emotions.v1.cpu.fnk
	GPU	emotions: faceattr/emotions.v1.gpu.fnk
glasses3	CPU	glasses3: faceattr/glasses3.v0.cpu.fnk
	GPU	glasses3: faceattr/glasses3.v0.gpu.fnk
beard	CPU	beard: faceattr/beard.v0.cpu.fnk
	GPU	beard: faceattr/beard.v0.gpu.fnk

Tip: To disable a recognition model, simply pass an empty value to a relevant parameter. Do not remove the parameter itself as in this case the system will be searching for the default model.

```
models:
    gender: ""
    age: ""
    emotions: ""
```

findface-sf-api

The findface-sf-api service implements HTTP API for the FindFace core main functionality such as face detection and face recognition (the mentioned functions themselves are provided by *findface-extraction-api*'). It interfaces with the biometric database powered by Tarantool via the findface-tarantool-server service, as well as with findface-extraction-api (provides face detection and face recognition) and findface-upload (provides a storage for original images and FindFace core artifacts).

To detect a face in an image, you need to send the image in an API request to findface-sf-api. The findface-sf-api will then redirect the request to findface-extraction-api for face detection and recognition.

If there is a configured video face detection module in the system (like in FindFace Security), findface-sf-api also interfaces with the findface-facerouter service. It receives data of detected in video faces along with processing directives from findface-facerouter, and then executes the received directives, for example, saves faces into a specific database gallery.

Note: In FindFace Security, findface-facerouter functions are performed by findface-security.

Functionality:

- HTTP API implementation (face detection and face recognition methods, performed via findface-extraction-api).
- saving face data to the biometric database (performed via findface-tarantool-server),
- saving original images, face thumbnails and normalized face images to an NginX-powered web server (via findface-upload).
- provides interaction between all the FindFace core components.

The findface-sf-api configuration is done through the /etc/findface-sf-api.ini configuration file.

```
cache:
  inmemory:
   size: 16384
  memcache:
   nodes:
    - 127.0.0.1:11211
   timeout: 100ms
  redis:
   addr: localhost:6379
   db: 0
   network: tcp
   password: ''
   timeout: 5s
  type: memcache
extraction-api:
  extraction-api: http://127.0.0.1:18666
  timeouts:
   connect: 5s
    idle_connection: 10s
   overall: 35s
    response_header: 30s
limits:
  allow-return-facen: false
  body-image-length: 33554432
  deny-networks: 127.0.0.0/8,192.168.0.0/16,10.0.0.0/8,::1/128,fe00::/8
```

(continues on next page)

1.9. Appendices 97

```
url-length: 4096
listen: 127.0.0.1:18411
normalized-storage:
 enabled: true
 s3:
   access-key: ''
   bucket-name: ''
   endpoint: ''
   operation-timeout: 30
   public-url: ''
   region: ''
   secret-access-key: ''
   secure: true
 type: webdav
 webdav:
   timeouts:
     connect: 5s
     idle_connection: 10s
     overall: 35s
     response_header: 30s
   upload-url: http://127.0.0.1:3333/uploads/
storage-api:
 max-idle-conns-per-host: 20
 shards:
 - master: http://127.0.0.1:8101/v2/
   slave: ''
  - master: http://127.0.0.1:8102/v2/
   slave: ''
 timeouts:
   connect: 5s
   idle_connection: 10s
   overall: 35s
   response_header: 30s
```

When configuring findface-sf-api, refer to the following parameters:

Parameter	Description
extraction-api ->	IP address of the findface-extraction-api host.
extraction-api	
storage-api -> shards	IP address of the findface-tarantool-server master shard.
-> master	
storage-api -> shards	IP address of the findface-tarantool-server replica shard.
-> slave	
limits ->	The maximum size of an image in an API request, bytes.
body-image-length	
upload_url	WebDAV NginX path to send original images, thumbnails and normalized face
	images to the findface-upload service.

findface-tarantool-server

The findface-tarantool-server service provides interaction between the findface-sf-api service and the Tarantool-based biometric database in the following way:

Tip: See Tarantool official documentation for details.

- From findface-sf-api, findface-tarantool-server receives data, such as information of detected in video faces, to write into the biometric database.
- By request from findface-sf-api, findface-tarantool-server performs database searches and returns search results.

To increase search speed, multiple findface-tarantool-server shards can be created on each Tarantool host. Their running concurrently leads to a remarkable increase in performance (70x-100x).

Functionality:

- saving face data to the biometric database,
- · database search,
- implementation of direct API requests to the database (see *Direct API Requests to Tarantool*).

The findface-tarantool-server configuration is done through the /etc/tarantool/instances. enabled/<shard-*>.lua configuration file. In a cluster environment, configuration has to be done for each shard.

```
-- Please, read the tarantool cfg doc:
-- https://tarantool.org/doc/reference/configuration/index.html#box-cfg-params
box.cfq{
   --port to listen, direct tarantool access
   --Only need for admin operations
   -- THIS IS NOT PORT YOU NEED FOR facenapi/sf-api
   listen = '127.0.0.1:33001',
   --Directory to store data
   vinyl_dir = '/opt/ntech/var/lib/tarantool/shard-001',
   work_dir = '/opt/ntech/var/lib/tarantool/shard-001',
   memtx_dir = '/opt/ntech/var/lib/tarantool/shard-001/snapshots',
   wal_dir = '/opt/ntech/var/lib/tarantool/shard-001/xlogs',
    --Maximum mem usage in bytes
   memtx\_memory = 200 * 1024 * 1024,
    checkpoint_interval = 3600 * 4,
   checkpoint_count = 3,
    --uncomment only if you know what you are doing!!! and don't forget box.snapshot()
    -- wal_mode = 'none',
    --if true, tarantool tries to continue if there is an error while reading a.
→snapshot/xlog files: skips invalid records, reads as much data as possible and re-
\hookrightarrowbuilds the file
    -- force_recovery = true,
pcall(function() box.schema.user.grant('guest', 'execute, read, write', 'universe') end)
dofile("/etc/ffsecurity/tnt_schema.lua")
```

(continues on next page)

1.9. Appendices 99

```
-- host,port to bind for http server
-- this is what you need for facenapi
FindFace = require("FindFace")
FindFace.start("127.0.0.1", 8101, {
    license_ntls_server="127.0.0.1:3133",
    facen_size=576,
    meta_scheme = meta_scheme
})
```

When configuring findface-tarantool-server, refer to the following parameters:

Pa-	Description
rame-	
ter	
memtx_	mMaximum RAM that can be used by a Tarantool shard. Set in bytes, depending on the number of faces
	the shard handles. Consult our experts by support@ntechlab.com before setting this parameter.
force_	remables raytomatic database recovery. In this case, each time an error occurs while reading a snapshot or
	xlog file, Tarantool will skip invalid records, read as much data as possible, and re-build the file.
licens	elPraddress and port of the findface-ntls license server.
facen_	sheature vector size. Before editing this parameter, be sure to consult NTechLab experts.
meta_s	And tabase structure to store the face recognition results. The structure is created as a set of fields.
	Describe each field with the following parameters: id: field id; name: field name, must be the same
	as the name of a relevant face parameter; field_type: data type; default: field default value, if a
	default value exceeds '1e14 – 1', use a string data type to specify it, for example, "123123" instead
	of 123123

Default database structure is passed from /etc/ffsecurity/tnt_schema.lua to the meta_scheme parameter.

findface-upload

The findface-upload component is an NginX-based web server used as a storage for original images, thumbnails and normalized face images which it receives from the findface-sf-api component.

By default the original images, thumbnails and normalized images are stored at /var/lib/ffupload/uploads/.

The findface-upload component is automatically configured upon installation. Custom configuration is not supported.

Video face detection: findface-video-manager and findface-video-worker

Note: The findface-video-worker is delivered in a CPU-accelerated (findface-video-worker) and a GPU-accelerated (findface-video-worker-gpu) packages.

In this section:

- Functions of findface-video-manager
- Functions of findface-video-worker
- Configure Video Face Detection

Functions of findface-video-manager

The findface-video-manager service is the part of the video face detection module that is used for managing the video face detection functionality.

The findface-video-manager service interfaces with findface-video-worker as follows:

- It supplies findface-video-worker with settings and the list of to-be-processed video streams. To do so, it issues a so-called job, a video processing task that contains configuration settings and stream data.
- In a distributed system, it distributes video streams (jobs) across vacant findface-video-worker instances.

Note: Configuration settings passed via jobs have priority over the findface-video-manager configuration file.

The findface-video-mananger service functioning requires ETCD, third-party software that implements a distributed key-value store for findface-video-manager. In the FindFace core, ETCD is used as a coordination service, providing the video face detector with fault tolerance.

Functionality:

- allows for configuring video face detection parameters,
- allows for managing the list of to-be-processed video streams,
- implements video face detection management.

Functions of findface-video-worker

The findface-video-worker (or findface-video-worker-gpu) service is the part of the video face detection module, which recognizes faces in video. It can work with both live streams and files, and supports most video formats and codecs that can be decoded by FFmpeg.

The findface-video-worker service interfaces with the findface-video-manager and findface-facerouter services as follows:

- By request, findface-video-worker gets a job with settings and the list of to-be-processed video streams from findface-video-manager.
- The findface-video-worker posts extracted normalized face images, along with the full frames and meta data (such as bbox, camera ID and detection time) to the findface-facerouter service for further processing.

Note: In FindFace Security, the findface-facerouter functions are performs by findface-security.

Functionality:

· detects faces in video,

1.9. Appendices 101

- extracts normalized face images,
- searches for the best face snapshot,
- snapshot deduplication (only one snapshot per face detection event).

When processing video, findface-video-worker consequently uses the following algorithms:

- **Motion detection**. Used to reduce resource consumption. Only when the motion detector recognizes motion of certain intensity that the face tracker can be triggered.
- Face tracking. The face tracker tracks, detects and captures faces in video. It can simultaneously be working with several faces. It also searches for the best face snapshot, using an embedded neural network. After the best face snapshot is found, it is posted to findface-facerouter.

The best face snapshot can be found in one of the following modes:

- · Real-time
- Offline

Real-Time Mode

In the real-time mode, findface-video-worker posts a face immediately after it appears in the camera field of view.

- If rt-perm=True, the face tracker searches for the best face snapshot within each time period equal to rt-delay and posts it to findface-facerouter.
- If rt-perm=False, the face tracker searches for the best face snapshot dynamically:
 - 1. First, the face tracker estimates whether the quality of a face snapshot exceeds a pre-defined threshold value. If so, the snapshot is posted to findface-facerouter.
 - 2. The threshold value increases after each post. Each time the face tracker gets a higher quality snapshot of the same face, it is posted.
 - 3. When the face disappears from the camera field of view, the threshold value resets to default.

By default, the real-time mode is disabled (realtime=false in the /etc/findface-video-manager. conf file).

Offline Mode

The offline mode is less storage intensive than the real-time one as in this mode findface-video-worker posts only one snapshot per track, but of the highest quality. In this mode, the face tracker buffers a video stream with a face in it until the face disappears from the camera field of view. Then the face tracker picks up the best face snapshot from the buffered video and posts it to findface-facerouter.

By default, the offline mode is enabled (overall=true in the /etc/findface-video-manager.conf file).

Configure Video Face Detection

The video face detector configuration is done through the following configuration files:

1. The findface-video-manager configuration file /etc/findface-video-manager.conf:

```
etcd:
 dial_timeout: 3s
 endpoints: 127.0.0.1:2379
exp_backoff:
 enabled: false
 factor: 2
 flush_interval: 2m0s
 max_delay: 1m0s
 min_delay: 1s
job_scheduler_script: ''
kafka:
 enabled: false
 endpoints: 127.0.0.1:9092
listen: 127.0.0.1:18810
master:
 lease_ttl: 10
 self_url: 127.0.0.1:18811
 self_url_http: 127.0.0.1:18811
ntls:
 enabled: false
 update_interval: 1m0s
 url: http://127.0.0.1:3185/
prometheus:
 jobs_processed_duration_buckets:
 - 1
 - 30
 - 60
 - 500
 - 1800
 - 3600
 - 21600
 - .inf
router_url: http://127.0.0.1:18820/v0/frame
heart_beat_timeout: 4s
listen: 127.0.0.1:18811
stream_settings:
 additional_body: []
 additional_headers: []
 api_ssl_verify: true
 api_timeout: 15000
 det_period: 8
 disable_drops: false
 draw_track: false
 fd_frame_height: -1
 ffmpeg_format: ''
 ffmpeg_params: []
 image_arg: photo
  jpeg_quality: 95
 max_candidates: 0
 max_face_size: 0
 md_scale: 0.3
 md_threshold: 0.002
 min_d_score: -1000
 min_face_size: 0
 min_score: -2
 npersons: 4
```

(continues on next page)

1.9. Appendices 103

```
only_norm: false
 overall: true
 parse_sei: false
 post_uniq: true
 realtime: false
 realtime_dly: 500
 realtime_post_perm: false
 roi: ''
 rot: ''
 send_track: 0
 tracker_threads: 4
 uc_max_avg_shift: 10
 uc_max_dup: 3
 uc_max_time_diff: 30
stream_settings_gpu:
 ffmpeg_format: ''
 ffmpeg_params: []
 filter_max_face_size: 8192
 filter_min_face_size: 1
 filter_min_quality: -2
 imotion_threshold: 0
  jpeg_quality: 95
 normalized_only: false
 overall_only: false
 play_speed: -1
 realtime_post_every_interval: false
 realtime_post_interval: 1
 roi: ''
 rot: ''
 router_body: []
 router_headers: []
 router_timeout_ms: 15000
 router_verify_ssl: true
 start_stream_timestamp: 0
 use_stream_timestamp: false
```

When configuring findface-video-manager, refer to the following parameters:

Option	Description		
router_url	IP address and port of the findface-facerouter host to receive de-		
	tected faces from findface-video-worker. In FindFace Security,		
	findface-facerouter functions are performed by findface-security.		
	Default value : http://127.0.0.1:18820/v0/frame.		
etcd ->	IP address and port of the etcd service. Default value: 127.0.0.1:2379.		
endpoints			
ntls ->	If true, findface-video-manager will send a job to		
enabled	findface-video-worker only if the total number of processed cameras		
	does not exceed the allowed number of cameras from the license. Default value: false.		
ntls->url	IP address and port of the findface-ntls host. Default value: http://127.0.		
	0.1:3185/.		

2. If you opt for the CPU-accelerated package findface-video-worker, use the /etc/findface-video-worker.ini configuration file:

```
ntls-addr=127.0.0.1:3133
mgr-static=127.0.0.1:18811
capacity=10
#mgr-exec=shell command with arguments
```

If you opt for the GPU-accelerated package findface-video-worker-gpu, use the /etc/findface-video-worker-gpu.ini configuration file.

```
## cuda device number
device_number = 0
## read streams from file, do not use VideoManager
input =
## exit on first finished job, only when --input specified
exit_on_first_finished = false
## models directory
models_dir = /usr/share/findface-gpudetector/models
## batch size
batch\_size = 1
## http server port for metrics, 0=do not start server
metrics_port = 0
## resize scale, 1=do not resize
resize_scale = 1.0
## maximum number of streams
capacity = 30
## command to obtain videomanager's grpc ip:port
mgr\_cmd =
## videomanager grpc ip:port
mgr_static = 127.0.0.1:18811
## ntls server ip:port
ntls_addr = 127.0.0.1:3133
## debug: save faces to dir
save_dir =
## minimum face size
min_face_size = 60
## preinit detector for specified resolutions: "640x480;1920x1080"
resolutions =
# worker labels: "k=v;group=enter"
labels =
## use timestamps from SEI packet
use_time_from_sei = false
```

(continues on next page)

1.9. Appendices 105

```
[streamer]
## streamer server port, 0=disabled
port = 9999
## streamer url - how to access this worker on streamer_port
url = ws://127.0.0.1:9999/stream/
[liveness]
#-----
## path to liveness fnk
fnk =
## liveness threshold
threshold = 0.945
## liveness internal algo param
interval = 1.0
## liveness internal algo param
stdev_cnt = 1
#-----
[video_decoder]
#-----
## decode video on cpu
cpu = false
#-----
[send]
#-----
## posting faces threads
threads = 8
## posting faces maximum queue size
queue_limit = 256
#-----
[tracker]
## max face miss duration, sec
miss_interval = 1.0
## overlap threshold
overlap_threshold = 0.25```
```

When configuring findface-video-worker/findface-video-worker-gpu, refer to the following parameters:

Param-	Description						
eter							
ntls-addIP address and port of the findface-ntls host.							
mgr-sta	tlPc address of the findface-video-manager host to provide						
	findface-video-worker with settings and the list of to-be-processed streams.						
capacityMaximum number of video streams to be processed by findface-video-worker.							
mgr-exec(Optional, instead of the mgr-static parameter) A script to describe dynamic IP address of							
	the findface-video-manager host.						
labels	(Only for GPU, optional). Labels used to allocate a video face detector instance to a certain						
	group of cameras. See Allocate findface-video-worker to Camera Group.						
fnk	(Only for GPU, optional). Path to the face <i>liveness</i> detector.						

findface-ntls

The findface-ntls service is to be installed on a designated host to verify the FindFace license. For verification purposes, findface-ntls uses one of the following sources:

- Ntech Lab global license center if you opt for the online licensing, direct or via a proxy server.
- USB dongle if you opt for the on-premise licensing.

Use the main web interface to manage findface-ntls:

- view the list of purchased features,
- view license limitations,
- upload a license file,
- view the list of currently active components.

The following components are licensable:

- findface-tarantool-server,
- findface-extraction-api,
- findface-video-manager,
- findface-video-worker.

Important: After connection between findface-ntls and a licensable component, or between findface-ntls and the global license server is broken, you will have 6 hours to restore it before the licensable components will be automatically stopped.

The findface-ntls configuration is done through a configuration file /etc/findface-ntls.cfg.

```
# Listen address of NTLS server where services will connect to.
# The format is IP:PORT
# Use 0.0.0.0:PORT to listen on all interfaces
# This parameter is mandatory and may occur multiple times
# if you need to listen on several specific interfaces or ports.
listen = 127.0.0.1:3133
# Directory with license files.
# NTLS use most recently generated one.
```

(continues on next page)

1.9. Appendices 107

```
# Note: "recentness" of a license file is detected not by
# mtime/ctime but from its internal structure.
#
# This parameter is mandatory and must occur exactly once.
license-dir = /opt/ntech/license

# You can specify proxy which NTLS will use to access
# global license server. The syntax is the same that is used by curl.
# Proxy is optional
#proxy = http://192.168.1.1:12345

# This is bind address for NTLS web-interface.
# Note: there're no authorization or access restriction mechanisms
# in NTLS UI. If you need one, consider using nginx as proxy
# with .htaccess / ip-based ACLs.
# This parameter may be specified multiple times.
ui = 127.0.0.1:3185
```

When configuring findface-ntls, refer to the following parameters:

Parameter	Description				
listen	IP address from which licensable services access findface-ntls. To allow access from any IP				
	address, use 0.0.0:3133.				
license_d	icense_diDirectory to store a license file.				
proxy	(Optional) IP address and port of your proxy server.				
ui	IP address from which accessing the findface-ntls web interface must originate. To allow				
	access from any remote host, set "0.0.0.0".				

findface-security

The findface-security component serves as a gateway to the FindFace core. It provides interaction between the FindFace Core and the web interface, the system functioning as a whole, HTTP and web socket (along with Django), database update, and *webhooks*.

The findface-security component also performs the functions of findface-facerouter (part of the FindFace Core), setting processing directives for detected faces. It accepts a face bbox and normalized image along with the original image and other data (for example, the detection date and time) from the findface-video-worker service and redirect them to findface-sf-api for further processing.

The findface-security configuration is done through the /etc/ffsecurity/config.py configuration file.

```
sudo vi /etc/ffsecurity/config.py

MEDIA_ROOT = "/var/lib/ffsecurity/uploads"
STATIC_ROOT = "/var/lib/ffsecurity/static"

EXTERNAL_ADDRESS = "http://172.20.77.58"

DEBUG = False

LANGUAGE_CODE = 'en-us'

TIME_ZONE = 'UTC'
```

(continues on next page)

```
DATABASES = {
   'default': {
       'ENGINE': 'django.db.backends.postgresql',
       'NAME': 'ffsecurity',
   }
}
# use pwgen -sncy 50 1/tr "'" "." to generate your own unique key
SECRET KEY = 'c8b533847bbf7142102de1349d33a1f6'
FFSECURITY = {
   'VIDEO_DETECTOR_TOKEN': '381b0f4a20495227d04185ab02f5085f',
   'CONFIDENCE_THRESHOLD': 0.75,
   'MINIMUM DOSSIER QUALITY': -2,
   'IGNORE_UNMATCHED': False,
   'EXTRACTION_API': 'http://127.0.0.1:18666/',
   'VIDEO_MANAGER_ADDRESS': 'http://127.0.0.1:18810',
   'EVENTS_MAX_AGE': 30,
   'NTLS_HTTP_URL': 'http://127.0.0.1:3185',
   'ROUTER_URL': 'http://172.20.77.58',
   'MONITORING_UPDATE_INTERVAL': 60,
   'SF_API_ADDRESS': 'http://127.0.0.1:18411',
   'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'],
   'LIVENESS_THRESHOLD': 0.945,
   'BEARD_THRESHOLD': 0.7,
ASGI\_THREADS = 16
UVICORN_SETTINGS = {
  'workers': 4,
   'host': 'localhost',
   'port': 8002,
FFSECURITY_UI_CONFIG = {
   "event": {
       "features": {
           "f_gender_class": ["male", "female"],
           "age": {
               "f_age_gte": "",
               "f age lte": ""
           "f_emotions_class": ["angry", "disgust", "fear", "happy", "sad",

→ "surprise"],
           "f_glasses_class": ["none", "eye", "sun"],
           "f_beard_class": ["none", "beard"],
           "f_liveness_class": ["real", "fake"],
       }
   }
# integration plugins
INSTALLED_APPS.append('ffsecurity_genetec') # remove or comment out this_
→line to disable genetec integration
```

1.9. Appendices 109

When configuring findface-security, refer to the following parameters:

Pa-	Description				
rame-					
ter					
EXTERN	AExADDATE address or URL that will be used to access the FindFace Security web interface.				
VIDEO_	DETAILED THE BRIDGE face detection module, come up with a token and specify it here.				
VIDEO_I	MANAGTR <u>ss</u> ATDRESSndface-video-manager host.				
NTLS_H	TTP <u>a</u> dthress of the findface-ntls host.				
ROUTER	_MRLaddress of the findface-security host that will receive detected faces from the				
	findface-video-worker instance(s). Specify either external or internal IP address, subject to				
	the network through which findface-video-worker interacts with findface-security.				
	_APD address of the findface-sf-api host.				
IGNORE Disable logging events for faces which have no match in the dossiers (negative verification result). Set					
	true if the system has to process a large number of faces.				
	ENFAGE_STANDENSHYCThreshold for verification				
MINIMU	M.MioinsumRqualityLofTaY face in a dossier photo. Photos containing faces of worse quality will be re-				
	jected when uploading to a dossier. Upright faces in frontal position are considered the best qual-				
	ity. They result in values around 0, mostly negative (such as -0.00067401276, for example). In-				
	verted faces and large face angles are estimated with negative values some -5 and less. By default,				
	'MINIMUM_DOSSIER_QUALITY': -2 which is the average quality.				
EVENTS_	_HEYOTUMBBled recognition models in the findface-extraction-api configuration file, list them				
	here.				
LIVENE	SInt in the stimate a face liveness with a certain level of confidence. Depending on the				
	confidence threshold, it will return a binary result real or fake.				
BEARD_	THE SHESE DEEP of a beard on a face is determined with a certain level of confidence. Depending on the				
	confidence threshold, the system returns a binary result none or beard.				

Warning: The FFSECURITY section must end with the EVENTS_FEATURES/ LIVENESS_THRESHOLD/ BEARD_THRESHOLD parameters which have to be given in this very order.

```
'SF_API_ADDRESS': 'http://127.0.0.1:18411',

'EVENTS_FEATURES': ['gender', 'age', 'emotions', 'beard', 'glasses'],

'LIVENESS_THRESHOLD': 0.945,

'BEARD_THRESHOLD': 0.7,
```

1.9.3 Installation File

FindFace Security installation configuration is automatically saved to a file / tmp / findface-installer-*>. json. You can edit this file and use it to install FindFace Security on other hosts without having to answer the installation questions again.

Tip: See *Deploy from Console Installer* to learn more about the FindFace Security installer.

Important: Be sure to remove fields *.config, exp_ip, and int_ip before installing FindFace Security on a host with a different IP address.

Here is an example of the installation file:

```
"findface-security.config": {
  "EXTERNAL_ADDRESS": "http://172.20.77.17"
},
"product": "security",
"ext_ip.bind": "0.0.0.0",
"findface-ntls.config": {
  "NTLS_LISTEN": "127.0.0.1:3133",
  "NTLS_LISTEN_UI": "127.0.0.1:3185",
  "NTLS_LICENSE_DIR": "/opt/ntech/license"
},
"components": [
  "findface-data",
  "memcached",
  "etcd",
  "redis",
  "postgresql",
  "findface-ntls",
  "findface-extraction-api",
  "findface-sf-api",
  "findface-upload",
  "findface-video-manager",
  "findface-video-worker",
  "findface-security",
  "findface-tarantool-server"
],
"memcached.config": {
  "max_memory": 1024,
  "listen_host": "127.0.0.1",
  "item_size": 16
},
"findface-video-manager.config": {
  "listen": "127.0.0.1:18810",
  "master": {
    "self_url_http": "127.0.0.1:18811",
    "self_url": "127.0.0.1:18811"
  },
  "rpc": {
    "listen": "127.0.0.1:18811"
  "ntls": {
    "url": "http://127.0.0.1:3185/",
    "enabled": false
  }
},
"findface-video-worker.variant": "cpu",
"findface-extraction-api.variant": "cpu",
"ignore_lowmem": true,
"findface-video-worker.config": {
  "FKVD_WRK_CAP": "10",
  "FKVD_MGR_ADDR": "127.0.0.1:18811",
  "FKVD_NTLS_ADDR": "127.0.0.1:3133"
"findface-extraction-api.config": {
  "listen": "127.0.0.1:18666",
  "extractors": {
```

(continues on next page)

1.9. Appendices

```
"instances": 1,
    "models": {
      "gender": "",
      "face": "face/elderberry_576.cpu.fnk",
     "age": "",
      "emotions": ""
    }
 },
  "nnd": {
   "quality_estimator": true
  "license_ntls_server": "127.0.0.1:3133"
},
"ext_ip.advertised": "172.20.77.17",
"findface-tarantool-server.config": {
  "shard-002": {
    "TNT_META_SCHEME": "meta_scheme",
    "TNT_LISTEN": "127.0.0.1:33002",
    "TNT_FF_LISTEN_IP": "127.0.0.1",
    "TNT_EXTRA_LUA": "\ndofile(\"/etc/ffsecurity/tnt_schema.lua\")\n",
    "TNT_FF_NTLS": "127.0.0.1:3133",
    "TNT_DATA_DIR": "/opt/ntech/var/lib/tarantool/shard-002",
    "TNT_FF_LISTEN_PORT": "8102"
  },
  "shard-001": {
   "TNT_META_SCHEME": "meta_scheme",
    "TNT_LISTEN": "127.0.0.1:33001",
    "TNT FF LISTEN IP": "127.0.0.1",
    "TNT_EXTRA_LUA": "\ndofile(\"/etc/ffsecurity/tnt_schema.lua\")\n",
    "TNT_FF_NTLS": "127.0.0.1:3133",
    "TNT_DATA_DIR": "/opt/ntech/var/lib/tarantool/shard-001",
    "TNT_FF_LISTEN_PORT": "8101"
  }
},
"tnt_instances": 2,
"inter_ip.bind": "127.0.0.1",
"type": "stand-alone",
"findface-sf-api.config": {
 "listen": "127.0.0.1:18411",
  "extraction-api": {
    "extraction-api": "http://127.0.0.1:18666"
 },
  "storage-api": {
    "shards": [
        "master": "http://127.0.0.1:8101/v2/",
        "slave": ""
      },
        "master": "http://127.0.0.1:8102/v2/",
        "slave": ""
    1
  }
},
"findface-facerouter.config": {
  "plugin_source": "dir",
```

(continues on next page)

```
"port": "18820",
    "plugin_dir": "/etc/findface-facerouter-plugins",
    "sfapi_url": "http://127.0.0.1:18411",
    "host": "127.0.0.1"
},
    "inter_ip.advertised": "127.0.0.1"
}
```

1.9.4 Neural Network Models

Here you can see a summary for neural network models created by our Lab and used in FindFace Security:

Note: The CPU and GPU benchmark setup is the following:

- CPU Intel® CoreTM i7-5930K CPU @ 3.50GHz × 12
- GPU GeForce GTX 1080

Warning: Strictly not recommended to use face/elderberry_160 for work.

Model	CPU, FPS	GPU, FPS	Туре
face/elderberry_160	14.99	204.98	Face biometrics
face/elderberry_576	2.07	71.14	
faceattr/age.v1	14.99	529.35	Age recognition
faceattr/beard.v0	15.03	532.05	Beard recognition
faceattr/emotions.v1	10.99	235.59	Emotions recognition
faceattr/gender.v2	15.01	523.22	Gender recognition
faceattr/glasses3.v0	15.01	529.64	Glasses recognition

1.9.5 Biometric Database Galleries

There are 3 galleries in the Tarantool-based biometric database:

- ffsec_dossier_face: biometric samples extracted from dossier photos.
- ffsec events: biometric samples extracted from faces in video.
- ffsec_monitoring: biometrics samples from all dossiers under watch (active).

1.9.6 Backup Options

To backup the biometric database, you need the findface-storage-api-dump utility. It can be launched with the following options:

Note: You can find the detailed information on the findface-storage-api-dump usage in *Biometric Database Backup and Restore*.

1.9. Appendices 113

```
findface-storage-api-dump --help
Usage of findface-storage-api-dump:
 -cache string
       Cache type: inmemory, redis or memcache (default "memcache")
 -cache-inmemory-size int
       Maximum number of items in ARC cache (default 16384)
 -cache-memcache-nodes value
       Comma-separated list of memcache shards (default 127.0.0.1:11211)
 -cache-memcache-timeout duration
       Specifies read/write timeout (default 100ms)
 -cache-redis-addr string
       Host:Port address (default "localhost:6379")
  -cache-redis-db int
       Database to be selected after connecting to the server.
 -cache-redis-network string
       Network type, either tcp or unix (default "tcp")
 -cache-redis-password string
       Optional password. Must match the password specified in the requirepass.
→server configuration option.
 -cache-redis-timeout duration
       Specifies dial/read/write timeout (default 5s)
 -config string
       Path to config file
 -config-template
       Output config template and exit
 -extraction-api-extraction-api string
       Extraction API address (default "http://127.0.0.1:18666")
 -extraction-api-timeouts-connect duration
       extraction-api-timeouts-connect (default 5s)
 -extraction-api-timeouts-idle-connection duration
       extraction-api-timeouts-idle-connection (default 10s)
 -extraction-api-timeouts-overall duration
       extraction-api-timeouts-overall (default 35s)
 -extraction-api-timeouts-response-header duration
       extraction-api-timeouts-response-header (default 30s)
 -limits-allow-return-facen
       Allow returning raw feature vectors to detect responses if ?return_facen=true
 -limits-body-image-length int
       Maximum length of image supplied in request body (default 33554432)
 -limits-deny-networks string
       Comma-separated list of subnets that are not allowed to fetch from (default
→"127.0.0.0/8,192.168.0.0/16,10.0.0.0/8,::1/128,fe00::/8")
 -limits-url-length int
       Maximum supported url length in bytes (default 4096)
 -listen string
       IP:port to listen on (default ":18411")
 -normalized-storage-enabled
       Enables normalize saving (default true)
 -normalized-storage-s3-access-key string
       Access key for the object storage
 -normalized-storage-s3-bucket-name string
       S3 storage bucket name
 -normalized-storage-s3-endpoint string
       S3 compatible object storage endpoint
 -normalized-storage-s3-operation-timeout int
       Storage operations (Get, Put, Delete) timeout in seconds (default 30)
```

(continues on next page)

```
-normalized-storage-s3-public-url string
       Storage public url
 -normalized-storage-s3-region string
       Storage region
 -normalized-storage-s3-secret-access-key string
       Secret key for the object storage
 -normalized-storage-s3-secure
       If 'true' API requests will be secure (HTTPS), and insecure (HTTP) otherwise,
→ (default true)
 -normalized-storage-webdav-timeouts-connect duration
       normalized-storage-webdav-timeouts-connect (default 5s)
 -normalized-storage-webdav-timeouts-idle-connection duration
       normalized-storage-webdav-timeouts-idle-connection (default 10s)
 -normalized-storage-webdav-timeouts-overall duration
       normalized-storage-webdav-timeouts-overall (default 35s)
 -normalized-storage-webdav-timeouts-response-header duration
       normalized-storage-webdav-timeouts-response-header (default 30s)
 -normalized-storage-webdav-upload-url string
       webdav storage for normalized, disable normalized if empty string (default
→"http://127.0.0.1:3333/uploads/")
 -normalized_storage string
       Normalized storage type: webdav, s3 (default "webdav")
 -storage-api-max-idle-conns-per-host int
       storage-api-max-idle-conns-per-host (default 20)
 -storage-api-timeouts-connect duration
       storage-api-timeouts-connect (default 5s)
 -storage-api-timeouts-idle-connection duration
       storage-api-timeouts-idle-connection (default 10s)
 -storage-api-timeouts-overall duration
       storage-api-timeouts-overall (default 35s)
 -storage-api-timeouts-response-header duration
       storage-api-timeouts-response-header (default 30s)
```

1.9.7 Restore Options

To restore the biometric database from a backup, you need the findface-storage-api-restore utility. It can be launched with the following options:

Note: You can find the detailed information on the findface-storage-api-restore usage in *Biometric Database Backup and Restore*.

```
findface-storage-api-restore --help
Usage of findface-storage-api-restore:
   -cache string
        Cache type: inmemory, redis or memcache (default "memcache")
   -cache-inmemory-size int
        Maximum number of items in ARC cache (default 16384)
   -cache-memcache-nodes value
        Comma-separated list of memcache shards (default 127.0.0.1:11211)
   -cache-memcache-timeout duration
        Specifies read/write timeout (default 100ms)
   -cache-redis-addr string
        Host:Port address (default "localhost:6379")
```

(continues on next page)

1.9. Appendices 115

```
-cache-redis-db int
       Database to be selected after connecting to the server.
 -cache-redis-network string
       Network type, either tcp or unix (default "tcp")
 -cache-redis-password string
       Optional password. Must match the password specified in the requirepass.
⇒server configuration option.
 -cache-redis-timeout duration
       Specifies dial/read/write timeout (default 5s)
 -config string
       Path to config file
 -config-template
       Output config template and exit
 -extraction-api-extraction-api string
       Extraction API address (default "http://127.0.0.1:18666")
 -extraction-api-timeouts-connect duration
       extraction-api-timeouts-connect (default 5s)
 -extraction-api-timeouts-idle-connection duration
       extraction-api-timeouts-idle-connection (default 10s)
 -extraction-api-timeouts-overall duration
       extraction-api-timeouts-overall (default 35s)
 -extraction-api-timeouts-response-header duration
       extraction-api-timeouts-response-header (default 30s)
 -limits-allow-return-facen
       Allow returning raw feature vectors to detect responses if ?return_facen=true
 -limits-body-image-length int
       Maximum length of image supplied in request body (default 33554432)
 -limits-deny-networks string
       Comma-separated list of subnets that are not allowed to fetch from (default
→"127.0.0.0/8,192.168.0.0/16,10.0.0.0/8,::1/128,fe00::/8")
 -limits-url-length int
       Maximum supported url length in bytes (default 4096)
 -listen string
       IP:port to listen on (default ":18411")
 -normalized-storage-enabled
       Enables normalize saving (default true)
 -normalized-storage-s3-access-key string
       Access key for the object storage
 -normalized-storage-s3-bucket-name string
       S3 storage bucket name
 -normalized-storage-s3-endpoint string
       S3 compatible object storage endpoint
 -normalized-storage-s3-operation-timeout int
       Storage operations (Get,Put,Delete) timeout in seconds (default 30)
 -normalized-storage-s3-public-url string
       Storage public url
 -normalized-storage-s3-region string
       Storage region
 -normalized-storage-s3-secret-access-key string
       Secret key for the object storage
 -normalized-storage-s3-secure
       If 'true' API requests will be secure (HTTPS), and insecure (HTTP) otherwise.
→ (default true)
 -normalized-storage-webdav-timeouts-connect duration
       normalized-storage-webdav-timeouts-connect (default 5s)
 -normalized-storage-webdav-timeouts-idle-connection duration
       normalized-storage-webdav-timeouts-idle-connection (default 10s)
```

(continues on next page)

```
-normalized-storage-webdav-timeouts-overall duration
       normalized-storage-webdav-timeouts-overall (default 35s)
 -normalized-storage-webdav-timeouts-response-header duration
       normalized-storage-webdav-timeouts-response-header (default 30s)
 -normalized-storage-webdav-upload-url string
       webdav storage for normalized, disable normalized if empty string (default
→"http://127.0.0.1:3333/uploads/")
 -normalized_storage string
       Normalized storage type: webdav, s3 (default "webdav")
 -storage-api-max-idle-conns-per-host int
       storage-api-max-idle-conns-per-host (default 20)
 -storage-api-timeouts-connect duration
       storage-api-timeouts-connect (default 5s)
 -storage-api-timeouts-idle-connection duration
       storage-api-timeouts-idle-connection (default 10s)
 -storage-api-timeouts-overall duration
       storage-api-timeouts-overall (default 35s)
 -storage-api-timeouts-response-header duration
       storage-api-timeouts-response-header (default 30s)
```

1.9. Appendices 117

CHAPTER 2

Operator's Guide

2.1 Web Interface

Use the web interface to interact with FindFace Security. To open the web interface, enter its address in the address bar of your browser, and log in.

Note: Request credentials from administrator.

The web interface has a highly intuitive and handy design and provides the following functionality:

- Search Databases.
- Real-time Face Identification.
- Dossier (only for users with operator privileges).
- · Video Wall.

2.2 Search Databases

FindFace Security allows you to search for faces in the following databases:

- Database of detected faces (the *Events* tab).
- Dossier database (the *Dossiers*). Contains face reference images.

To find a face in a database, navigate to the Search tab.

In this chapter:

- Search for Faces in Event List
- Search for Faces in Dossier List


2.2.1 Search for Faces in Event List

FindFace Security allows you to search the database of detected faces.

Note: You can access this database by navigating to the event list (the *Events* tab).

To find a face, do the following:

1. Navigate to the Search tab.

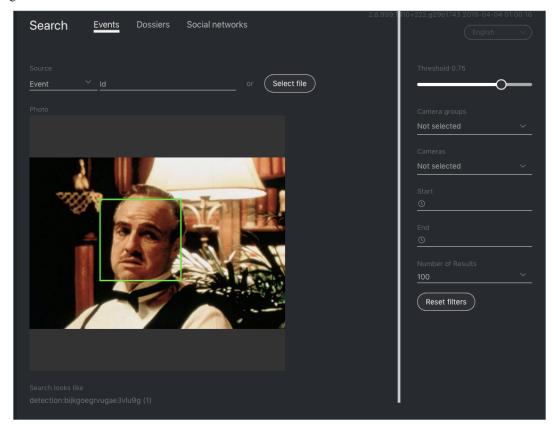

- 2. Specify a database to search: Events.
- 3. Upload a photo. It will be displayed in the *Photo* area. If there are multiple faces in the image, select the one you want.

Note: Instead of a photo, you can specify the ID of an event that features the face you want to find.

- 4. By default, the system searches for faces using the identification threshold 0.75. If necessary, set your own value using the *Threshold* filter.
- 5. (Optional) Specify a group of cameras, camera and a time period within which the event occurred.


- 6. Specify the maximum number of dossiers in the search results.
- 7. Click *Search*. You will see the search results appear below. For each face found, the matching confidence level is provided.

2.2.2 Search for Faces in Dossier List

FindFace Security allows you to search the database of dossiers containing face reference images.

To find a face, do the following:

1. Navigate to the Search tab.

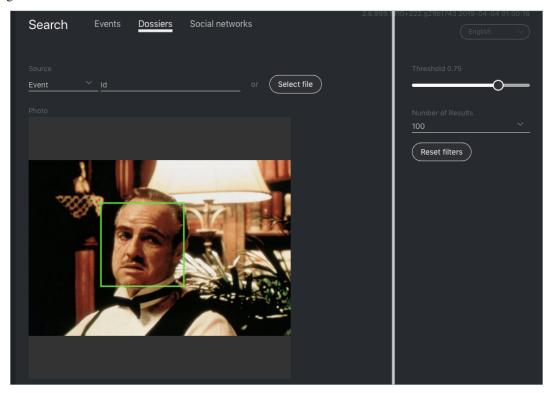

- 2. Specify a database to search: Dossiers.
- 3. Upload a photo. It will be displayed in the *Photo* area. If there are multiple faces in the image, select the one you want.

Note: Instead of a photo, you can specify the ID of an event that features the face you want to find.

- 4. By default, the system searches for faces using the identification threshold 0.75. If necessary, set your own value using the *Threshold* filter.
- 5. Specify the maximum number of dossiers in the search results.
- 6. Click *Search*. You will see the search results appear below. For each face found, the matching confidence level is provided.

2.2. Search Databases 121

2.3 Real-time Face Identification

To monitor the real-time face identification, go to the *Events* tab. The system can identify faces in both live video streams and archived videos. Besides monitoring, the *Events* tab also allows you to access the history of identification events.


Tip: Search for faces through the event database and dossier database on the *Search* tab.

In this chapter:

- View Identification Events
- Face Liveness and Face Features Recognition
- Event Ticket. Acknowledging Event
- Event Ticket. Face Search

2.3.1 View Identification Events

Once a face detected, you will see a notification in the event list.

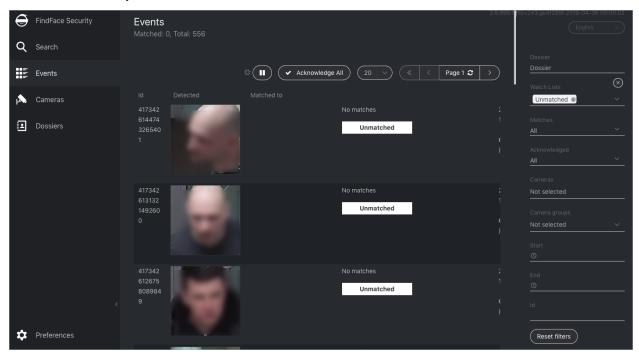


A notification can feature different pieces of information, depending on whether a detected face has a match in the database:

- Match not found: a normalized face image, detection date and time, the name of a camera group.
- Match found: a normalized face image, the photo from a dossier, the name of a person, similarity between faces, the comment from a dossier, the name of a dossier list, detection date and time, the name of a camera group.

Note: You can configure the system in such a way that you will get notifications only for the faces with a match.

Important: In order to pause the notifications thread, click up above the list of events.



When working with events, the following default filters may come in handy:

- *Dossier*: display events only for a selected dossier.
- Watch lists: display events only for a selected dossier category (watch list).

Note: To view only unmatched faces in the event list, select *Unmatched* in this filter.

- *Matches*: display events only with/without matches, or all events.
- Acknowledged: display only acknowledged/unacknowledged events, or all events.
- Cameras: display only events from a selected camera.
- Camera groups: display only events from a selected group of cameras.
- Start, End: display only events occurred within a certain time period.
- id: display an event with a given ID.


2.3.2 Face Liveness and Face Features Recognition

Depending on the system settings, you can see an estimation of face liveness and/or a result of such face features recognition as gender, age, emotions, glasses and/or beard.


The face liveness detector automatically spots fake faces and prevents photo attacks by distinguishing a live face from a face image.

The face feature recognition result is in the following format:

Face	Result format	Example
feature		
Age	Feature: age: number of years	age: 33
Gender	Result: male/female (feature: gender): algorithm confidence in result	female (gender): 0.95
Emo-	Result: angry/disgust/fear/happy/sad/surprise/neutral (fea-	happy (emo-
tions	ture: emotions): algorithm confidence in result	tions): 0.99
Glasses	Result: eye/sun/none (feature: glasses): algorithm confidence in result	none (glasses):
		0.87
Beard	Result: beard/none (feature: beard): algorithm confidence in result	none (beard):
		0.91

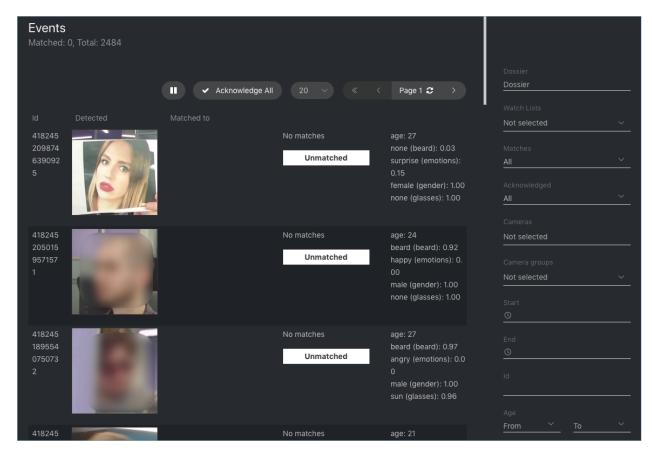


Filter events by face features and liveness when needed.

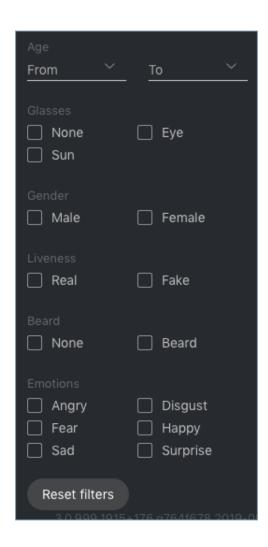


2.3.3 Event Ticket. Acknowledging Event

In order to navigate to an event ticket from the list of events, click on the face recognition result in a notification (*No matches* or the name of a matching person).

An event ticket contains the same data as a relevant *notification*. It also allows for acknowledging the event. To do so, click *Not accepted* to change the event aknowledgment status. Click *Save*.

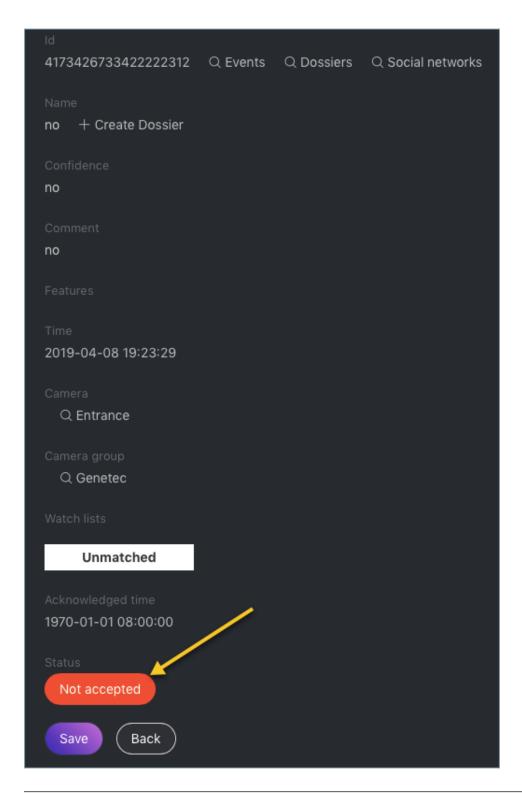


Tip: If a detected face has a match in the dossiers, you can navigate into a relevant one by clicking on the person's name in the event ticket.



2.3.4 Event Ticket. Face Search

FindFace Security allows you to search faces detected in video in the list of events and dossier database. To navigate from an event ticket to the search tab, click *Events* or *Dossiers* respectively.

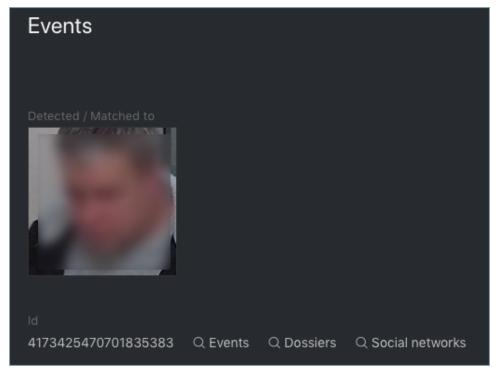

See also:

• Search Databases.

2.4 Dossier

The dossier database contains dossiers on the unwanted persons and VIP guests. A dossier has to contain one or several photos of a person and belong to a certain classification list (watch list).

In this section:


2.4. Dossier 127

- Create Dossier
- View Dossier

2.4.1 Create Dossier


To create a dossier, do the following:

- 1. Navigate to the *Dossiers* tab.
- 2. Click +.

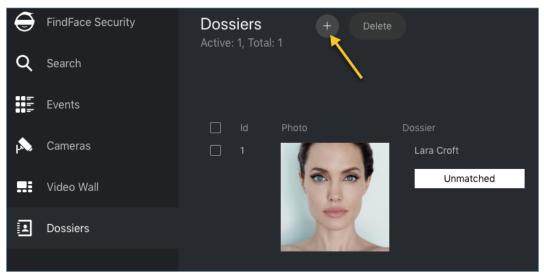

3. Attach a photo and specify the name of a person. If necessary, add a comment.

Important: A face in the photo must be of high quality, i.e. close to a frontal position. Photos that do not meet the requirement will be rejected with a detailed error description.

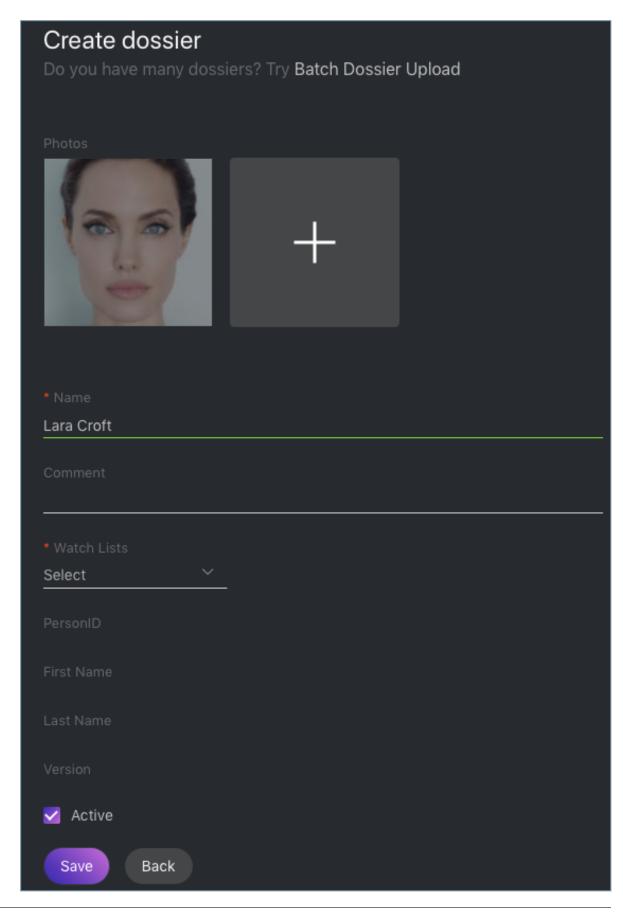

2.4. Dossier 129

4. From the Watch lists drop-down menu, select a classification list (or several lists, one by one) for the dossier.

Note: If you cannot find an appropriate watch list for the dossier, *create* a new one, or ask an administrator to do so.

- 5. Check Active. If a dossier is inactive, it is excluded from the real time face identification.
- 6. Click Save.

2.4.2 View Dossier

You can find all dossiers created in FindFace Security on the *Dossiers* tab. Use the *Watch lists* filter to filter dossiers by list.


2.5 Video Wall

FindFace Security allows basic video surveillance. The video image from cameras and/or video files can be displayed on the Video Wall.

Important: The Video Wall will be functional only upon a *GPU-based configuration*.

To display video on the Video Wall, do the following:

- 1. Navigate to the Video Wall tab.
- 2. Select one of the 4 predefined Video Wall layouts.

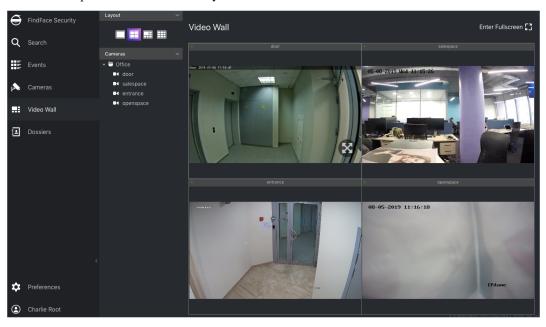


3. Drag-n-drop cameras of your choice to the Video Wall.

2.6 Mobile App

To interact with FindFace Security on the go, use the mobile app. The FindFace Security app is available on request for Android.


In the app, specify your login and password, as well as the FindFace Security URL address, and log in.

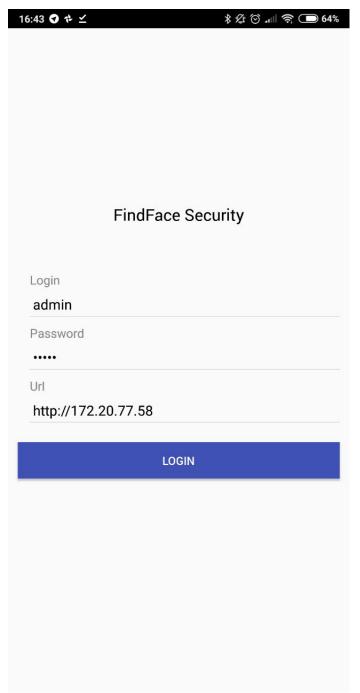

The mobile app has a highly intuitive and handy design and provides the following functionality:


• Search for faces in the event list and dossier database.

2.6. Mobile App

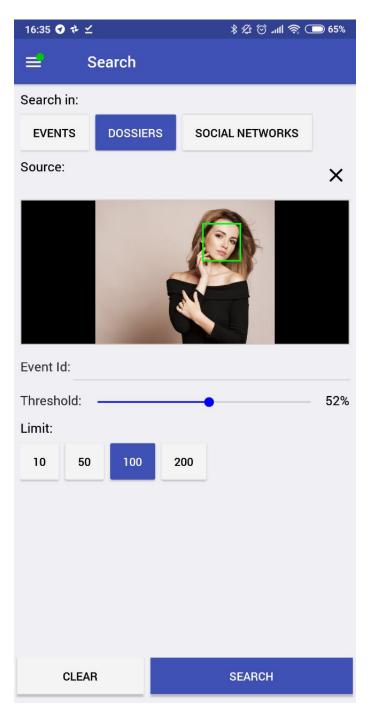


• Real time face identification in live streams and video files

Important: To receive push notifications of events in the mobile version, open a relevant watch list settings in the full version, and check *Require Event Acknoledgment* and *Enable Sound Alert*.

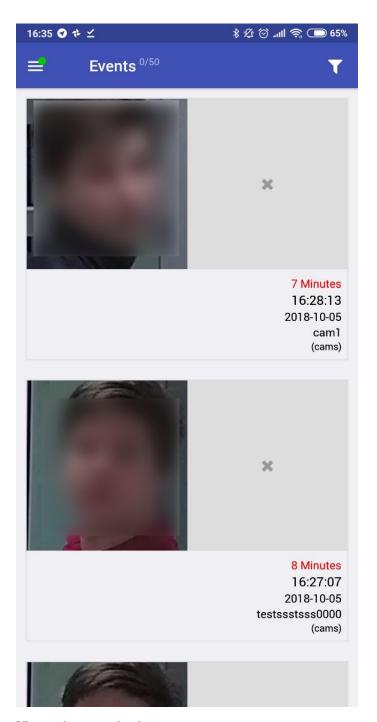

• View and create a dossier on a person.

2.6. Mobile App 133

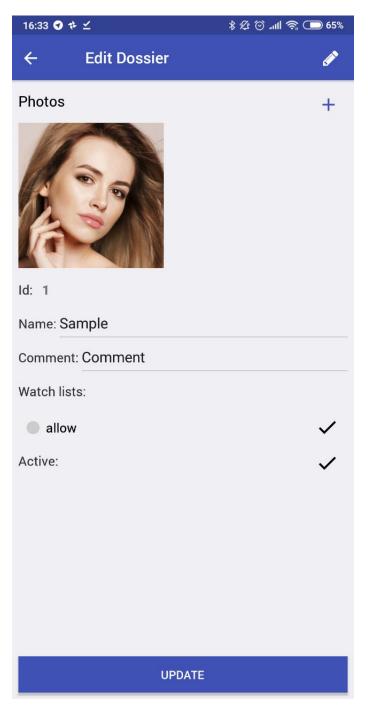

Working with the mobile app is similar to the full version.

Important: To access *Settings*, you need to enter a PIN code, 1234 by default.

CHAPTER 3


Integrations

This chapter is all about integration with FindFace Security. Integrate your system through HTTP API and webhooks, or check out our turnkey partner integrations.

3.1 HTTP API

Detailed interactive documentation on the FindFace Security HTTP API is available after installation at http://<ffsecurity_ip:port>/api-docs. Learn and try it out.

Tip: You can also find it by navigating to *Preferences -> Documentation* in the web interface.

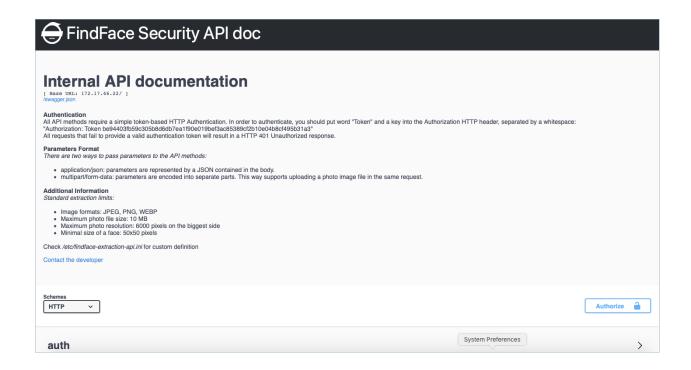

3.2 Webhooks

You can set up FindFace Security to automatically send notifications about certain events to a given URL. To do so, create and configure a webhook. In this case, when such an event occurs, FindFace Security will send an HTTP request to the URL configured for the webhook.

You can use webhooks for various purposes, for example, to notify a user about a certain event, invoke required behaviour on a target website, solve security tasks such as automated access control, etc.

In this section:


- · Configure Webhook
- · Webhook in Action

3.2.1 Configure Webhook

Important: You need Administrator privileges to create a webhook.


To create and configure a webhook, do the following:

- 1. Navigate to the Preferences tab. Click Webhooks.
- 2. Click +.

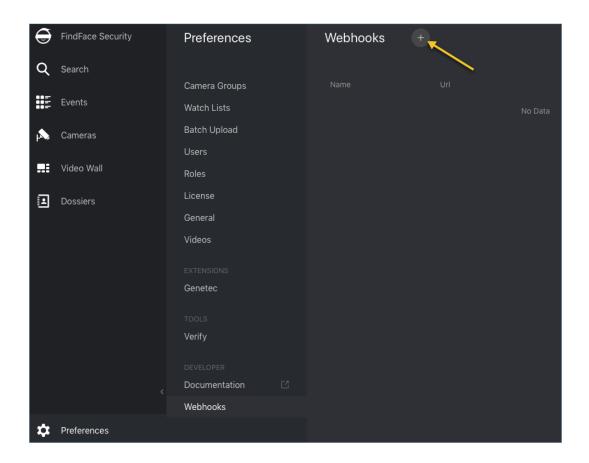

3. Specify the webhook title.

3.2. Webhooks

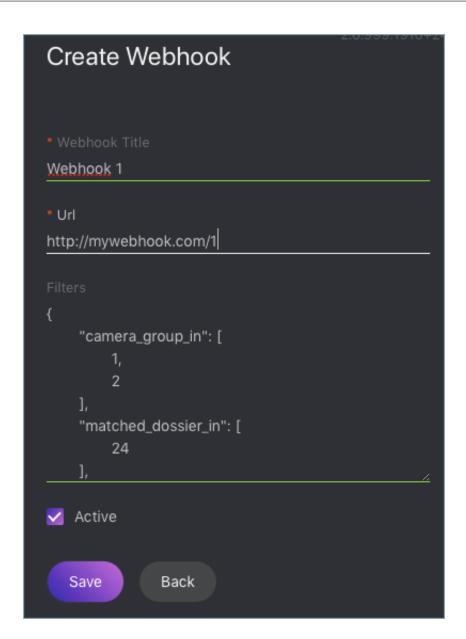

- 4. Specify URL to automatically send notifications to.
- 5. FindFace Security will be automatically sending notifications on events which match given filters. You can filter events by the following event parameters:
 - camera_group_in: camera group id, number.
 - matched_dossier_in: matched dossier id, number.
 - matched: event matched status (true or false), boolean.
 - camera_in: camera id, number.

Important: Use only filters which match your search needs. To turn off a filter, remove it from a webhook. Do not leave a filter empty ([]) as in this case the result of filtration will be empty as well.

Note: To get notifications about all matched events, pass only curly braces without any enclosed filters:

```
{}
```

Note: You can specify several values for each filter (except matched). In this case, the web hook will be triggered once one of the values from this filter has been matched. In the example below, you will get an event from the camera group 1 or 3 if a matched dossier is 12 or 25.

```
{
  "camera_group_in": [1, 3],
  "matched_dossier_in": [12,25]
}
```

- 6. Check Active.
- 7. Click Save.

3.2.2 Webhook in Action

Try out a webhook by capturing event notifications with a simple web server in Python:

```
from pprint import pprint
from aiohttp import web

async def handle(request):
    pprint(await request.json())
    return web.Response(status=200)

app = web.Application()
# for aiohttp v 3.x
# app.add_routes([web.post('/', handle)])

# for aiohttp v 2.x
app.router.add_post('/', handle)
web.run_app(app, port=8888)
```

If no filters are configured for a webhook, this web server will be getting notifications about each event that occurs in the system. The notifications have the following format:

```
======= Running on http://0.0.0.0:8888 =======

(Press CTRL+C to quit)

[{'acknowledged': True,
   'acknowledged_by': None,
   'acknowledged_date': '2019-04-09T12:29:23Z',
   'acknowledged_reaction': None,
   'camera': 2,
   'confidence': 0.9098,
   'created_date': '2019-04-09T12:29:23Z',
   'face': 'http://172.20.77.17/uploads/2019/04/09/event/122955_face_aT3ZZh.jpg',
```

(continues on next page)

3.2. Webhooks

```
'features': {'age': None,
               'beard': None,
               'emotions': None,
               'gender': None,
               'glasses': None,
               'liveness': None},
 'frame': 'http://172.20.77.17/uploads/2019/04/09/event/122955_image_3msdHH.jpg',
 'frame_coords_bottom': 981,
 'frame_coords_left': 1630,
 'frame_coords_right': 1911,
 'frame_coords_top': 701,
 'id': '4173669353687265180',
 'looks_like_confidence': None,
 'matched': True,
 'matched_dossier': 1,
 'matched_face': '4173665826982243136',
 'matched_lists': [1],
 'normalized_photo': 'http://172.20.77.17/uploads/2019/04/09/event/122955_face0_
→E638aW.png',
 'quality': -0.000158,
 'scores': {'direction_score': -2.62964,
             'frame_no': 800,
            'score': -0.000158435,
           'tracking_duration': 34000}}]
```

To view the webhook pulling status, execute:

```
sudo journalctl -u findface-security-webhook-updater.service
```

Success:

```
`Apr 09 16:02:28 ubuntu ffsecurity[1524]: INFO [-] hook 1 was pulled on http://172. \rightarrow20.77.70:8888`
```

Failure:

```
`Apr 09 15:59:02 ubuntu ffsecurity[1524]: INFO [-] While working on hook 1. 

-Exception occured: Cannot connect to host 172.20.77.70:8888 ssl:False [Connection. 

-refused]`
```

3.3 Partner Integrations

3.3.1 Genetec Security Center

FindFace Security integration with Genetec Security Center allows you to expand the capabilities of your Genetec-based security system with face recognition functionality.

Configure Integration

Integration with Genetec Security Center is implemented via the findface-genetec plugin. By default, the plugin is enabled, and the FindFace Security *Preferences* features the *Genetec* tab.

Note: If it is not so, open the ffsecurity configuration file, and check whether it features the enabled line INSTALLED_APPS.append('ffsecurity_genetec').

```
sudo vi /etc/ffsecurity/config.py
FFSECURITY_UI_CONFIG = {
    "event": {
        "features": {
            "f_gender_class": ["male", "female"],
            "age": {
                "f_age_gte": "",
                "f_age_lte": ""
            "f_emotions_class": ["angry", "disgust", "fear", "happy", "sad", "surprise
" ] ,
            "f_glasses_class": ["none", "eye", "sun"],
            "f_beard_class": ["none", "beard"],
            "f_liveness_class": ["real", "fake"],
    }
}
# integration plugins
INSTALLED_APPS.append('ffsecurity_genetec') # remove or comment out this line to_
-disable
```


Before getting started with the integration on the FindFace Security side, deploy the Genetec Web SDK and Media Gateway packages, and create an Alarm entity that will be triggered in Genetec Security Center when a face recognition event occurs in FindFace Security.

In this chapter:


- Configure Genetec Web SDK and Media Gateway
- Create Alarm in Genetec Security Center
- Configure Endpoints in FindFace Security
- Import Cameras from Genetec Security Center
- Create Watch Lists and Dossiers in FindFace Security

Configure Genetec Web SDK and Media Gateway

To enable and configure Web SDK, use Genetec Config Tool. For details, refer to *Security Center Administrator Guide* -> *Chapter 52: Role Types -> Web-based SDK configuration tabs*.

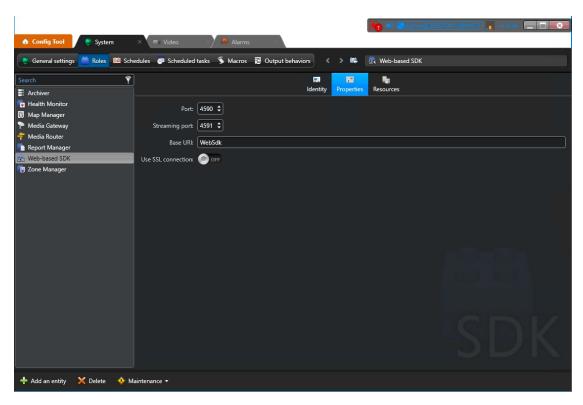


When enabling and configuring Media Getaway in Genetec Config Tool, refer to Security Center Administrator Guide -> Chapter 24: Video Deployment.

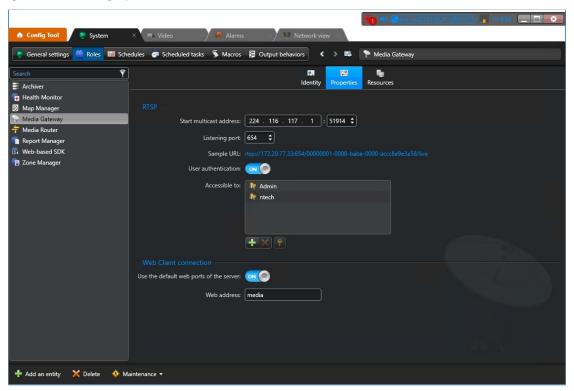

Important: Make sure that the firewall is configured so that the ports for the WebSDK and Media Gateway are open.

Create Alarm in Genetec Security Center


Create and configure a new Alarm entity in Genetec Config Tool. Refer to Security Center Administrator Guide -> Chapter 48: Alarms -> Creating Alarms for details.

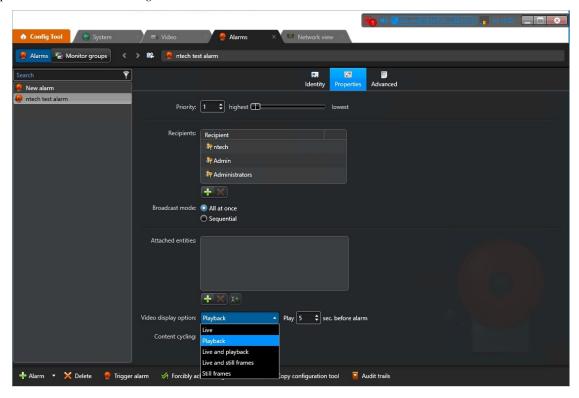

Tip: On the *Properties* tab, select the *Video display option* that suits your needs the best. Available options are *Live*, *Playback*, etc.

Tip: To enable alarm procedures and auto rotation of video right within the alarm pop-up window, enable *Content cycling*.


When configuring the integration in FindFace Security, you will have to enter the alarm logical id that is specified on the *Identity* tab.

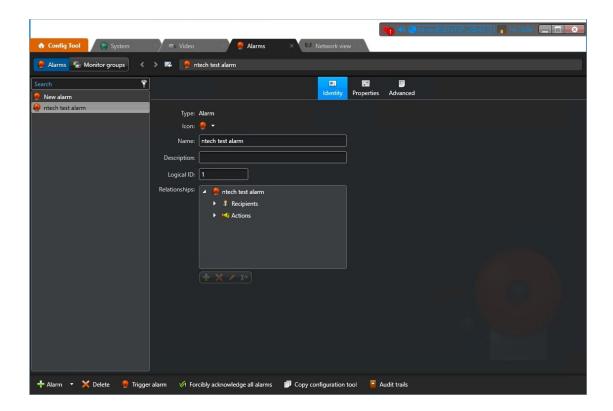

Configure Endpoints in FindFace Security

To establish connection between FindFace Security and Genetec Security Center, do the following:


1. Navigate to the *Preferences* tab. Click *Genetec*.

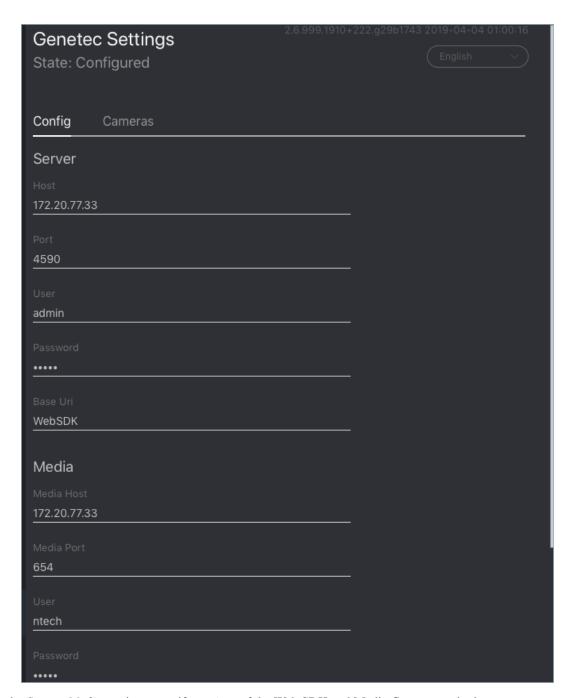

2. In the Server Media sections, specify settings of the Web SDK and Media Gateway endpoints.

Important: The ports for the WebSDK and Media Gateway need to be open.


3. In the *Ids* section, specify the *logical id* of the Alarm entity that will be triggered in Genetec Security Center when a face recognition event occurs in FindFace Security.

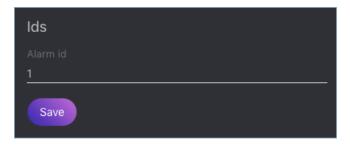


4. Click *Save*. If the connection to Genetec Security Center is successfully established, you will see the *State* change to *Configured*.

Import Cameras from Genetec Security Center

Once the connection to Genetec Security Center is established, import cameras. To do so, click *Cameras* on the *Genetec* tab. Click *Import*.

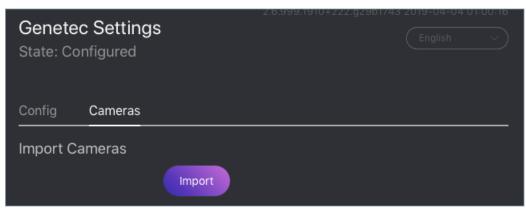

This action will create a group of cameras Genetec listing all the cameras from Genetec Security Center.

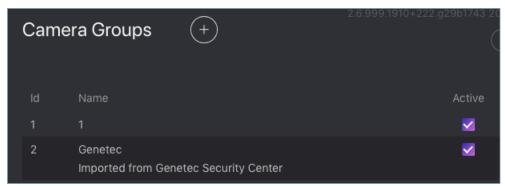

To view this list of cameras, navigate to the *Cameras* tab on the FindFace Security navigation bar. If you want to exclude a camera from face recognition, simply deactivate it in the list.


Create Watch Lists and Dossiers in FindFace Security

After you have configured the endpoints and camera settings, finish the integration by creating a *dossier database*. Notifications about face recognition events will be automatically sent to Genetec Security Center. See *Notifications in Genetec Security Center*.

Notifications in Genetec Security Center

Each face recognition event from a Genetec camera, that has a match with a dossier, triggers a relevant alarm in Genetec Security Center. Every alarm triggered by FindFace Security is associated with a relevant camera (source of the face recognition event) so you can instantly watch live or playback video within the Alarm Monitoring task in Genetec Security Desk. FindFace Security also utilizes Alarm Procedures to provide a user with additional content related to the alarm, such as:

- · face detected in video
- matching face from the dossier database
- person's name and comment from the dossier
- matching confidence
- · watch list's name
- · full frame

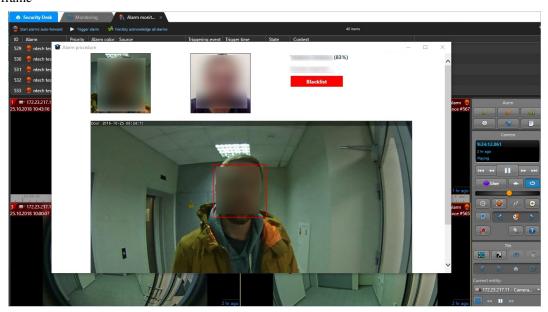

After you receive a face recognition alarm, process it as you usually do with other alarms in Genetec Security Center.

3.3.2 Axxon Next

FindFace Security integration with Axxon Next allows you to detect and identify faces in video streams from an Axxon-based security system.

Important: One FindFace Security instance supports interaction with only one Axxon Next server.

Integration with Axxon Next is implemented via the ffsecurity_axxon plugin.

To configure the FindFace Security integration with Axxon Next in Ubuntu, do the following:

1. Activate the plugin by appending the INSTALLED_APPS.append('ffsecurity_axxon') line to the /etc/ffsecurity/config.py configuration file.

```
sudo vi /etc/ffsecurity/config.py
...
# integration plugins
INSTALLED_APPS.append('ffsecurity_axxon') # remove or comment out this line to_
disable
```

2. Add the FFSECURITY->AXXON section to the configuration file. Fill it out as shown in the example below. In the api parameter, specify the IP address of the Axxon Next server that will provide FindFace Security with Axxon API and HLS-archive streams. In the rtsp parameter, specify the common segment of Axxon video stream addresses.

```
FFSECURITY = {
  'AXXON': {
    'api': 'http://user:password@example.com/',
    'rtsp': 'rtsp://user:password@example.com:554/',
    }
}
```

3. (Optional). If facial recognition events are required to contain video from Axxon Next, edit the FFSECURITY_UI_CONFIG section as shown in the example below.

```
FFSECURITY_UI_CONFIG = {
  'dossier': {
    'video': True,
  }
}
```

4. Create representations of Axxon Next cameras in FindFace Security (see *Camera Management*). A camera representation URL must be specified in the format axxon:<friendlyNameLong>, where friendlyNameLong is a camera name on the Axxon Next server. Find out this name in the Axxon user interface, or via Axxon API by executing:

```
curl http://user:password@127.0.0.1/video-origins/

{
    "OLOLOE-DEV/DeviceIpint.vhod_1/SourceEndpoint.video:0:0" : {
        "friendlyNameLong" : "vhod_1.Vhod_1",
        "friendlyNameShort" : "Vhod_1",
        "origin" : "OLOLOE-DEV/DeviceIpint.vhod_1/SourceEndpoint.video:0:0",
        "state" : "signal_restored"
    }
}
```

For the camera from the example above, URL must be specified as axxon: vhod_1. Vhod_1.

The configuration is now finished. If the integration is properly configured, FindFace Security will be detecting and identifying faces in Axxon Next video streams, and facial recognition events will be featuring video clips from Axxon Next (upon relevant settings).